



## ENGLISH

### ELECTRIC APPLIANCE FOR HEATING LIQUIDS (KETTLE) VT-7059 W

The liquid heating appliance (kettle) is intended for boiling drinking water only.

#### DESCRIPTION

1. Kettle body
2. Kettle mesh filter
3. Lid opening button
4. Lid
5. On/Off button - 0/I+
6. Handle
7. Water level scale
8. Cord storage
9. Base

#### NOTES:

**\* Before using the kettle, make sure that the on/off button (5) is not closed by any foreign objects, and the lid (4) is tightly closed.**

**\* Before operating the kettle from the base, make sure that the kettle is switched off and the on/off button (5) is in position «0».**

#### ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

#### SAFETY MEASURES

Before using the unit, read this manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual.

Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Use the unit for its intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit body.

• The power cord is equipped with a «europlug»; plug it into the socket with a grounding contact.

• To fill the kettle with water, take it off the base (9) and open the lid (4) by pressing the lid opening button (3).

• Fill the kettle with water not below the minimal mark «MIN» and not above the maximal mark «MAX». Determine the water level using the water level scale (7).

• Close the lid (4) and put the full kettle on the base (9).

• Set the on/off button (5) to the «I» position to switch the kettle on; the kettle flask illumination will go out.

• Once water starts boiling, the kettle will be switched off automatically and the illumination of the kettle flask will go out. Pour water out and repeat the water boiling procedure 2-3 times.

**Notes:**

**\* Before using the kettle, make sure that the on/off button (5) is not closed by any foreign objects, and the lid (4) is tightly closed.**

**\* Before operating the kettle from the base, make sure that the kettle is switched off and the on/off button (5) is in position «0».**

#### ATTENTION!

To avoid burns by hot steam, do not bend over the kettle spout it is operating.

#### USAGE

Before using the unit, read this manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual.

Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Use the unit for its intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit body.

• The power cord is equipped with a «europlug»; plug it into the socket with a grounding contact.

• To avoid the risk of fire, do not use adapters for connecting the kettle to the mains.

• When removing the kettle from the base (9), make sure that it is switched off and the button (5) is in the «0» position.

• After switching the kettle off, wait for 10-20 seconds, then you can switch it on again for re-boiling.

• If you accidentally switch the kettle on, but the water level appears to be below the minimal mark, the automatic thermal switch will be on and the kettle will be switched off automatically. In this case take the kettle off from the base (9), let it cool down for 10-15 minutes, then fill it with water and switch it on, the kettle will work in normal mode.

**Note:**

**\* There is the cord storage (8) on the reverse side of the base (9). You can adjust the optimal power cord length by folding it in the cord storage in a corresponding way.**

#### CLEANING AND CARE

Before cleaning the unit, disconnect the unit from the mains, pour out water and let the kettle cool down.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not immerse the kettle and the base into water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Regularly clean the meter filter (2) from dirt. Open the lid (4) by pressing the lid opening button (3). Turn the kettle upside down towards you, press the upper middle part of the filter from the spout side and take the filter out. Carefully wash the filter under a jet of water after having slightly cleaned it with a soft brush. Install the filter back to its place. To do this, first install the lower part of the filter into the socket from the kettle flask side and then press the upper part of the filter until it is fixed.

**Descaling**

• Scale appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.

• Ensure that the water level in the kettle is not below the minimal mark «MIN» and not above the maximal mark «MAX». If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• To avoid burns, do not bend over the kettle spout it is operating.

• Do not touch the lid whilst water is boiling.

• Do not touch hot surfaces of the kettle, take it only by the handle.

• Be careful while carrying the kettle filled with boiling water.

• Do not remove the kettle's handle from the base. If you need to take the kettle off, switch it off first, setting the on/off button to the position «0» and then remove it from the base.

• Unplug the kettle base before cleaning and when you are not using the kettle. Never pull the power cord when disconnecting the base from the mains; take the power plug and carefully remove it from the base.

• To avoid electric shock, do not immerse the unit and the base into water or any other liquids.

• Do not wash the kettle and base in a dishwashing machine.

• This unit is not intended for usage by children. Place the unit out of reach of children during the operation and cooling down.

• Do not allow children to touch the unit body and the power cord during the unit operation.

• The unit is not intended for usage by physically or mentally disabled persons, learning children, or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

**Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

• Clean the kettle and the power plug and the kettle body integrity periodically.

• Never use the kettle if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center from the contact address listed in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

#### THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

#### BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

**There may be water spots in the kettle, this is normal, as the unit has gone through factory quality control.**

– Unpack the kettle and remove any stickers that can prevent unit operation.

– Check the unit for damages; do not use it in case of damages.

– Make sure that the unit operating voltage corresponds to the voltage of your mains.

– Make sure that the unit is switched off and the on/off button (5) is in the «0» position (lower position of the button (5)).

– Insert the power plug into the mains socket.

– To fill the kettle with water, take it off the base (9) and open the kettle lid (4) by pressing the lid opening button (3).

– Fill the kettle with water, take it off the base (9) and open the kettle lid (4) by pressing the lid opening button (3).

– Make sure that the kettle is closed tightly.

– Turn the kettle on by pressing the on/off button (5).

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

– Make sure that the kettle is closed tightly.

