


Display

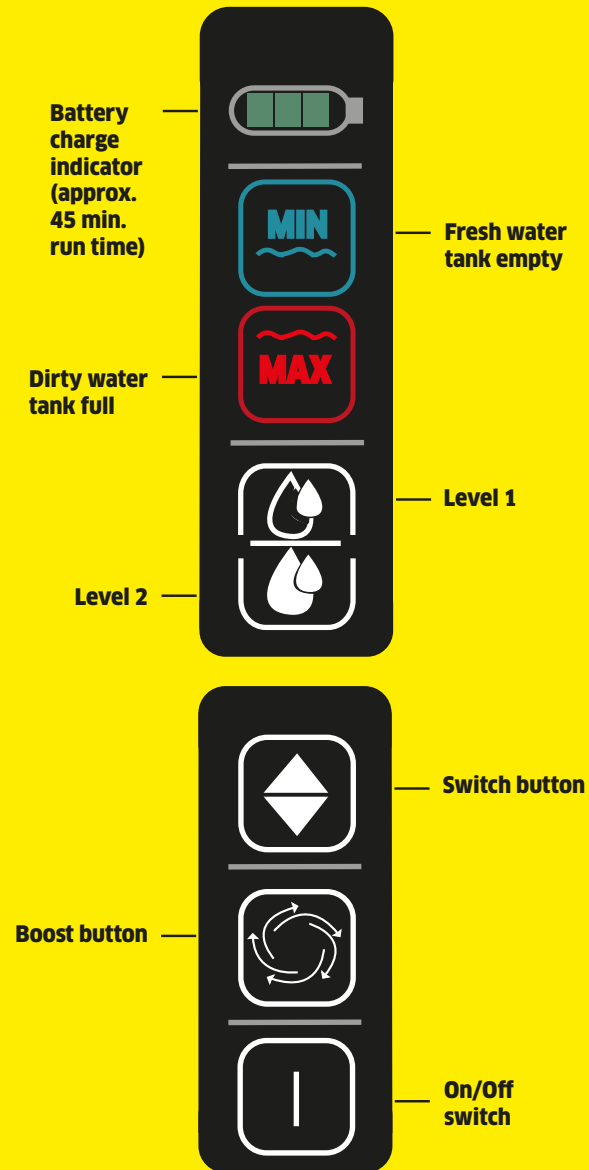

Scan code for videos




www.kaercher.com/fc7

59694350 (10/20)

KÄRCHER

FC 7 CORDLESS QUICKSTART GUIDE

First assembly

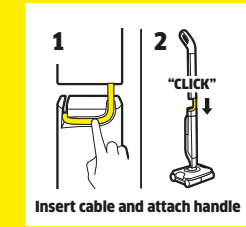


First steps before use

1. Charge (max. 4h)
2. Fill fresh water tank
3. Fill in detergent (1/2 cap)
4. Insert
5. Put device upon the tank
6. For usage of the very first time pre-moisten rollers with water
7. Press On/Off button
8. Press boost button until rollers are wet



Switch cleaning mode





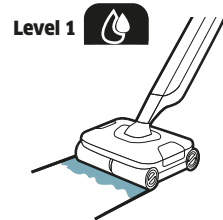


Activate boost function








Cleaning and storing



Step 1: Clean the device

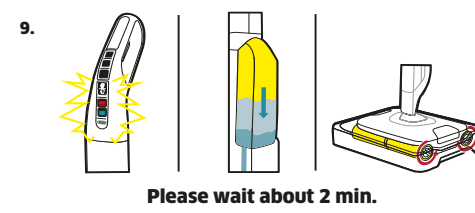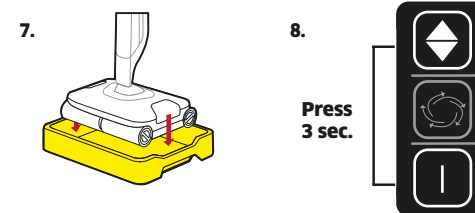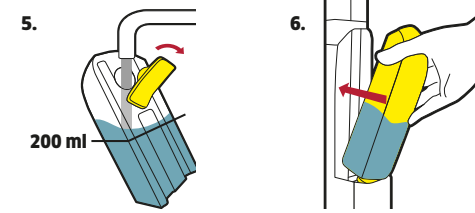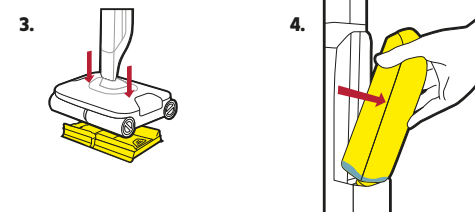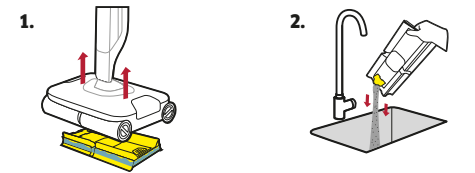

Step 2: Store the device

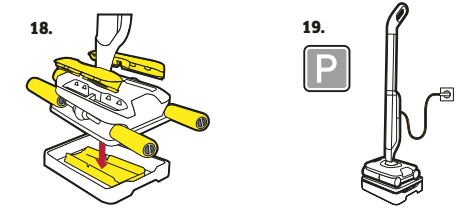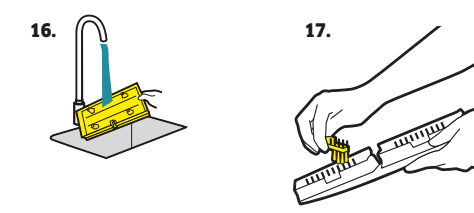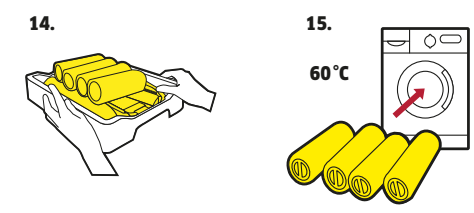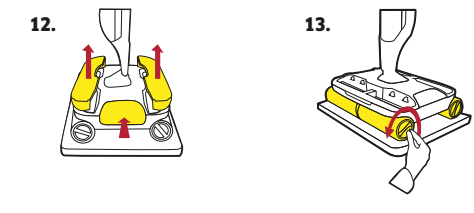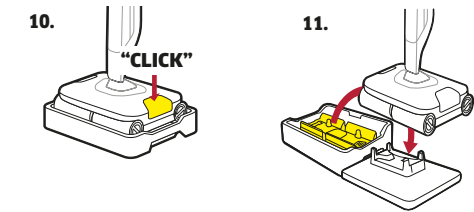

Refill fresh water tank

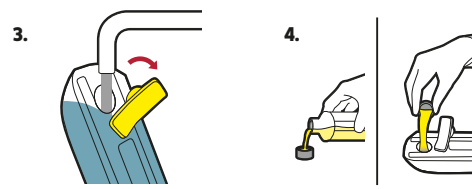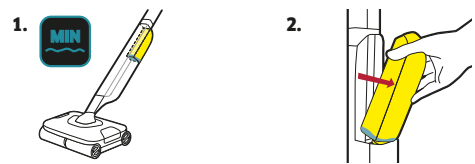

Empty dirty water tank

