


Junction boxes

IMT35160
IMT35161



Installation


1

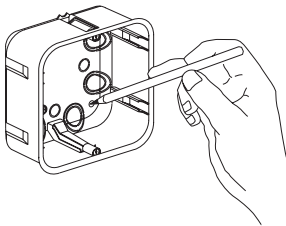


2




3

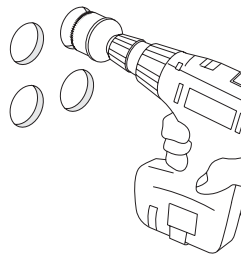


4

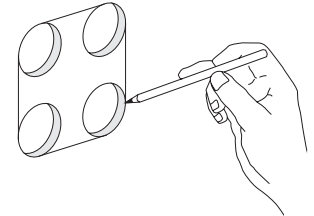


5

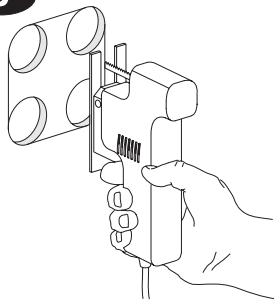


6

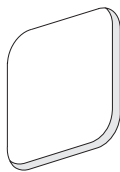


7

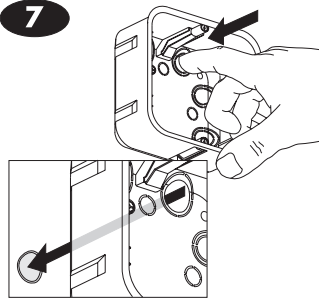


8

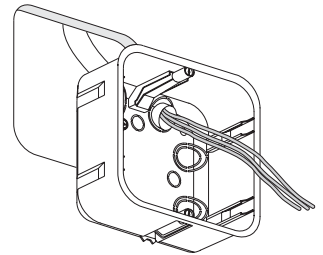


9

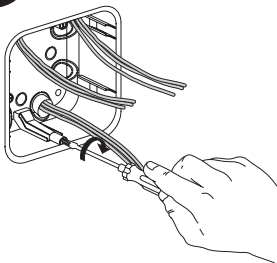


10

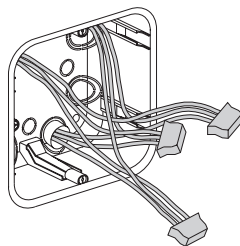

11

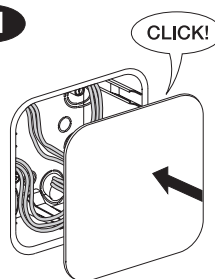

12

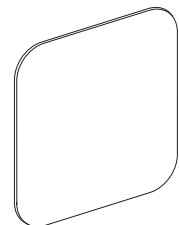

13

