

GE-CG 18/100 Li-Solo

Item No.: 3410313

Ident No.: 21010

Bar Code: 4006825652710

The Einhell GE-CG 18/100 Li-Solo cordless grass and shrub shears is a high-performance member of the clever Power X-Change family. The grass cutting blade is perfectly designed for cutting lawn edges (100 mm). The laser-cut and diamond-ground shrub shears blades are ideally suited for trimming hedges and bushes. The tools are easy to change over without the need for any other tools. The soft grip provides a perfect grip and ergonomics during use. The covered gearing housing provides protection during use and when cleaning against contact with parts which are lubricated with gear oil. One 18 V PXC battery is needed for operation. The battery and charger are not included in the scope of this delivery – they are available separately.

-CHANGE

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Covered gearbox protecting customer to get in touch with gear oil
- Grass cutting blade used for perfect cutting result on edges
- Shrub shears blade for hedge and bush care
- Easy blade change without tools
- Laser-cut and diamond grinded blades
- Soft grip ensuring perfect grip and ergonomics
- Supplied without battery and charger (available separately)

Technical Data

Cutting width with grass shear knife
Cutting length with shrub cutting knife
Cutting thickness with shrub cutting
8 mm

- Spacing between teeth of shrub cutting 8 mm knife

Logistic Data

- Product weight 1.06 kg- Gross weight single packaging 1.25 kg

- Dimensions single packaging 350 x 115 x 137 mm

- Pieces per export carton 6 Pieces- Gross weight export carton 8.41 kg

- Dimensions export carton 370 x 365 x 290 mm - Container quantity (20"/40"/40"HC) 3780 | 8064 | 9216







 
















Available as special accessories



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory

Bar Code: 4006825644197

Einhell Accessory

Einhell Accessory



2x 3,0Ah & 30min PXC Kit PXC-Starter-Kit Item No.: 4512098 Bar Code: 4006825646986 Einhell Accessory

Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369



18V 4,0Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

Battery-Running-Times

| One Battery for All | trimming ¹ | |
|---------------------|-----------------------|--|
| | (min.) | |
| 1.5 Ah | 180 | |
| 2.0 Ah | 240 | |
| 2.5 Ah | 300 | |
| 3.0 Ah | 360 | |
| 4.0 Ah | 480 | |
| 5.2 Ah | 650 | |
| 6.0 Ah | 720 | |

Test setup:

1) -

