







GE-CG 18/100 Li T-Solo

Item No.: 3410310

Ident No.: 21010

Bar Code: 4006825652109

The Einhell GE-CG 18/100 Li T-Solo cordless grass and shrub shears is a high-performance member of the clever Power X-Change family. The grass cutting blade is perfectly suited for cutting lawn edges (100mm), as are the laser-cut and diamond-ground shrub shears blades for bushes and hedges (200mm). No additional tools are needed for changing the tools. The soft grip provides a perfect grip and ergonomics during use. The product is supplied complete with a telescopic extension for enhanced ergonomics. The covered gearing housing provides protection against accidental contact with the gear oil. One 18 V PXC battery is needed for operation. The battery and charger are not included in the scope of this delivery – they are available separately.

WER CHANGE

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Covered gearbox protecting customer to get in touch with gear oil
- Grass cutting blade used for perfect cutting result on edges
- Shrub shears blade for hedge and bush care
- Easy blade change without tools
- Laser-cut and diamond grinded blades
- Incl. telescopic-tube for extra ergonomic operation
- Soft grip ensuring perfect grip and ergonomics
- Supplied without battery and charger (available separately)

Technical Data

Cutting width with grass shear knife
Cutting length with shrub cutting knife
Cutting thickness with shrub cutting
8 mm

- Spacing between teeth of shrub cutting 8 mm knife

Logistic Data

- Product weight 0.7- Gross weight single packaging 2.85 kg

- Dimensions single packaging 935 x 190 x 133 mm

- Pieces per export carton- Gross weight export carton4 Pieces11.43 kg

- Dimensions export carton 945 x 395 x 284 mm - Container quantity (20"/40"/40"HC) 952 | 1960 | 2240























Available as special accessories



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory

Bar Code: 4006825644197

Einhell Accessory

Einhell Accessory



2x 3,0Ah & 30min PXC Kit PXC-Starter-Kit Item No.: 4512098 Bar Code: 4006825646986 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369



18V 4,0Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

Battery-Running-Times

	₩
One Battery for All	trimming ¹
	(min.)
1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	360
4.0 Ah	480
5.2 Ah	650
6.0 Ah	720

Test setup:

1) -

