

CONSEILS DE SÉCURITÉ

Pour votre sécurité, cet appareil est conforme aux normes et réglementations applicables (Directives Basse Tension, Accessoires de protection contre les décharges électrostatiques, Environnement...).

Assurez-vous que le courant d'alimentation ne soit jamais en contact avec les parties chaudes de l'appareil.

Vérifiez que la tension de votre installation électrique correspond à celle de votre appareil. Toute erreur de branchement peut causer des dommages irreversibles non couverts par la garantie.

Pour une protection supplémentaire, l'installation d'un dispositif à courant résiduel (RCD) ayant un courant de fonctionnement résiduel nominal n'existant pas 30 mA est conseillée dans le circuit électrique alimentant la salle de bain. Demandez conseil à l'installateur.

Le raccordement à la terre doit être effectué par un électricien.

Lorsque l'appareil est connecté à la terre, le cas échéant, la chaleur.

L'installation de l'appareil est utilisée doit toutefois être conforme aux normes en vigueur dans votre pays.

ATTENTION: ne pas utiliser cet appareil près des baignoires, douches, lavabos ou autres récipients contenant de l'eau.

Lorsque l'appareil est utilisé dans une salle de bain, débranchez-le après usage, car la proximité de l'eau représente un danger, même lorsque l'appareil est éteint.

Pour les autres pays non soumis à la réglementation de l'UE (C): Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus et des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances, s'ils ont reçu un encadrement ou des instructions concernant l'utilisation de l'appareil en toute sécurité et comprennent les risques encourus. Les enfants ne doivent pas jouer avec l'appareil. Les enfants ne doivent pas nettoyer l'appareil ni s'occuper de son entretien sans surveillance. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.

Si le câble d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après vente ou des personnes de qualification similaire afin d'éviter un danger.

N'utilisez pas l'appareil et contactez un Centre Service Agréé si : votre appareil est tombé, s'il ne fonctionne pas normalement.

L'appareil est équipé d'un système de sécurité thermique. En cas de surchauffe (d'où par exemple à l'enclenchement de la grille arrière), l'appareil s'arrête automatiquement.

L'unité doit être débranchée : avant le nettoyage et l'entretien, en cas d'anomalie de fonctionnement, des retours ou de l'odeur d'huile.

Ne pas utiliser l'appareil si le câble est endommagé.

Ne pas immerger ni passer sous l'eau, même pour nettoyer.

Ne pas tenir avec les mains humides.

Ne pas débrancher en tirant sur le cordon, mais tirer par la prise.

Ne pas utiliser de prises défectueuses.

Ne pas nettoyer avec des produits abrasifs ou corrosifs.

Ne pas utiliser à température inférieure à 0 °C et supérieure à 35 °C.

GARANTIE

Votre appareil est destiné à un usage domestique seulement. Il ne peut être utilisé à des fins professionnelles. La garantie devient nulle et invalide en cas d'utilisation incorrecte.

PARTICIPONS À LA PROTECTION DE L'ENVIRONNEMENT!

① Veuillez respecter les normes matériau recyclables ou recyclables. Cet appareil est également disponible sur notre site Internet www.rowenta.com.

EN

Read the instructions carefully as well as the safety guidelines before use.

Safety

For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).

The skin must not come into contact with the skin.

The voltage cord never comes in contact with the floor or the wall.

Check that the voltage of your electrical supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

When the appliance is connected to the water, always turn off the water tap with the stand, if any, or heat-resistant, rubber flat surface.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stand by function and contact an Authorised Service Centre:

• It does not work.

• The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat release cord is blocked), the dryer will stop automatically contact the After-Sales Service.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For children subject to EU regulations (C): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

</

