


※ Exploding view

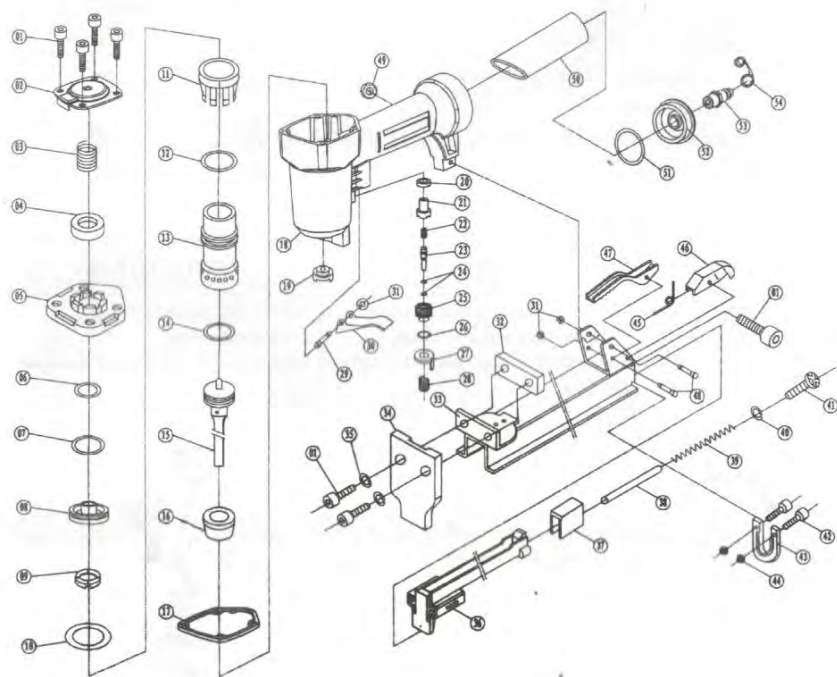

6

※ Spare part list

No.	Description	No.	Description	No.	Description
1	Bolt M5×20	19	Rubber washer	37	Pusher
2	Exhaust cap	20	Rectangle washer 17×7.2×3.0	38	Guide slip
3	Compressed spring	21	Trigger Valve Guide	39	Spring
4	Rectangle washer 16×8×2.6	22	Compressed spring	40	Spring washer
5	Cylinder cover	23	Trigger Valve Pipe	41	Bolt M4×4
6	O ring 11.7×2.4	24	O-ring 2.5×1.5	42	Bolt M4×8
7	O ring 26.2×2.4	25	Trigger Valve Seat	43	Fix stand
8	Head value	26	O-ring 11.2×2.0	44	Nut M5
9	Washer	27	Safety	45	Spring
10	O ring 21.3×3.0	28	Compressed Spring	46	Release latch
11	Collar	29	Step Pin	47	Lever latch
12	O ring 30.2×2.65	30	Trigger	48	Fixed slip
13	Cylinder	31	Snap washer	49	Nut M5
14	O ring 18×2.65	32	Spacer	50	Rubber handle
15	Main piston	33	Fixed magazine	51	O ring 35.5×2.3
16	Bumper	34	Driver Guide	52	End cap
17	Sealing washer	35	Washer	53	Air inlet plug
18	Gun body	36	Fixed magazine	54	Air Plug Case

Note: Please contact with us if customer need to know parts material .

If you need spare parts of this model, pls feel free to contact us or the distributor where you bought this tool. Tks!

7