

US UK

### Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

### OS support

Windows XP/Vista/Win7/Win8/Win10

### How to plug in

Plug type C cable to USB cable with keyboard and PC, keyboard is plug and play, no need driver.

### Key Function Introduction

FN key work with other keys

1. FN + [1!] = F1
2. FN + [2@] = F2
3. FN + [3#] = F3
4. FN + [4\$] = F4
5. FN + [5%] = F5
6. FN + [6^] = F6
7. FN + [7&] = F7
8. FN + [8\*] = F8
9. FN + [9()] = F9
10. FN + [0] = F10
11. FN + [-\_] = F11
12. FN + [=+] = F12
13. FN + [I] = Insert
14. FN + [I]} = DEL

15. FN+ [;:] =Home
16. FN+ ["] =End
17. FN+ [.->] =PgUp
18. FN+ [/?] =PgDn
19. FN+ [A] = Left arrow key
20. FN+ [W] =Up arrow key
21. FN+ [S] = Down arrow key
22. FN+ [D] = Right arrow key
23. FN + [ESC] = `~
24. FN+ESC Press and hold for 3 seconds for back to factory setting.

### Backlight setting

FN+ [Alt\_R] : Go with the stream, Clouds fly, Winding Paths, The trial of Light, Breathing, Normally on, Pass without Trace, Ripple Graff, Swift action ,Digital Times ,Flowers blooming

FN+ [M] : Adjust lighting brightness (Total 5 levels).

FN+ [,<] : Adjust lighting speed(Total 5 levels).

FN + [Spacebar] : Entering backlight color selecting mode by pressing FN + [Spacebar], [Spacebar] will keep flickering between all RGB colors. If not, then this backlight mode is not supported (The Trial of Light & Flowers Blooming are not available for this DIY mode). Next, press the key of the color you want to set. Then, all backlight modes will be in that color.

FN+WIN: To Lock Windows key , repeat to unlock.

### FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



REDRAGON  
ANIVIA  
MECHANICAL GAMING KEYBOARD

Mechanical Gaming Keyboard Operating Instructions