



www.rowenta.com

18200739

1. GENERAL DESCRIPTION

- A. Tong
 - B. 6 positions LED display
 - C. +/- button to reduce/increase temperature
 - D. ON/OFF switch
 - E. Smoothing plates
 - F. Power cord
 - G. Power supply cable
 - H. Lock System (to lock and unlock the tongs)
 - I. Evaporation system
 - J. IONIC system
- 2. SAFETY INSTRUCTIONS**
- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
 - The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the power cord never comes into contact with the hot parts of the appliance.
 - Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.
 - Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
 - When the appliance is connected to the power supply, never leave it unattended.
 - Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
 - The installation of the appliance and its use must however comply with the standards in force in your country.
 - **WARNING:** do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Store the power plug and contact an Authorised Service Centre if:
 - You suspect your plug is faulty;
 - It does not work correctly;
 - The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat grill is blocked), the appliance will stop automatically: contact the After-Sales Service.
 - The appliance must be unplugged:
 - Before cleaning and maintenance procedures;
 - if it is not working correctly;
 - if you suspect the cord is faulty;
 - Do not immerse or put under running water, even for cleaning purposes.
 - Do not hold the appliance by the casing, which is hot, but by the handle.
 - Do not hold the appliance by the casing, which is hot, but by the handle.
 - Do not use any electrical extension lead.
 - Do not clean with abrasive or corrosive products.
 - Do not use at temperatures below 0°C and above 35°C.

GUARANTEE:

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

3. BRINGING INTO SERVICE

- Lock System (Fig1): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front. - Your appliance will heat up quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use.
- Pull the plug.
- Set the ON / OFF switch to position 1.
- Select the ideal temperature for your hair using the +/- (fig. 2) buttons: press the - button to reduce the temperature or the + button to increase it. The selected temperature is displayed.
- After use: close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE

Use on dry hair:
Hair must be completely clean and dry (not slightly moistened).

• Do not use the appliance on synthetic hair (wig extensions, etc.).

• Form a small lock a few centimetres in width, comb it and place it between the plates. Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.

• Wait for the smoothed hair to cool down before styling.

Use on damp hair :

WARNING: Do not place your hands over the evaporation holes.

• Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.

• To use on clean, towel-dried and combed hair, (fig. 3)

• Form a small lock a few centimetres in width, comb it and place it between the plates. Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.

• During operation, do not worry if you hear a slight crackling or if you see steam; it is only water that evaporates from your hair.

HAIRDRESSER'S TIPS:

• Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

• To avoid streaks along the lengths, work using a smooth and uninterrupted movement.

• To highlight, apply hair setting lotion before smoothing.

Use on wet hair: we recommend you use the straighteners at a temperature of 170° or lower.

5. MAINTENANCE

CAUTION! Always unplug your appliance and allow it to cool before cleaning it. To clean the appliance, unplug it and then wipe with a damp cloth and dry with a dry cloth.

6. ENVIRONMENT PROTECTION FIRST!

① Your appliance contains valuable materials which can be recovered or recycled.

② Leave it at a local civic waste collection point.

7. TROUBLESHOOTING

You're not getting the results you're getting from your straightener:

• Press the temperature plus button more firmly against your hair section.

• Reduce the temperature using the +/- button.

• The LED flashes with no indication.

• There is a fault in the appliance. Please take it to an officially approved service centre.

• The plate isn't hot.

• This is quite normal; the straightener is fitted with a mobile plate to get better results from your straightener.

These instructions are also available on our website www.rowenta.com

1. DESCRIPTION GENERALE

- A. Pinces
- B. LED Display 6 positions
- C. Bouton +/- pour diminuer/augmenter la température.
- D. Bouton marche/arrêt
- E. Plaques lissantes
- F. Système ionique
- G. Cordon d'alimentation
- H. Lock System (verriegelung et déverrouillage de la glâttete)
- I. Système d'évaporation
- J. Système «IONIC»

2. CONSEILS DE SECURITE

- Pour votre sécurité, cet appareil est conforme aux normes et réglementations applicables (Directives Basse Tension, Compatibilité Electromagnétique, Environnement...).
- Les accessoires de l'appareil deviennent très chauds pendant l'utilisation. Evitez le contact avec la peau. Assurez-vous que le cordon d'alimentation ne soit jamais en contact avec les parties chaudes de l'appareil.
- Vérifiez que la tension de votre installation électrique correspond à celle de votre appareil. Toute erreur de branchement peut causer des dommages irréversibles non couverts par la garantie.

- Pour une protection supplémentaire, l'installation d'un dispositif à courant résiduel (RCD) ayant un courant de fonctionnement résiduel nominal n'existant pas 30 mA est conseillée dans le circuit électrique alimentant la salle de bain. Demandez conseil à l'installateur.

- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- The installation of the appliance and its use must however comply with the standards in force in your country.

- **WARNING:** do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Store the power plug and contact an Authorised Service Centre if:
 - You suspect your plug is faulty;
 - It does not work correctly;

- The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the heat grill is blocked), the appliance will stop automatically: contact the After-Sales Service.

- The appliance must be unplugged:
 - Before cleaning and maintenance procedures;
 - if it is not working correctly;
 - if you suspect the cord is faulty;

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold the appliance by the casing, which is hot, but by the handle.

- Do not hold the appliance by the casing, which is hot, but by the handle.

- Do not use any electrical extension lead.

- Do not clean with abrasive or corrosive products.

- Do not use at temperatures below 0°C and above 35°C.

- **Garantie:** Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

- **Utilisation:** Utilisez l'appareil dans la salle de bain, mais débranchez-le après utilisation.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon doux et sec.

- **Conseils de sécurité:** Assurez-vous que l'appareil est correctement branché et que la tension de l'alimentation correspond à celle de l'appareil.

- **Entretien:** Nettoyez l'appareil avec un chiffon

