

OWNER'S MANUAL LED LCD MONITOR (LED Monitor*)

* LG LED Monitor applies LCD screen with LED backlights. Please read this manual carefully before operating your set and retain it for future reference.

24MP60G 27MP60G 32MP60G



www.lg.com

Copyright © 2020 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

| LICENSE |
|---------------------------|
| ASSEMBLING AND PREPARING3 |
| USING THE MONITOR8 |
| USER SETTINGS 10 |
| TROUBLESHOOTING 19 |
| PRODUCT SPECIFICATION |

LICENSE

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



ASSEMBLING AND PREPARING

- Always use genuine LG components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of unauthorized components.
- It is recommended to use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image problems.
- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this
 way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen
 may cause damage to it.
- For wave pattern on appearance, unlike the general method of coating, it's applied to added glittering material in raw material. With no peeled-off appearance, it has good durability. Please use it with confidence because there is no problem in using the product at all.

NOTE

- The components may look different from those illustrated here.
- Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or an online shopping site, or contact the retailer from which you purchased the product.
- The power cord provided may differ depending upon the region.

Supported Drivers and Software

You can download and install the latest version from the LGE website (www.lg.com).

| Drivers and Software | Installation Priority |
|-----------------------------|-----------------------|
| Monitor Driver | Recommended |
| OnScreen Control | Recommended |

Product and Button Description



How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right/up/ down with your finger.

Basic Functions

| | | Power on | Press the joystick button once with your finger to turn on the monitor. |
|--|-------------|-------------------------------|--|
| | | Power off | Press and hold the joystick button once with your finger to turn off the monitor. |
| | | Volume control | You can control the volume by moving the joystick button left/right. |
| | ▲ /▼ | Controls screen brightness | You can control the screen's brightness by moving the joystick button up/down. |


NOTE

• The joystick button is located at the bottom of the monitor.

Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation, regardless of its shape or size.

- Place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all other cables.
- Hold the bottom and side of the monitor frame firmly. Do not hold the panel itself.
- When holding the monitor, the screen should face away from you to prevent it from being scratched.
- When transporting the monitor, do not expose the monitor to shock or excessive vibration.
- When moving the monitor, keep it upright and never turn the monitor on its side or tilt it sideways.

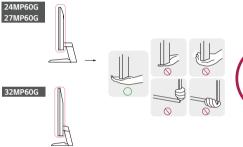



AUTION

- Avoid touching the monitor screen as much as possible.
 - This may result in damage to the screen or some of the pixels used to create images.
- If you use the monitor panel without the stand base, its joystick button may cause the monitor to become
 unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick
 button to malfunction.


4



https://tm.by Интернет-магазин TM.by

Installing on a Table

• Lift the monitor and place it on the table in an upright position. Place the monitor at least 100 mm (3.94 inches) away from the wall to ensure sufficient ventilation.

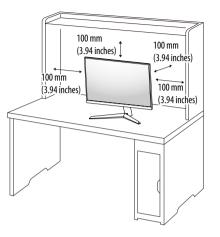

- Unplug the power cord before moving or installing the monitor. There is risk of electric shock.
- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

Adjusting the Angle

- 1 Place the monitor mounted on the stand base in an upright position.
- 2 Adjust the angle of the screen.

The angle of the screen can be adjusted forward or backward from -5° to 15° for a comfortable viewing experience.

WARNING

- To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.
- Be careful not to touch or press the screen area when adjusting the angle of the monitor.





32MP60G






Using the Kensington Lock

The connector for the Kensington security system is located at the bottom of the monitor.

For more information on installation and usage, refer to the Kensington lock owner's manual or visit the website at http://www.kensington.com.

Connect the monitor to a table using the Kensington security system cable.

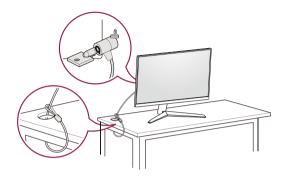

NOTE

6

• The Kensington security system is optional. You can obtain optional accessories from most electronics stores.

Installing the Wall Mount Plate


This monitor meets the specifications for the wall mount plate or other compatible devices.

NOTE

- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to apply too much force while mounting the wall mount plate as it may cause damage to the screen.
- Remove the stand before installing the monitor on a wall mount by performing the stand attachment in reverse.

Installing on the Wall

Install the monitor at least 100 mm (3.94 inches) away from the wall and leave about 100 mm (3.94 inches) of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Alternatively, please refer to the manual for how to install and set up a tilting wall mounting bracket.

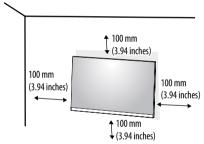

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor. Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

| Wall Mount (mm) | 24MP60G 27MP60G | 32MP60G |
|-----------------------------|-----------------|-----------|
| | 75 x 75 | 100 x 100 |
| Standard screw | M4 x | L10 |
| Number of screws | 4 | |
| Wall Mount Plate (Optional) | LSW | 149 |
| | | |

NOTE

- A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents relating to the use of non-standard screws.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. You can obtain optional accessories from your local dealer.
- The length of the screw may differ for each wall mounting bracket. If you use screws longer than the standard length, it may damage the inside of the product.
- For more information, please refer to the user manual for the wall mounting bracket.

AUTION

- Unplug the power cord before moving or installing the monitor to avoid electric shock.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead to injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this
 way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to VESA standards. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- When measured from the back of the monitor, the length of each installed screw must be 8 mm (0.3 inches) or less.



USING THE MONITOR

 Illustrations in this manual may differ from the actual product. Press the joystick button, go to Settings \rightarrow Input, and then select the input option.

- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display a still image on the screen for a prolonged time. This may cause image retention. Use a PC screensaver if possible.
- When connecting the power cord to the outlet, use a grounded (3-hole) power strip or a grounded power outlet.
- The monitor may flicker when turned on in an area where the temperature is low. This is normal.
- Sometimes red, green, or blue spots may appear on the screen. This is normal.

Connecting to a PC

- This monitor supports the *Plug and Play feature.
- * Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

HDMI Connection

Transmits digital video and audio signals from your PC to the monitor.

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
- High-Speed HDMI[®]/[™] cable
- High-Speed HDMI[®]/[™] cable with Ethernet

DisplayPort Connection

Transmits digital video and audio signals from your PC to the monitor.

- There may be no video or audio output depending on the DP (DisplayPort) version of the PC.
- If you are using a Mini DisplayPort output graphics card, use a Mini DP to DP (Mini DisplayPort to DisplayPort) cable or gender that supports DisplayPort1.4. (Sold separately)

D-SUB connection

Transmits analog video from your PC to the Monitor set.

- When using a D-Sub signal input cable connector for Macintosh
- Mac adapter

For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-SUB VGA connector on the supplied cable to a 15 pin 2 row connector.



Connecting AV Devices

HDMI Connection

HDMI transmits digital video and audio signals from your AV device to the monitor.

NOTE

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
 - High-Speed HDMI $^{\circ}/^{™}$ cable
- High-Speed $\mathrm{HDMI}^\circ\!/^{\mathrm{TM}}$ cable with Ethernet

Connecting Peripherals

Headphones Connection

Connect peripherals to the monitor via the headphones port.

NOTE

- Peripheral devices are sold separately.
- Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.
- If you use angled earphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight earphones.





Angled





USER SETTINGS

NOTE

• Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.

Activating the Main Menu



- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down and left/right to set the options.
- 3 Press the joystick button once more to exit the main menu.

| Button | Menu Status | | Description |
|--------|-------------------|--------------------|---|
| | Main menu enabled | | Enables the main menu. |
| | | | Exits the main menu. (Holding down the button to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.) |
| | | Main menu disabled | Adjusts the monitor volume level. |
| | | Main menu enabled | Enters the Input features. |
| | | Main menu disabled | Adjusts the monitor volume level. |
| | | Main menu enabled | Enters the Settings feature. |
| | | Main menu disabled | Adjusts the monitor brightness level. |
| | | Main menu enabled | Turns off the monitor. |
| | T | Main menu disabled | Adjusts the monitor brightness level. |
| | • | Main menu enabled | Enters the Game Mode feature. |



Main Menu Features



| Main Menu | Description | | | | |
|-----------|---------------------------------|--|--|--|--|
| Input | Sets input mode. | | | | |
| Power Off | Turns off the monitor. | | | | |
| Settings | Configures the screen settings. | | | | |
| Game Mode | Sets the game mode for gaming. | | | | |
| Exit | Exits the main menu. | | | | |

Menu Settings

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the Settings.
- 2 Move the joystick up/down and left/right to set the options.
- 3 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (ᠿ) it.
- 4 If you want to exit the OSD menu, move the joystick to
 until you exit.

Input







*

Picture





Quick Settings

General



Quick Settings

| Settings > Quick Settings | Description | | | |
|---------------------------|---|---|--|--|
| Brightness | | | | |
| Contrast | Adjusts the contrast and brightness of | the screen. | | |
| Volume | Adjusts the volume level. (for HDMI, D | isplayPort only) | | |
| | NOTE | | | |
| | • You can adjust Mute / Unmute by moving the joystick button to ▼ in the Volume menu. | | | |
| Color Temp | Custom | The user can adjust it to red, green, or blue by customization. | | |
| | Warm Sets the screen color to a reddish tone. | | lor to a reddish tone. | |
| | Medium | Sets the screen co | lor to between a red and blue tone. | |
| | Cool | Sets the screen color to a bluish tone. | | |
| Auto Configuration | Do you want to Auto Configuration? | No | Cancel the select. | |
| (D-SUB only) | | Yes | Operate the Auto configuration for optimal display in D-SUB. | |

Input

| Settings > Input | Description | | |
|------------------|---|---|--|
| Input List | Selects the input mode. | | |
| Aspect Ratio | Adjusts the aspect ratio of the screen. | | |
| | Full Wide Displays the video in widescreen, regardless of the video signal input. | | |
| | Original | Displays video according to the aspect ratio of the video signal input. | |



Picture

NOTE

• The Picture Mode that can be set depends on the Input signal.

| Settings > Picture | Description | | | | | | |
|--------------------|------------------------|---|--|--|--|--|--|
| Picture Mode | Gamer 1 | In this mode, users can customize elements including game-related options. | | | | | |
| | Gamer 2 | Gamer 1 and Gamer 2 picture modes allow you to save two sets of customized display settings, including game-related setup options. | | | | | |
| | FPS | This mode is optimized for FPS games. | | | | | |
| | RTS | This mode is optimized for RTS Game. | | | | | |
| | Reader | Optimizes the screen for viewing documents. You can brighten the screen in the OSD menu. | | | | | |
| | Photo | Optimizes the screen to view photos. | | | | | |
| | Cinema | Optimizes the screen to improve the visual effects of a video. | | | | | |
| | Color Weakness | This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors. | | | | | |
| | NOTE | () NOTE | | | | | |
| | If the Picture Mode is | If the Picture Mode is changed, the screen may flicker or the resolution of your PC screen may be affected. | | | | | |

| Settings > Picture | | Description | | |
|--------------------|-------------------|--|---|--|
| Picture Adjust | Brightness | Adjusts the color contrast and brightness of the screen. | | |
| | Contrast | Adjusts the color contra | ist and brightness of the screen. | |
| | Sharpness | Adjusts the sharpness of | of the screen. | |
| | SUPER RESOLUTION+ | Off | Displays in the most common setting. Disables SUPER RESOLUTION+. | |
| | | High | Optimizes the screen for crystal clear images. Best for high-definition video or games. | |
| | | Middle | Optimizes the screen for comfortable viewing, with images at the middle level between the low and high modes. Best for UCC or SD videos. | |
| | | Low | Optimizes the screen for smooth and natural images. Best for still images or images with less movement. | |
| | | NOTE | | |
| | | | ction to increase the sharpness of low resolution pictures, it is not recommended to use the function for normal text or for desktop icons. Doing so ssarily high sharpness. | |
| | Black Level | | r HDMI, DisplayPort only). for a video signal, this is the darkest color the monitor can display. | |
| | | High | Keeps the current contrast ratio of the screen. | |
| | | Low | Lowers the black levels and raises the white levels from the current contrast ratio of the screen. | |
| | DFC | On | Adjusts the brightness automatically according to the screen. | |
| | | | Disables the DFC feature. | |



| Settings > Picture | | Description | | |
|--------------------|------------------|--|--|--|
| Game Adjust | Response Time | Sets a response time for displayed pictures based on the movement of the picture on the screen. For a normal environment, it is recommended that you use Fast. When there is a lot of motion, it is recommended that you use Faster. Setting to Faster may cause image sticking. | | |
| | | Faster | Sets the response time to faster. | |
| | | Fast | Sets the response time to fast. | |
| | | Normal | Sets the response time to normal. | |
| | | Off | Does not use the response time improvement feature. | |
| | FreeSync | Provides seamless and | natural images by synchronizing the vertical frequency of the input signal with that of the output signal. | |
| | | | | |
| | | Supported Interface: | DisplayPort, HDMI | |
| | | Supported Graphic C | ard: A graphic card that supports AMD's FreeSync is necessary. | |
| | | Supported Version: N | Nake sure to update the graphic card to the latest driver. | |
| | | For more information | n and requirement, refer to AMD website at http://www.amd.com/FreeSync. | |
| | | On FreeSync function on. | | |
| | | Off FreeSync function off. | | |
| | Black Stabilizer | Increasing the Black Sta | ck contrast to have better visibility in dark scenes. abilizer value brightens the low gray level area on the screen. (You can easily distinguish objects on dark game screens.) bilizer value darkens the low gray level area and increases the dynamic contrast on the screen. | |



| Settings > Picture | | | Description |
|--------------------|---------------------------|---|---|
| Game Adjust | 1ms Motion Blur Reduction | On | This mode minimizes motion blur in fast-moving videos. |
| | | | |
| | | | This function is available for the following vertical frequency. (75Hz) |
| | | Off | Turns 1ms Motion Blur Reduction Mode off. |
| | | | |
| | | NOTE | |
| | | | ur, brightness is reduced with backlight control. |
| | | | duction and FreeSync feature can not used at the same time. |
| | | This function is gam It is recommanded t | |
| | | | o turn off when you are not using the gaming function. rring 1ms Motion Blur Reduction operation. |
| | Crosshair | different Crosshair. | nark on the center of the screen for First Person Shooter (FPS) games. Users can select the Crosshair that fits their gaming environment among four |
| | | When the monitor is | s off or enters energy saving mode, the Crosshair feature is automatically turned Off. |

ТТМБУ https://tm.by Интернет-магазин ТМ.by

| Settings > Picture | | | | Description | | |
|----------------------|---------------------------------|---|--|---|--|--|
| Color Adjust | Gamma Mode 1, Mode 2, Mode 3 | | The higher the gamm | The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes. | | |
| | | Mode 4 | Node 4 If you do not need to adjust the gamma settings, select Mode 4. | | | |
| | Color Temp | Set your own color ten | nperature. | | | |
| | | Custom | The user can adjust i | t to red, green, or blue by customization. | | |
| | | Warm | Sets the screen color | to a reddish tone. | | |
| | | Medium | Sets the screen color | to between a red and blue tone. | | |
| | | Cool | Sets the screen color | to a bluish tone. | | |
| | Red, Green, Blue | You can customize the picture color using Red, Green, and Blue colors. | | | | |
| Configuration Adjust | Horizontal | To move image left and right. | | | | |
| (D-SUB only) | Vertical | To move image up and down. | | | | |
| | Clock | To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change. | | | | |
| | Phase | To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters. | | | | |
| Resolution | User can set the desired resol | ution.This option is enabl | ed only when the scree | n resolution on your computer is set to the following(D-SUB only). | | |
| (D-SUB only) | NOTE | | | | | |
| | | | | | | |
| Picture Reset | Do you want to reset your pic | ture settings? | No | Cancel the select. | | |
| | | | Yes | Returns to the default settings. | | |



General

| Settings > General | Description | | | |
|---|--|--------------------|--|--|
| Language | Sets the menu screen to the desired language. | | | |
| SMART ENERGY SAVING | Conserve energy by using luminance | compensatio | n algorithm. | |
| | High | Saves energy | y using the high-efficiency SMART ENERGY SAVING feature. | |
| | Low | Saves energy | y using the low-efficiency SMART ENERGY SAVING feature. | |
| | Off | Disables the | feature. | |
| | NOTE The value of energy saving data may differ depending on panel and panel suppliers. If you select the option of SMART ENERGY SAVING is High or Low, monitor luminance become lower or higher depend on source. | | | |
| Automatic Standby | Feature that automatically turns off the monitor when there is no movement on the screen for a period of time. You can set a timer for the auto-off function. (4H, 6H, 8H and Off) | | | |
| OSD Lock | This feature disables the configuration and adjustment of menus. | | | |
| | On | Enables OSD Lock. | | |
| | Off | Disables OSD Lock. | | |
| NOTE All features are disabled except Brightness, Contrast, Volume, Input List, Aspect Ratio, OSD Lock and Information. | | | trast, Volume, Input List, Aspect Ratio, OSD Lock and Information. | |
| Information | The following display information will be shown; Total Power On Time, Resolution. | | | |
| Reset | Do you want to reset your settings? | No | Cancel the reset. | |
| | | Yes | Returns to the default settings. | |

18 ТТМБУ https://tm.by Интернет-магазин ТМ.by

TROUBLESHOOTING

| Nothing is displayed on the screen. | |
|--|---|
| Is the monitor's power cord plugged in? | Check if the power cord is correctly plugged into the power outlet. |
| Is the No Signal message being displayed? | • This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it. |
| Is the Out of Range message being displayed? | • This occurs when signals transferred from the PC (graphics card) are out of the horizontal or vertical frequency range of the monitor. Please see the Product Specification section of this manual to set the appropriate frequency. |
| Screen display is unstable and shaky. / Images displayed on the | monitor leave shadow trails. |
| Did you select the appropriate resolution? | If the selected resolution is HDMI 1080i 60/50 Hz (interlaced), the screen may be flickering. Change the resolution to 1080p or the recommended resolution. Not setting the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area or |
| | misalignment of the display. |
| | The setting methods may be different depending on the computer or operating system, and some resolutions may not be available depending on the performance of the graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance. |
| Does image sticking occur even when the monitor is turned off? | Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image. To extend the lifetime of the monitor, use a screensaver. |
| Are there spots on the screen? | • When using the monitor, pixilated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LCD screen. It is not an error, nor is it related to the monitor's performance. |
| Some features are disabled. | |
| Are some functions not available when you press the Menu button? | The OSD is locked. Disable OSD Lock in General. |
| Do you see an "Unrecognized monitor, Plug and Play (VESA DDC |) monitor found" message? |
| Have you installed the display driver? | Be sure to install the display driver from our web site: http://www.lg.com. |
| | Make sure to check if the graphics card supports Plug and Play function. |
| No sound from the headphone port. | |
| Are images displayed without sound? | Make sure that the headphone port connections are made properly. |
| | Try increasing the volume with the joystick. |
| | Set the audio output of the PC to the monitor you are using. (The settings may differ depending on the operating system (OS) you use.) |



PRODUCT SPECIFICATION

24MP60G

| Color Depth | 8-bit color is supported | |
|---------------|---|---|
| Resolution | Max Resolution | 1920 x 1080 @ 60 Hz (D-sub) 1920 x 1080 @ 75 Hz (HDMI,DisplayPort) |
| | Recommended Resolution | 1920 x 1080 @ 60 Hz |
| Power Sources | Power Rating | 19V 1.3 A |
| | Power Consumption (Typical) | On mode: 16 W Typ. (Outgoing condition) * Sleep Mode (Standby Mode) \leq 0.3 W ** Off Mode \leq 0.3 W |
| AC/DC Adapter | Or ADS-25FSF-19 19025EPCU-1, man Or ADS-25FSF-19 19025EPBR-1, man Or ADS-25FSF-19 19025EPI-1, manuf Or ADS-25FSF-19 19025EPG-1, manu | HANG ELECTRONIC ENTERPRISE HANG ELECTRONIC ENTERPRISE HANG ELECTRONIC ENTERPRISE ectronics (H.K.) Ltd. lectronics (H.K.) Ltd. |



| Environmental Conditions | Operating Conditions | Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
|----------------------------|---------------------------------------|----------------------------|-----------------------------------|
| | | Humidity | Less than 80 % |
| | Storing Conditions | Temperature | -20 °C to 60 °C (-4 °F to 140 °F) |
| | | Humidity | Less than 85 % |
| Dimensions | Monitor Size (Width x Height x Depth) | | |
| | With Stand | 539.1 x 414.3 x 211.7 (mm) | 21.2 x 16.3 x 8.3 (inches) |
| | Without Stand | 539.1 x 321.5 x 39.1 (mm) | 21.2 x 12.6 x 1.5 (inches) |
| Weight (Without Packaging) | With Stand | 3.3 (kg) | 7.2 (lbs) |
| | Without Stand | 2.7 (kg) | 5.9 (lbs) |

The specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

** The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).



PRODUCT SPECIFICATION

27MP60G

| Color Depth | 8-bit color is supported | | | |
|---------------|--|--|--|--|
| Resolution | Max Resolution | 1920 x 1080 @ 60 Hz (D-sub) 1920 x 1080 @ 75 Hz (HDMI,DisplayPort) | | |
| | Recommended Resolution | 1920 x 1080 @ 60 Hz | | |
| Power Sources | Power Rating | 19V 1.6 A | | |
| | Power Consumption | On mode: 20 W Typ. (Outgoing condition) * | | |
| | (Typical) | Sleep Mode (Standby Mode) \leq 0.3 W ** | | |
| | | Off Mode \leq 0.3 W | | |
| AC/DC Adapter | ADS-40SG-19-3 19032G, manufacto | ired by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPG-1, ma | Or ADS-40FSG-19 19032GPG-1, manufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPBR-1, m | Or ADS-40FSG-19 19032GPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPI-1, man | Or ADS-40FSG-19 19032GPI-1, manufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC | | | |
| | Or ADS-45SQ-19-3 19032E, manufa | ctured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-45FSQ-19 19032EPG-1, mar | nufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-45FSQ-19 19032EPK-1, mar | ADS-45FSQ-19 19032EPK-1, manufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-45FSQ-19 19032EPCU-1, ma | anufactured by SHENZHEN HONOR ELECTRONIC | | |
| | | anufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or LCAP21A, manufactured by LIEN | | | |
| | Or LCAP26A-A, manufactured by LIE | | | |
| | Or LCAP26A-E, manufactured by LIE | | | |
| | Or LCAP26A-I, manufactured by LIE | | | |
| | Or LCAP26A-B, manufactured by LIE | | | |
| | Or AD10550LF, manufactured by PI | | | |
| | Or AD2138S20, manufactured by PI | | | |
| | Or AD2138620, manufactured by PI | Electronics (H.K.) Ltd. | | |
| | Output: 19 V – – – 1.7 A | Output: 19 V = = = 1.7 A | | |



| Environmental Conditions | Operating Conditions | Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
|----------------------------|---|----------------------------|-----------------------------------|
| | | Humidity | Less than 80 % |
| | Storing Conditions | Temperature | -20 °C to 60 °C (-4 °F to 140 °F) |
| | | Humidity | Less than 85 % |
| Dimensions | ons Monitor Size (Width x Height x Depth) | | |
| | With Stand | 611.1 x 455.1 x 211.7 (mm) | 24.0 x 17.9 x 8.3 (inches) |
| | Without Stand | 611.1 x 362.6 x 39.5 (mm) | 24.0 x 14.2 x 1.5 (inches) |
| Weight (Without Packaging) | With Stand | 4.4 (kg) | 9.7 (lbs) |
| | Without Stand | 3.8 (kg) | 8.3 (lbs) |

The specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

** The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).



PRODUCT SPECIFICATION

32MP60G

| Color Depth | 8-bit / 10-bit color is supported. | | | |
|---------------|-------------------------------------|--|--|--|
| Resolution | Max Resolution | 1920 x 1080 @ 60 Hz (D-sub) 1920 x 1080 @ 75 Hz (HDMI,DisplayPort) | | |
| | Recommended Resolution | 1920 x 1080 @ 60 Hz | | |
| Power Sources | Power Rating | 19V 1.6 A | | |
| | Power Consumption | On mode: 25 W Typ. (Outgoing condition) * | | |
| | (Typical) | Sleep Mode (Standby Mode) \leq 0.3 W ** | | |
| | | Off Mode ≤ 0.3 W | | |
| AC/DC Adapter | ADS-40SG-19-3 19032G, manufactur | ed by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPG-1, manu | Or ADS-40FSG-19 19032GPG-1, manufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPBR-1, mar | Or ADS-40FSG-19 19032GPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPI-1, manu | factured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-40FSG-19 19032GPCU-1, mar | nufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or ADS-45SQ-19-3 19032E, manufact | ured by SHENZHEN HONOR ELECTRONIC | | |
| | | factured by SHENZHEN HONOR ELECTRONIC | | |
| | | factured by SHENZHEN HONOR ELECTRONIC | | |
| | | ufactured by SHENZHEN HONOR ELECTRONIC | | |
| | | ufactured by SHENZHEN HONOR ELECTRONIC | | |
| | Or LCAP21A, manufactured by LIEN C | | | |
| | Or LCAP26A-A, manufactured by LIEN | | | |
| | Or LCAP26A-E, manufactured by LIEN | | | |
| | Or LCAP26A-I, manufactured by LIEN | | | |
| | Or LCAP26A-B, manufactured by LIEN | | | |
| | Or AD10550LF, manufactured by PI El | | | |
| | Or AD2138S20, manufactured by PI E | | | |
| | | Or AD2138620, manufactured by PI Electronics (H.K.) Ltd. | | |
| | Output: 19 V – – – 1.7 A | | | |



| Environmental Conditions | Operating Conditions | Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
|----------------------------|--|----------------------------|-----------------------------------|
| | | Humidity | Less than 80 % |
| | Storing Conditions | Temperature | -20 °C to 60 °C (-4 °F to 140 °F) |
| | | Humidity | Less than 85 % |
| Dimensions | mensions Monitor Size (Width x Height x Depth) | | |
| | With Stand | 729.4 x 513.3 x 224.8 (mm) | 28.7 x 20.2 x 8.8 (inches) |
| | Without Stand | 729.4 x 430.3 x 45.0 (mm) | 28.7 x 16.9 x 1.7 (inches) |
| Weight (Without Packaging) | With Stand | 6.9 (kg) | 15.2 (lbs) |
| | Without Stand | 6.2 (kg) | 13.6 (lbs) |

The specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

** The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).



Factory Support Mode (Preset Mode, PC)

24MP60G 27MP60G

| Preset Mode | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Polarity (H/V) | Remarks |
|-------------|----------------------------|-------------------------|----------------|-------------------------------|
| 720 x 400 | 31.468 | 70.08 | -/+ | |
| 640 x 480 | 31.469 | 59.94 | -/- | |
| 640 x 480 | 37.5 | 75 | -/- | |
| 800 x 600 | 37.879 | 60.317 | +/+ | |
| 800 x 600 | 46.875 | 75 | +/+ | |
| 1024 x 768 | 48.363 | 60 | -/- | |
| 1024 x 768 | 60.023 | 75.029 | +/+ | |
| 1152 x 864 | 67.5 | 75 | +/+ | |
| 1280 x 1024 | 63.981 | 60.02 | +/+ | |
| 1280 x 1024 | 79.976 | 75.025 | +/+ | |
| 1680 x 1050 | 65.29 | 59.954 | -/+ | |
| 1920 x 1080 | 67.5 | 60 | +/+ | Recommend |
| 1920 x 1080 | 83.89 | 74.97 | +/+ | (for HDMI / DisplayPort only) |





D-Sub/HDMI

| Preset Mode | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Polarity (H/V) | Remarks |
|-------------|----------------------------|-------------------------|----------------|-----------------|
| 640 x 480 | 31.469 | 59.94 | -/- | |
| 640 x 480 | 37.5 | 75 | -/- | |
| 800 x 600 | 37.879 | 60.317 | +/+ | |
| 800 x 600 | 46.875 | 75 | +/+ | |
| 1024 x 768 | 48.363 | 60 | -/- | |
| 1024 x 768 | 60.023 | 75.029 | +/+ | |
| 1280 x 720 | 45 | 60 | +/+ | |
| 1280 x 800 | 49.702 | 59.81 | -/+ | |
| 1280 x 1024 | 63.981 | 60.02 | +/+ | |
| 1280 x 1024 | 79.976 | 75.025 | +/+ | |
| 1600 x 900 | 60 | 60 | +/+ | |
| 1680 x 1050 | 65.29 | 59.954 | -/+ | |
| 1920 x 1080 | 67.5 | 60 | +/+ | |
| 1920 x 1080 | 83.894 | 74.973 | +/- | (for HDMI only) |



32MP60G

DisplayPort

| Preset Mode | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Polarity (H/V) | Remarks |
|-------------|----------------------------|-------------------------|----------------|---------|
| 640 x 480 | 31.469 | 59.94 | -/- | |
| 800 x 600 | 37.879 | 60.317 | +/+ | |
| 1024 x 768 | 48.363 | 60 | -/- | |
| 1280 x 720 | 45 | 60 | +/+ | |
| 1280 x 800 | 49.702 | 59.81 | -/+ | |
| 1280 x 1024 | 63.981 | 60.02 | +/+ | |
| 1600 x 900 | 60 | 60 | +/+ | |
| 1680 x 1050 | 65.29 | 59.954 | -/+ | |
| 1920 x 1080 | 67.5 | 60 | +/+ | |
| 1920 x 1080 | 83.894 | 74.973 | +/- | |

HDMI Timing (Video)

| Factory support mode (Preset Mode) | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Remarks |
|---------------------------------------|----------------------------|-------------------------|----------------|
| 480p | 31.5 | 60 | |
| 576P | 31.25 | 50 | |
| 720p | 37.5 | 50 | |
| 720p | 45.0 | 60 | |
| 1080p | 56.25 | 50 | |
| 1080p | 67.5 | 60 | Recommend Mode |





| Supplier's Declaration of Conformity | | |
|--------------------------------------|------------------------------------|--|
| Trade Name | LG | |
| Responsible Party | LG Electronics USA, Inc. | |
| Address | 111 Sylvan Avenue, North Building, | |
| | Englewood Cliffs,NJ 07632 | |
| E-mail | lg.environmental@lge.com | |

The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

Model

Serial No.

