







Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

| | |
|----------------|---------|
| Audi A1 | 08.10 → |
| Seat Ibiza V | 05.09 → |
| Seat Toledo | 10.12 → |
| Skoda Fabia II | 02.10 → |
| Skoda Praktik | 06.07 → |
| Skoda Rapid | 10.12 → |
| Skoda Roomster | 02.10 → |
| VW Polo | 01.09 → |



The Perfect Change.

80001784 / 80001783
CC1436 / CP1436
MC 900 / MP 400

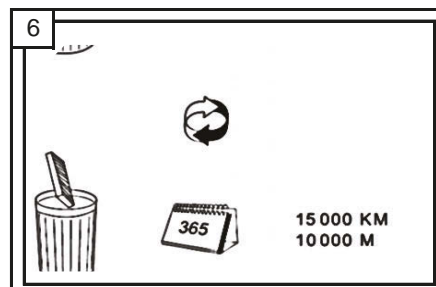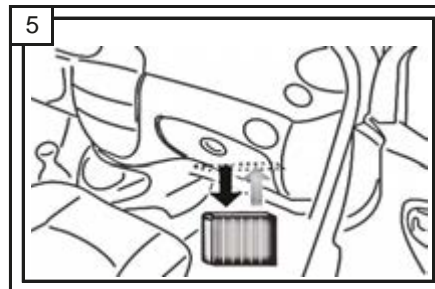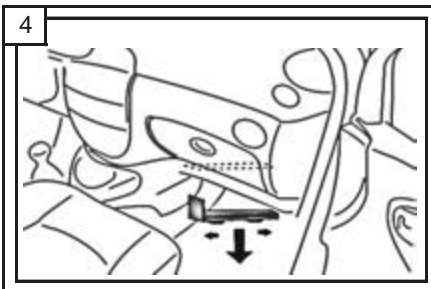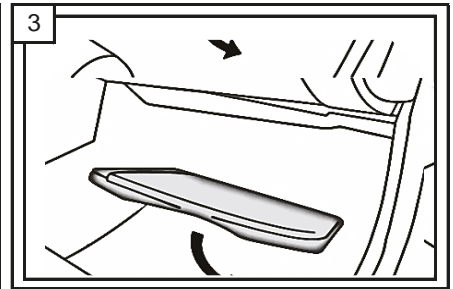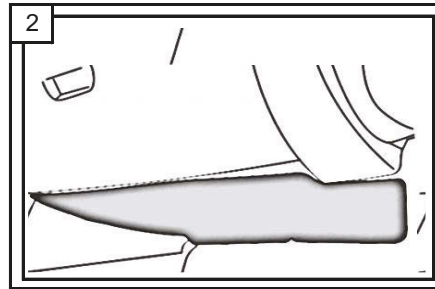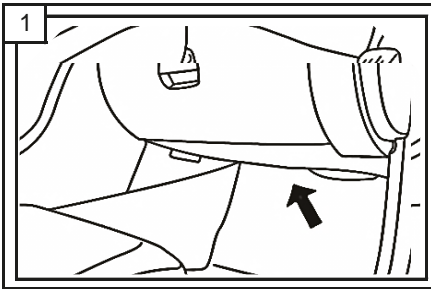

© by Freudenberg Filtration Technologies SE & Co. KG 2012

micronAir[®]