







Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Audi A1 08.10 →
Seat Ibiza V 05.09 →
Seat Toledo 10.12 →
Skoda Fabia II 02.10 →
Skoda Praktik 06.07 →
Skoda Rapid 10.12 →
Skoda Roomster 02.10 →
VW Polo 01.09 →



The Perfect Change.

80001784 / 80001783
CC1436 / CP1436
MC 900 / MP 400

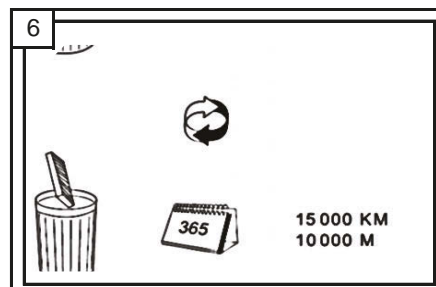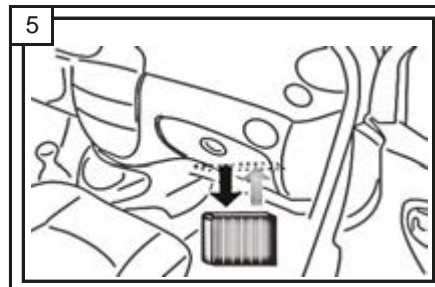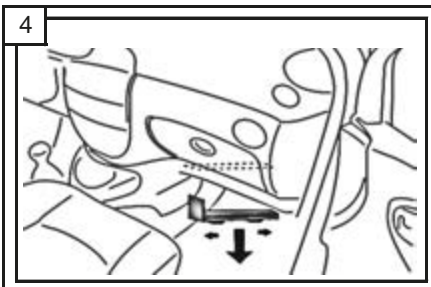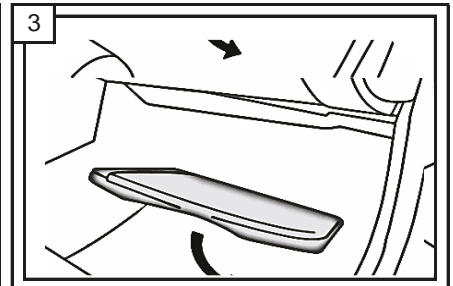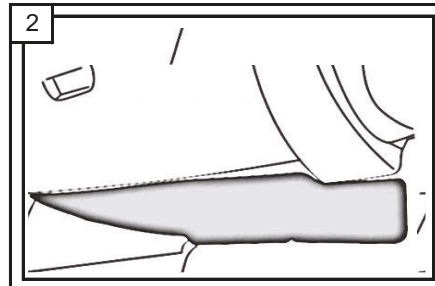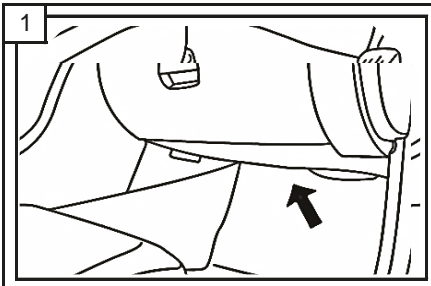

© by Freudenberg Filtration Technologies SE & Co. KG 2012

micronAir