

Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Nissan Almera 01.00→
Nissan Almera Tino 04.00→
Nissan Primera 03.02→






The Perfect Change.

80000746 / 21652346

CC1068 / CP1068

MP 063

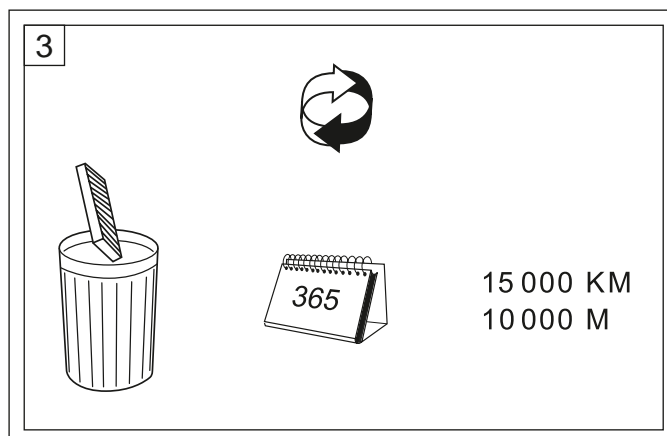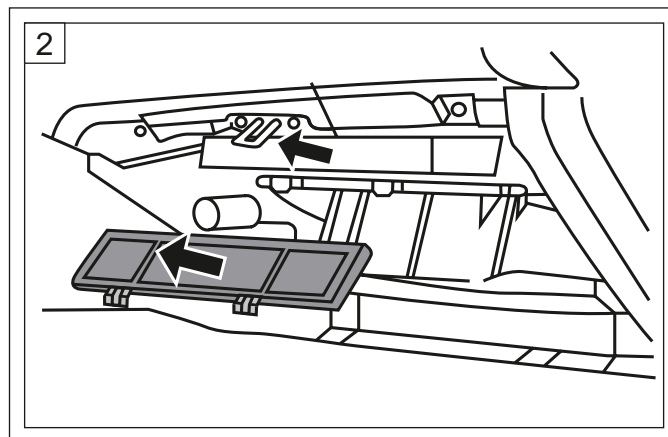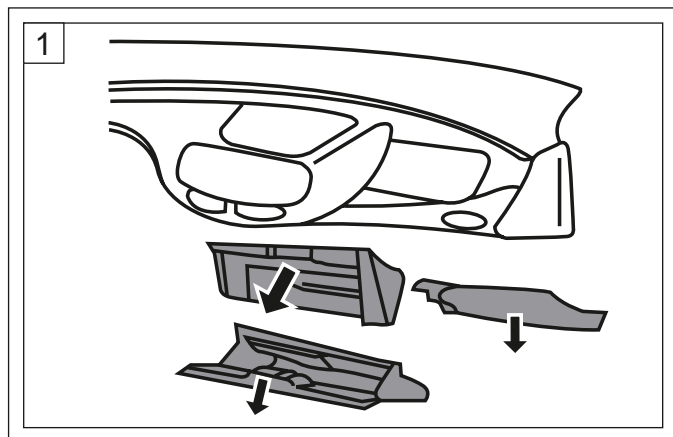

© by Freudenberg Vliesstoffe KG 2008

micronAir™