



Chairman 406




RU ИНСТРУКЦИЯ ПО СБОРКЕ
EN ASSEMBLY INSTRUCTIONS
DE AUFBAUANLEITUNG
FR INSTRUCTIONS DE MONTAGE
IT MANUALE D'USO
ES INSTRUCCIONES DE MONTAJE
CS NÁVOD K MONTÁŽI
KK ЖИНАУ ЖӨНІНДЕГІ НҰҚСАУЛЫҚ

1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 1 pcs, 2 pcs, 6 pcs, 2 pcs, 6 pcs

(M6x30) 2 pcs
 (M6x65) 6 pcs
 (M6x20) 2 pcs
 (M6x25) 4 pcs

STEP 1
 ↓
STEP 2

1 Attach the base plate (8) to the central column (6) using the provided hardware (7, 9).
2 Attach the front plate (1) to the base plate (8) using the provided hardware (12).
3 Attach the seat (2) to the base plate (8) using the provided hardware (4, 5, 10, 14, 16).
4 Attach the backrest (1) to the seat (2) using the provided hardware (11, 13, 15).
5 Attach the front plate (1) to the seat (2) using the provided hardware (11, 13, 15).
6 Attach the seat (2) to the base plate (8) using the provided hardware (6).
FRONT

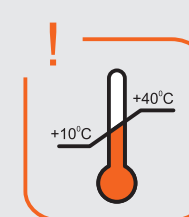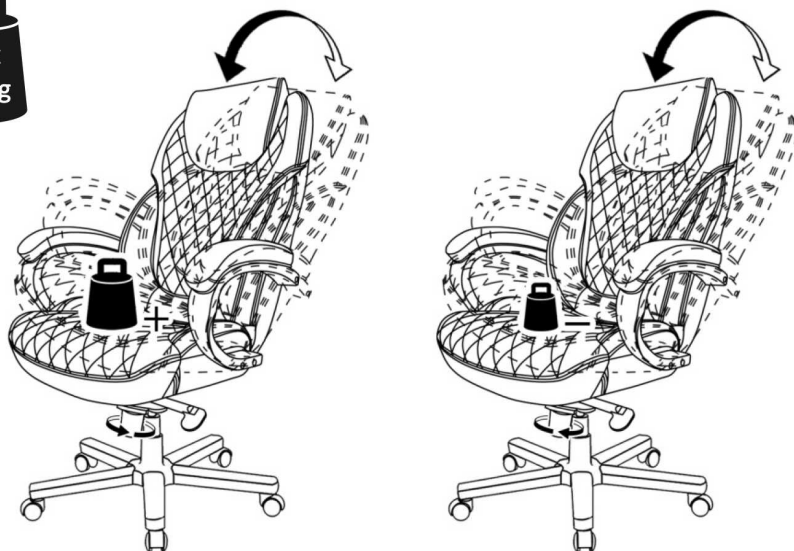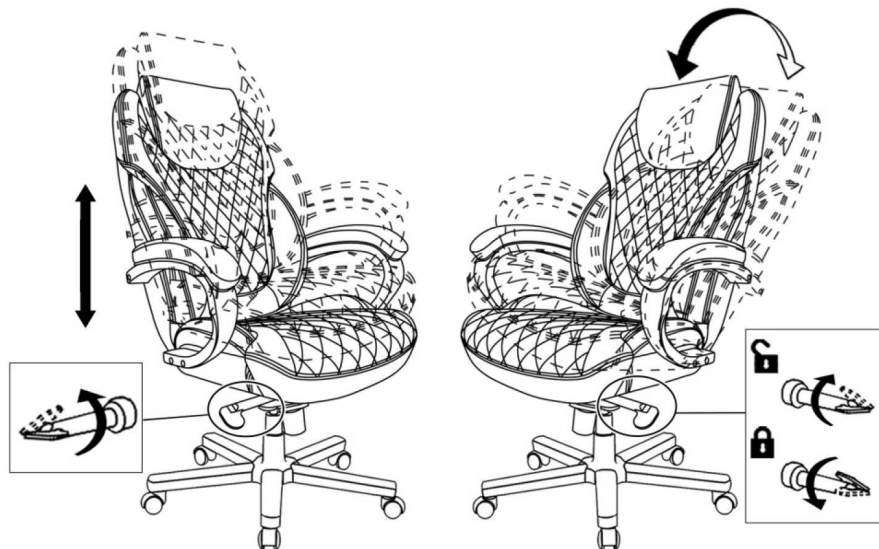

CHAIRMAN
ПОМОГАЕТ РАБОТАТЬ

- chairman.ru
- info@chairman.ru
- instagram.com/chairman_chairs
- vk.com/chairman_chairs
- @chairs.chairman