



Инструкция по сборке Душевая кабина Saniteco 99814

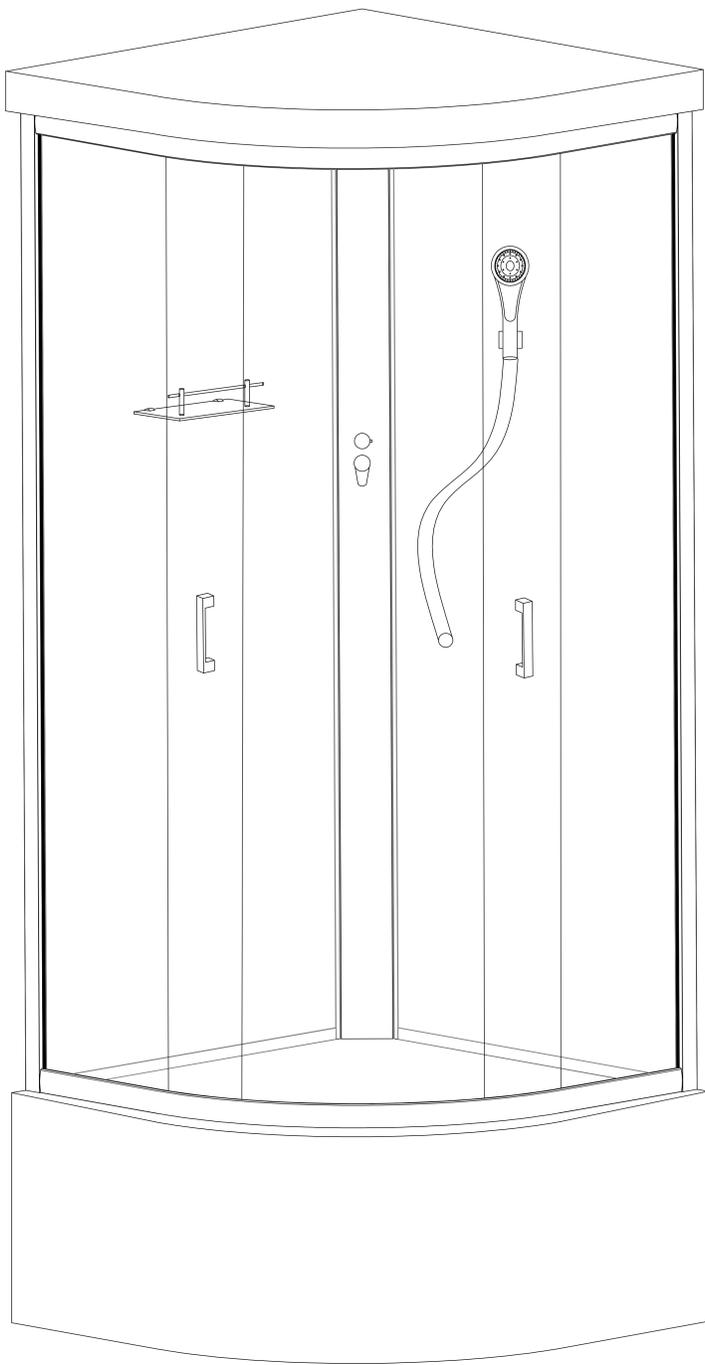



A1		X2	E1		X8	K1		X4
B1		X2	F1		X16	L1		X4
C1		X2	G1		X8	M1		X8
D1		X2	H1		X2	N1		X4
			I1		X4	O1		X2

A2		X1	Кран
B2		X1	Шланг
C2		X1	Полочка


99814

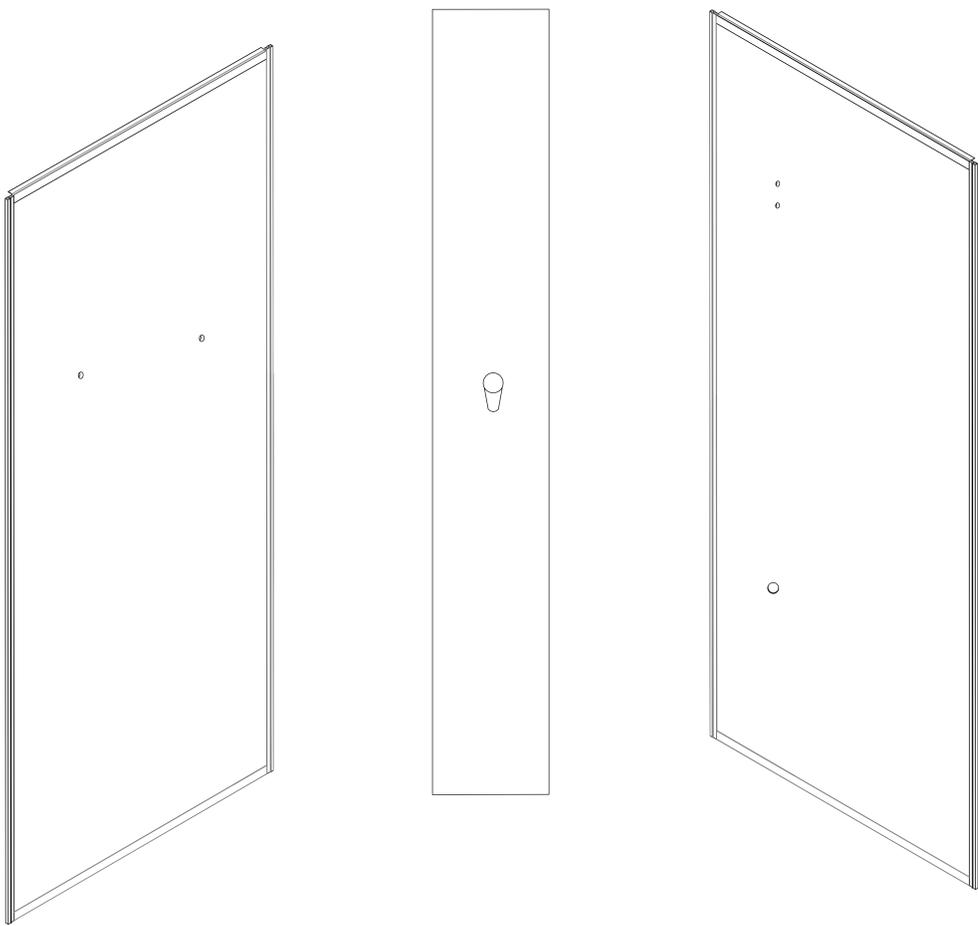


Крыша

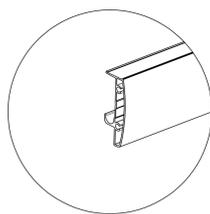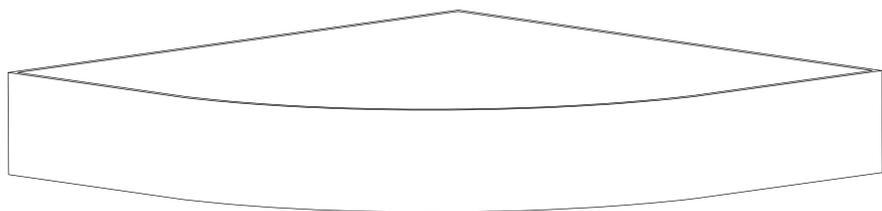


Поддон

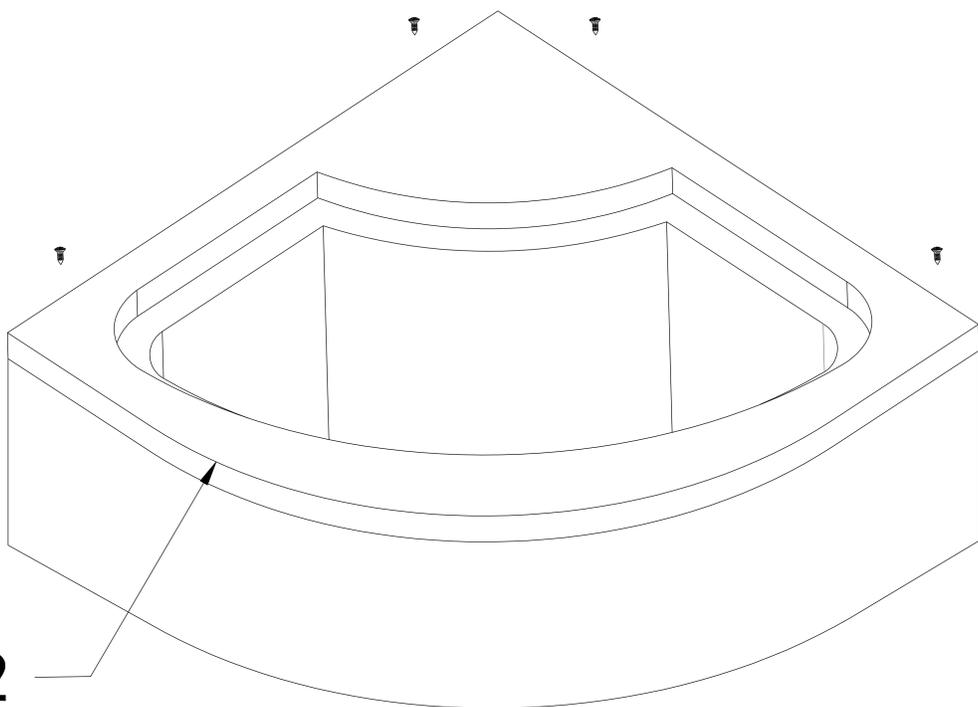


A2

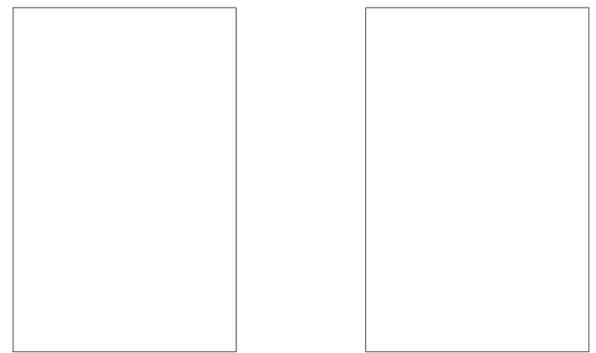

Набор стекол

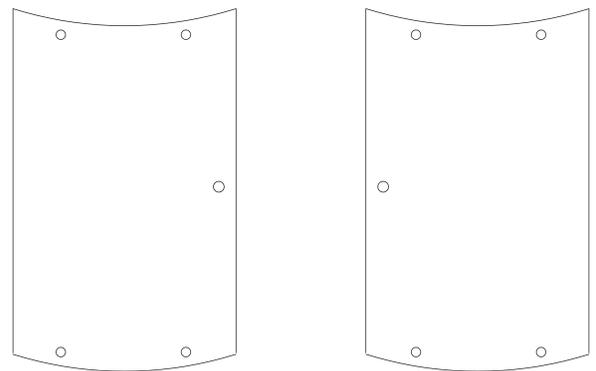


Стеклянные двери

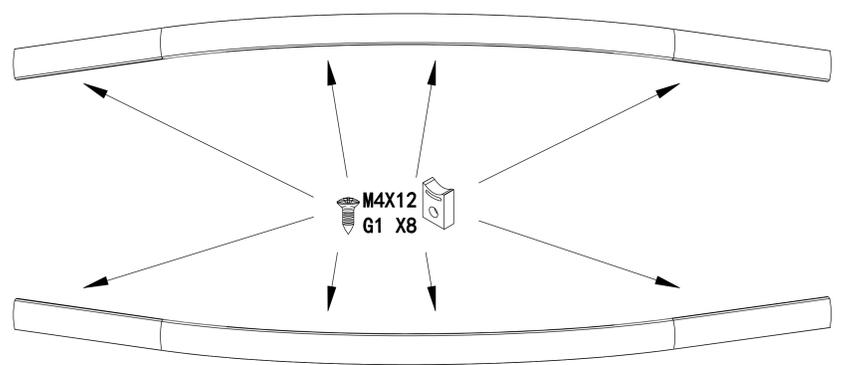



Направляющие





Рамки

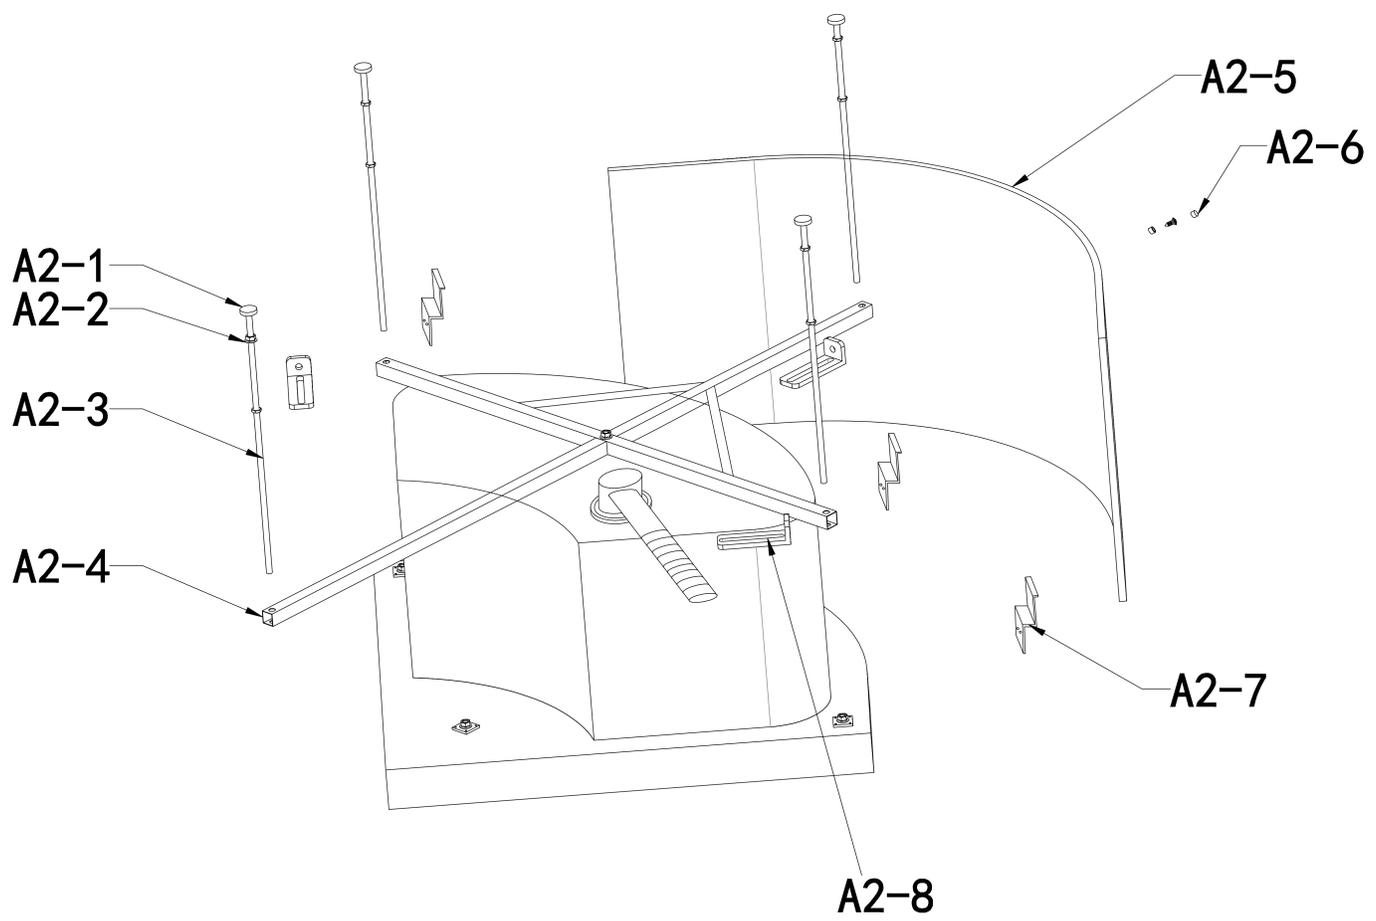


<p>A2-1 X5</p> 	<p>A2-2 X18</p>  <p>M12</p>	<p>A2-3 M12*L x4 M12*S x1</p> 
	<p>A2-4 X1</p> 	<p>A2-5 X4</p> 
<p>A2-6 X5</p> 	<p>A2-7 X3</p> 	

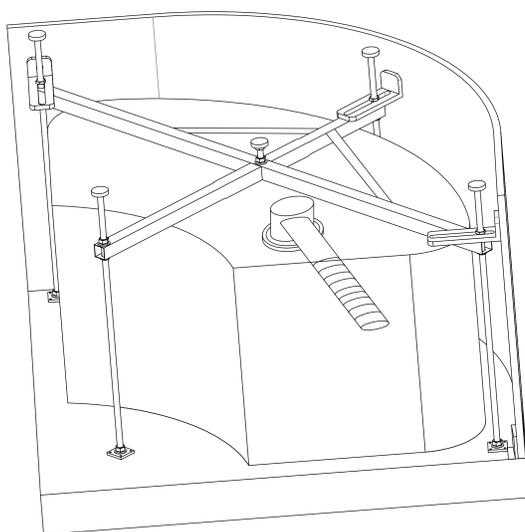

1

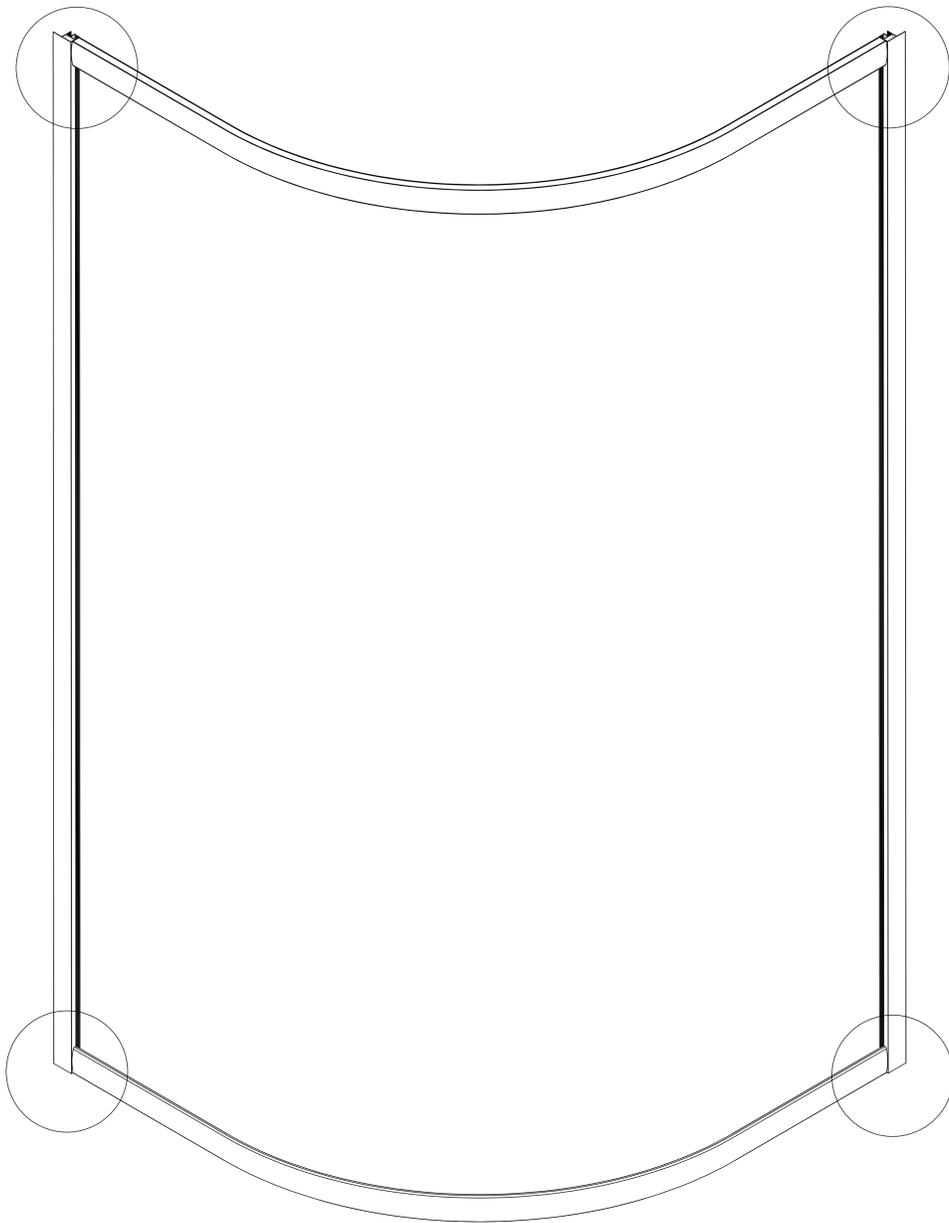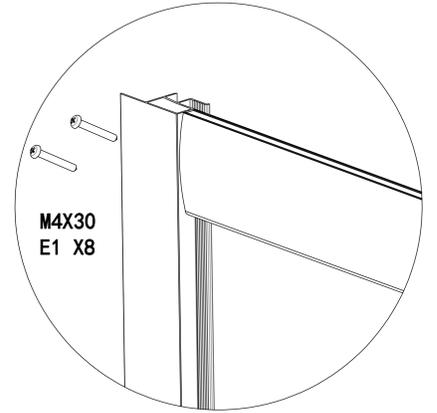


2

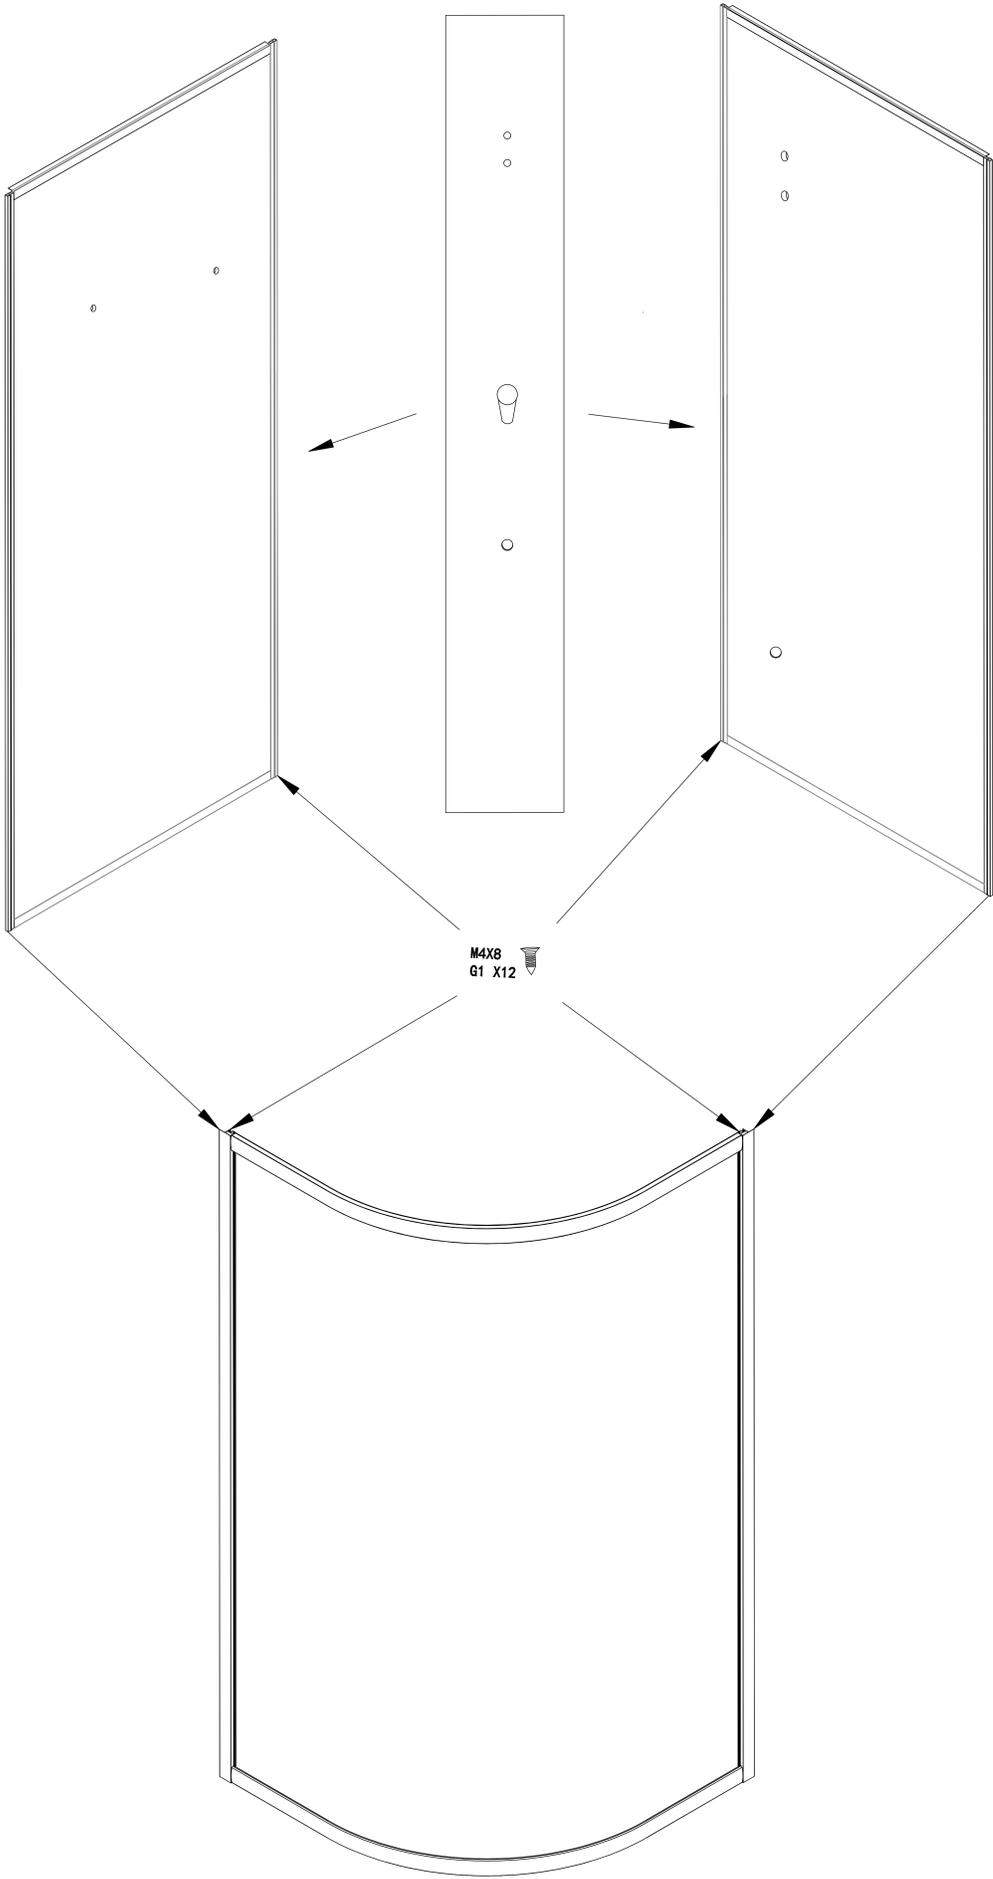


2-1


a

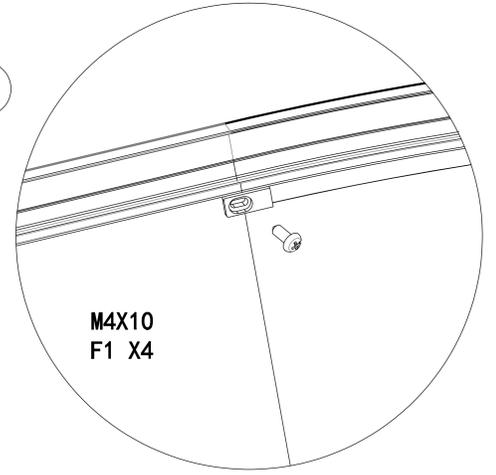



b

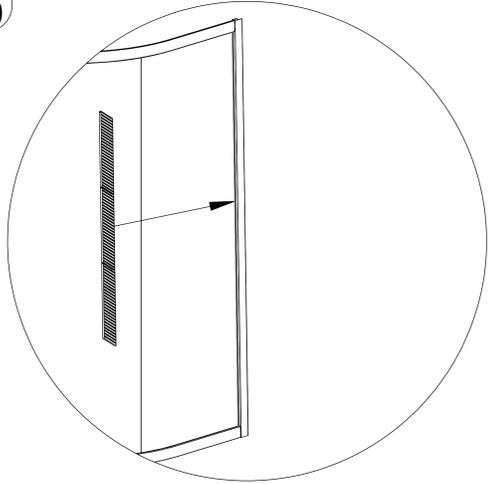

②-1

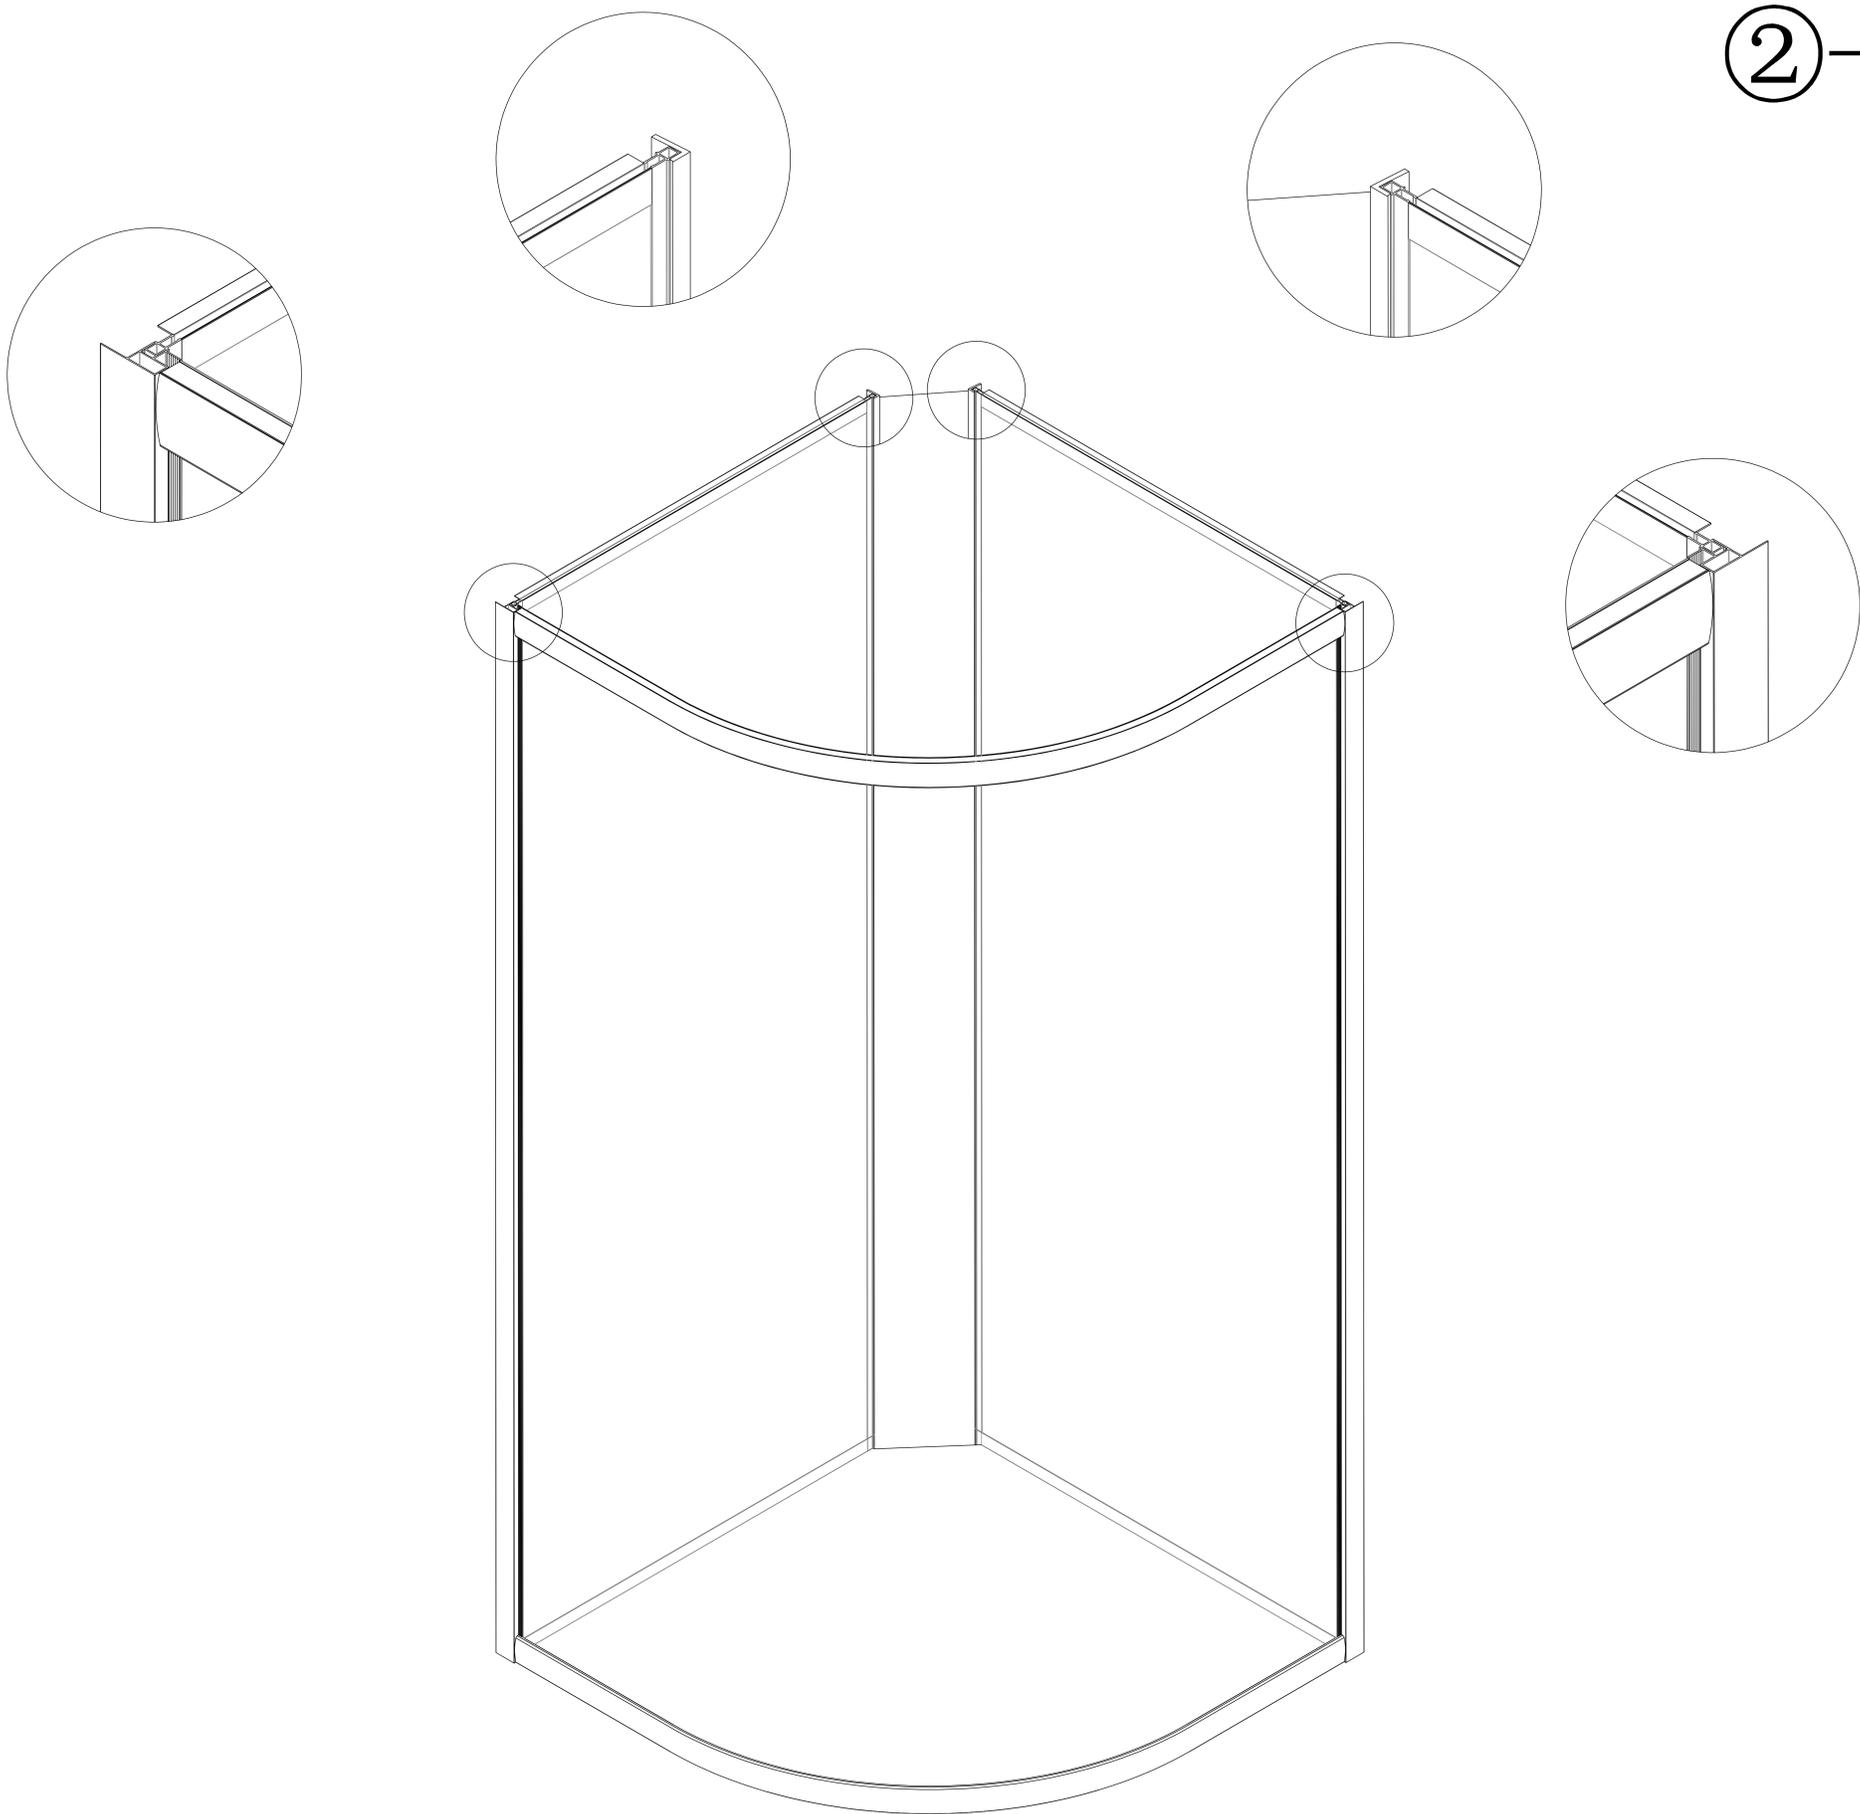

M4X10/12
G1 X8

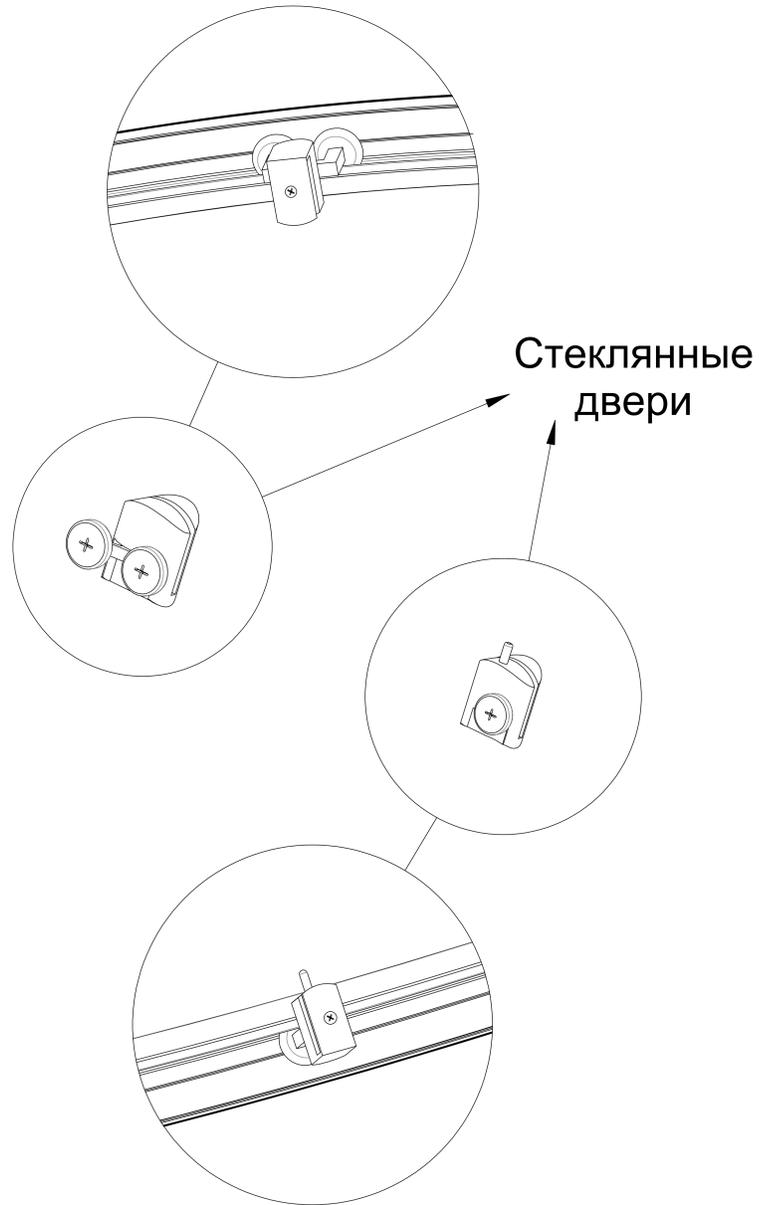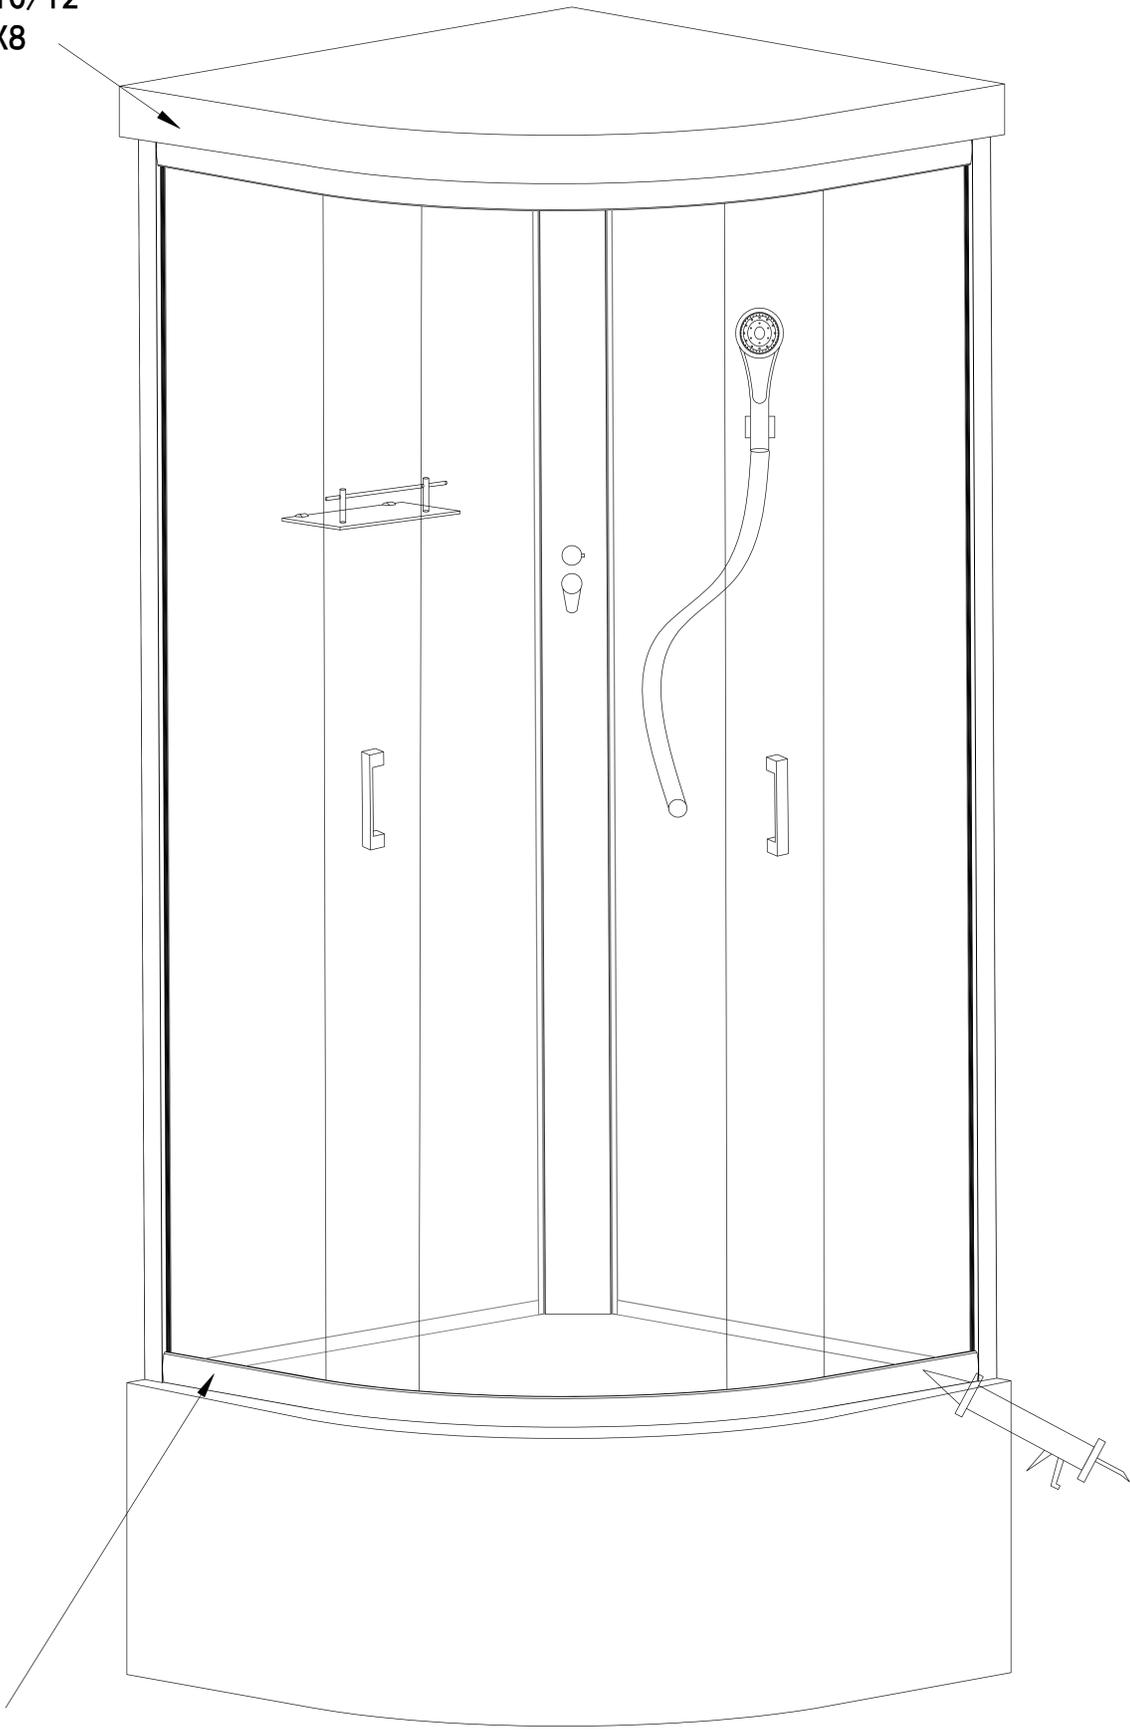

M4X10/12
G1 X8

99814