









Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Volvo S80 II 03.06 →
Volvo XC 70 08.07 →
Volvo V70 08.07 →
Land Rover
Freelancer 01.07 →



The Perfect Change.

80000713 / 80000712
CC1264 / CP1264
MC 808 / MP 308

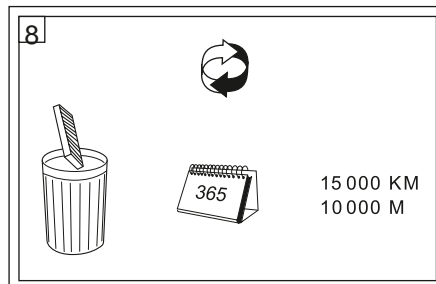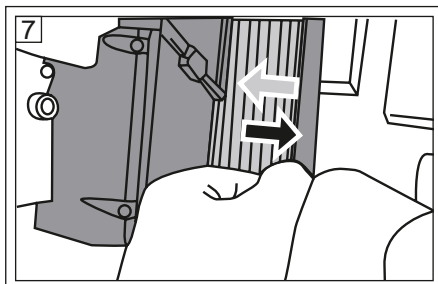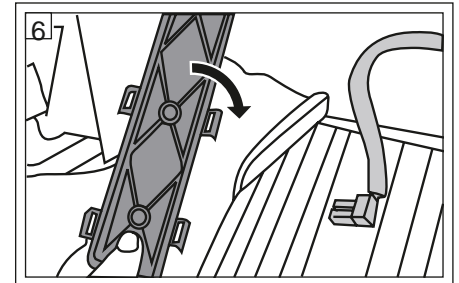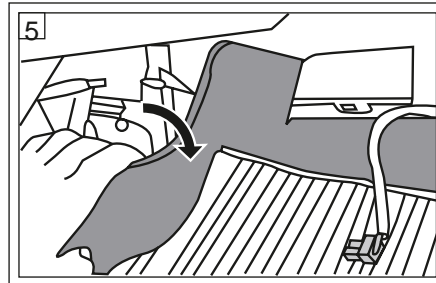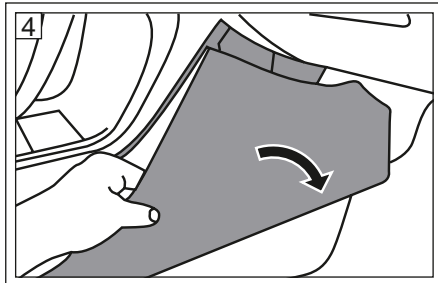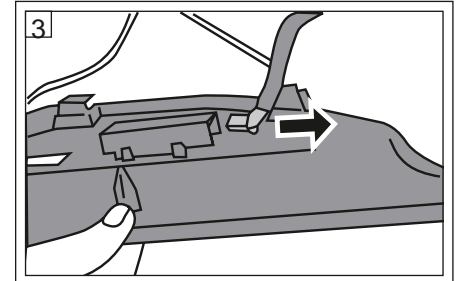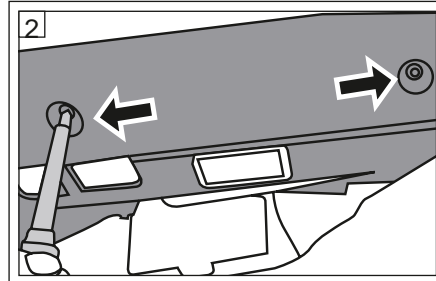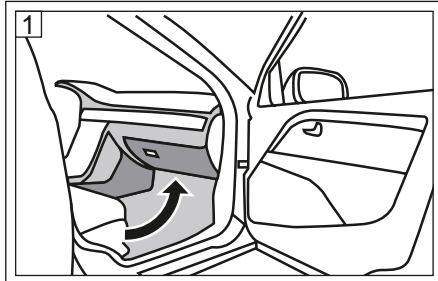

© by Freudenberg Vliesstoffe KG 2008

micronAir™