







Einbauanleitung
 Fitting instructions
 Istruzioni di montaggio
 Notice de montage
 Instrucciones de montaje
 Monteringsanvisning

Hyundai XG 30/300 98 →
 Hyundai Santa Fé 01 →
 Hyundai Sonanta 98 →
 Hyundai Trajet 00 →
 Kia Magentis 01 →
 Kia Sorento 02 →



The Perfect Change.

80000402 / 80000158
 CC1171 / CP1171
 MC 704 / MP 204

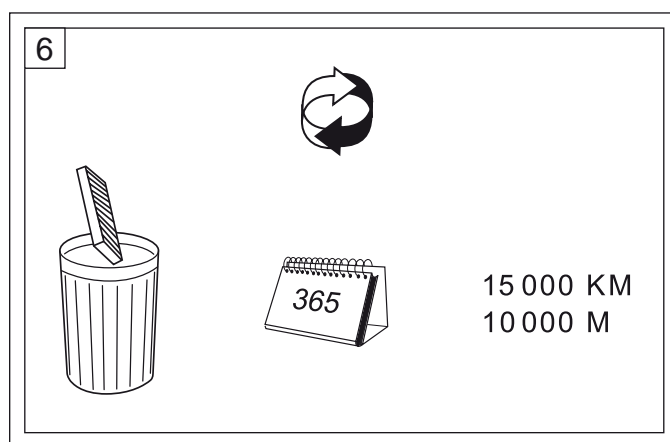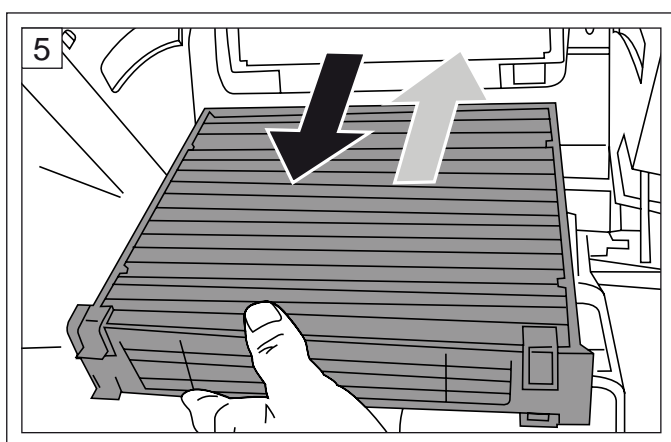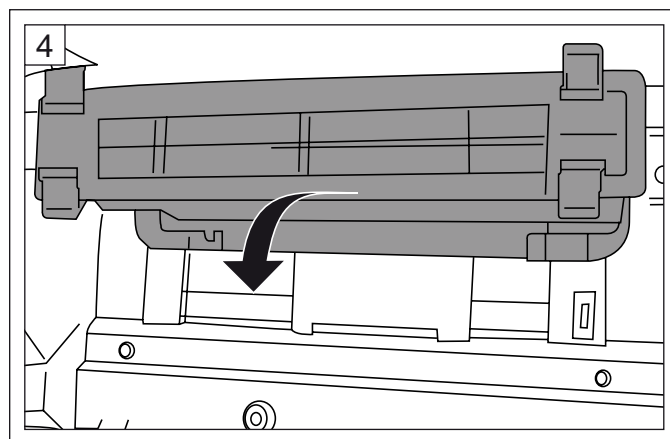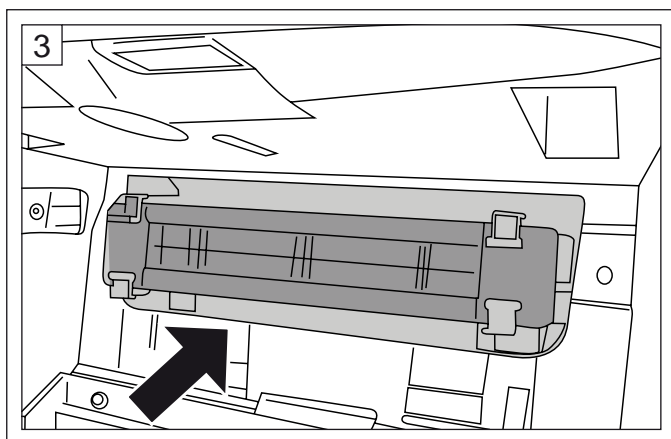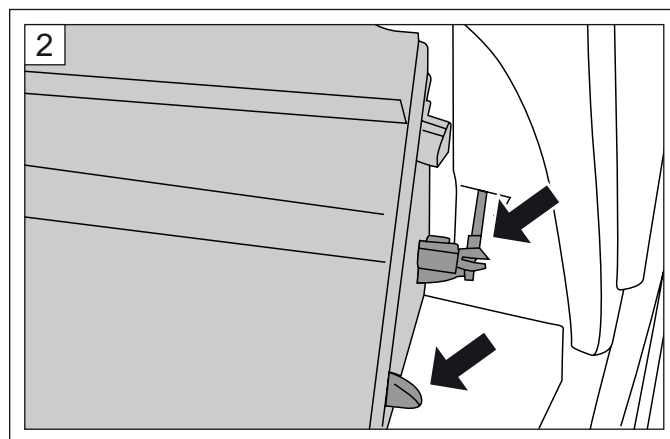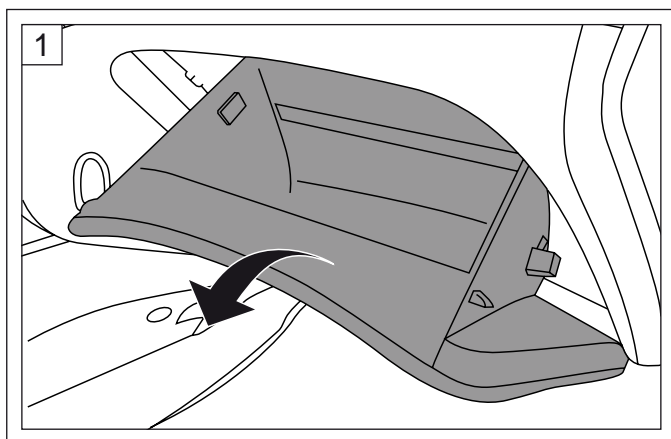

© by Freudenberg Vliesstoffe KG 2008

