






Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Dodge Sprinter 06.05 →
Mercedes-Benz
Sprinter NCV3 06.05 →
Volkswagen
Crafter LT 3 06.05 →



The Perfect Change.

80000616 / 80000614
CC1233 / CP1233
MC 677 / MP 177

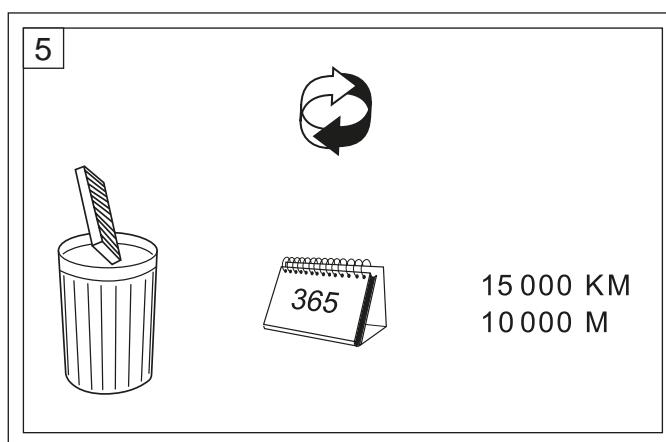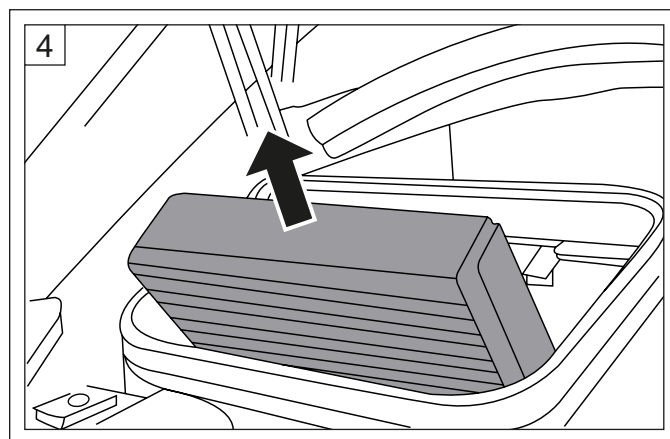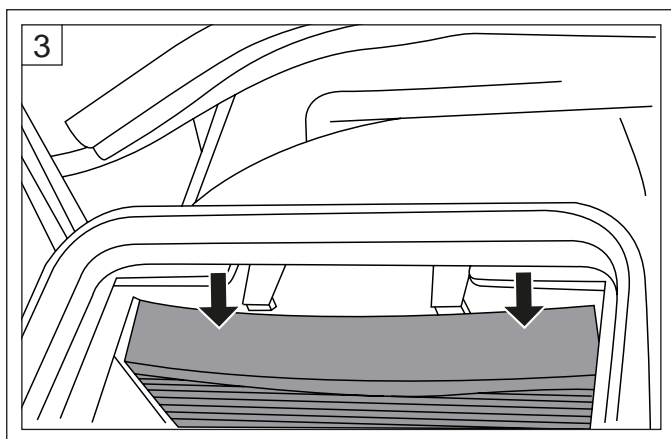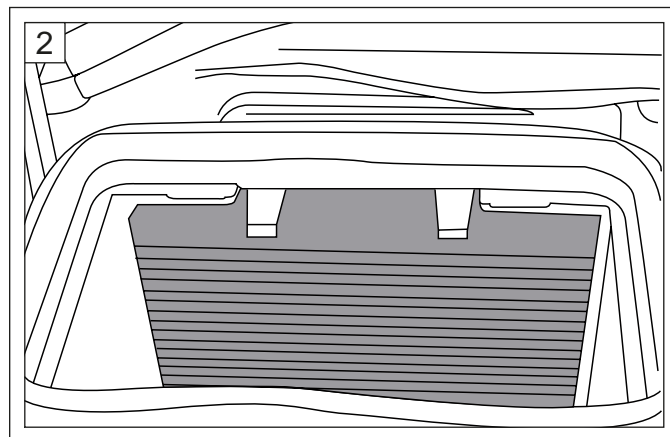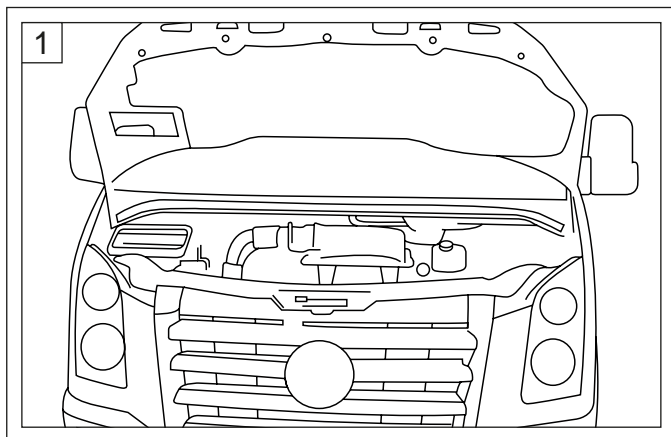

© by Freudenberg Vliesstoffe KG 2008

