








Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Nissan Pathfinder 01.05 →
Nissan Navara 07.05 →



The Perfect Change.

80000786 / 80000649
CC1250 / CP1250
MC 766 / MP 266

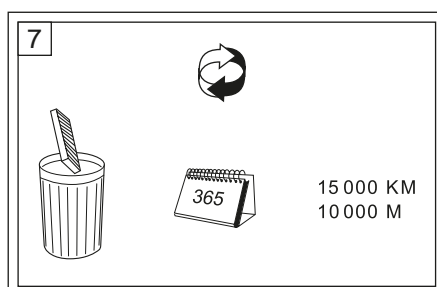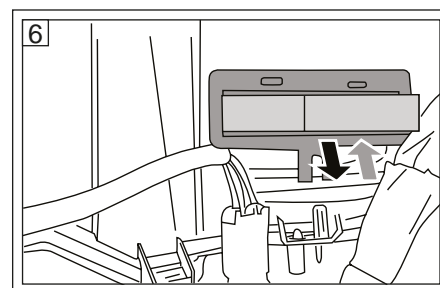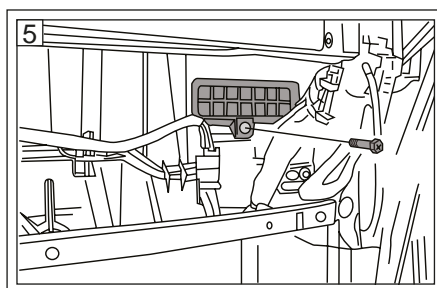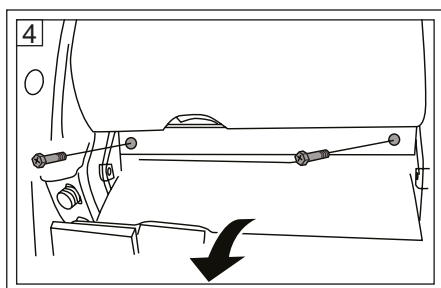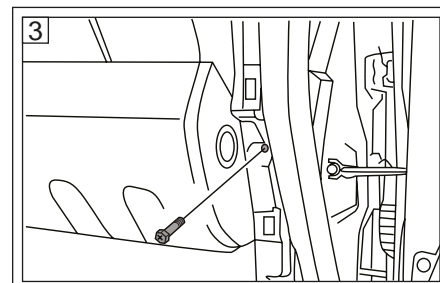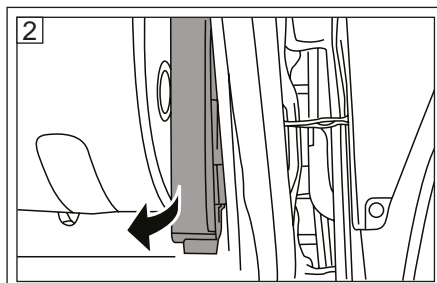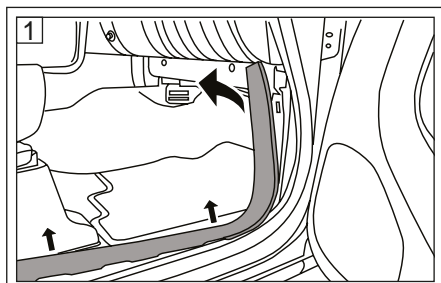

© by Freudenberg Vliesstoffe KG 2008

