





Einbauanleitung  
Fitting instructions  
Istruzioni di montaggio  
Notice de montage  
Instrucciones de montaje  
Monteringsanvisning

Citroen Jumper 04.06 →  
Fiat Ducato 06.06 →  
Peugeot Boxer 04.06 →



The Perfect Change.

80000816 / 80000815  
CC1278 / CP1278  
MC762 / MP 262

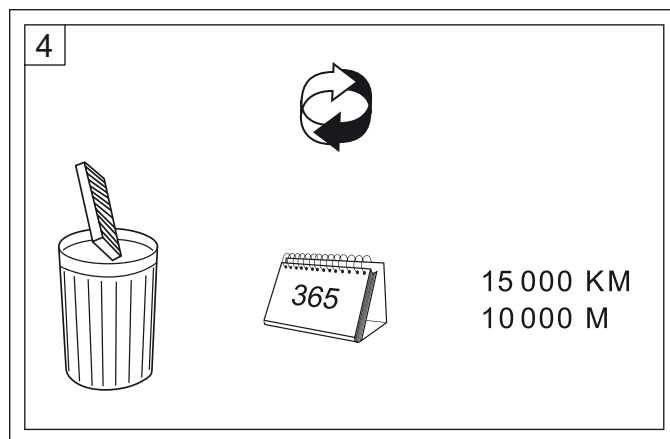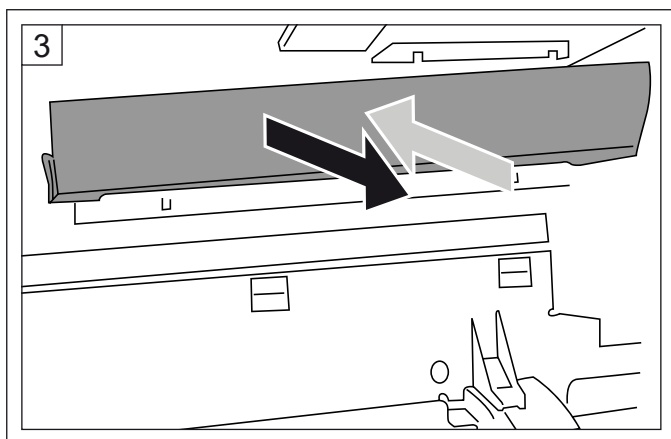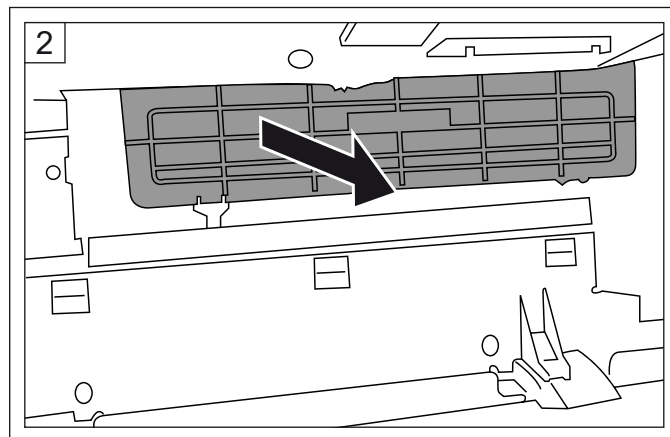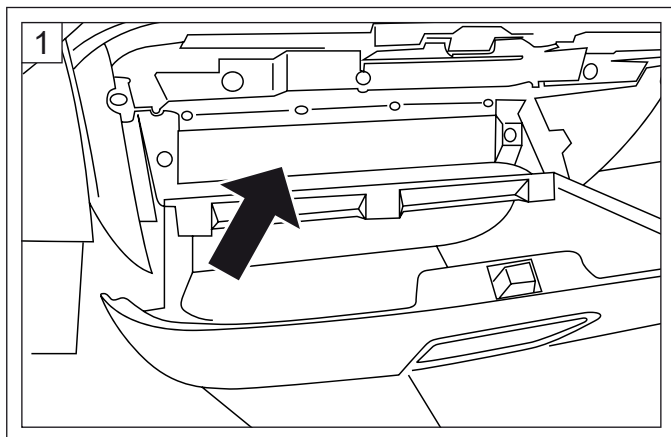

© by Freudenberg Vliesstoffe KG 2008

