










Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Citroen C4 Picasso 06 →
Citroen Belingo 03.08 →
Peugeot Partner 03.08 →



The Perfect Change.

80000615 / 80000839
CC1282 / CP1282
MC 701-2 / MP 201-2

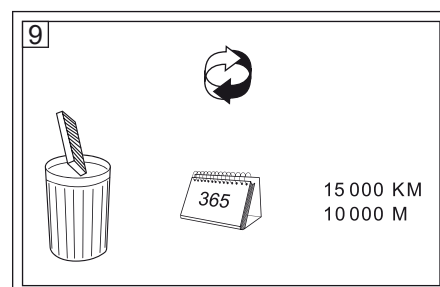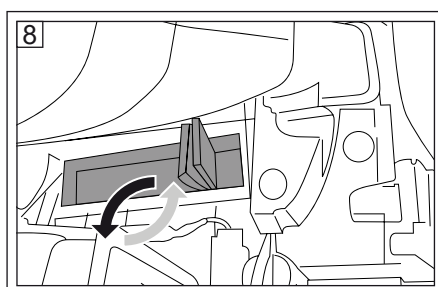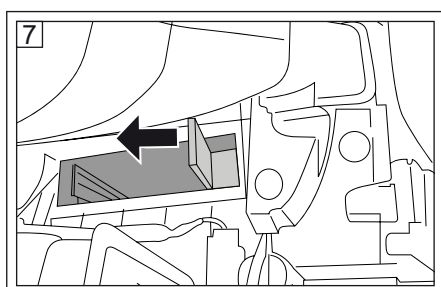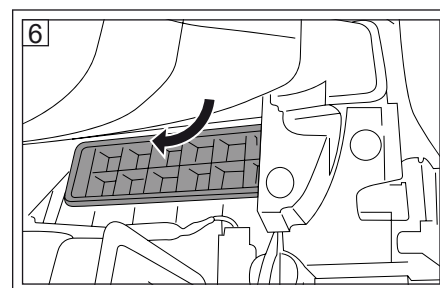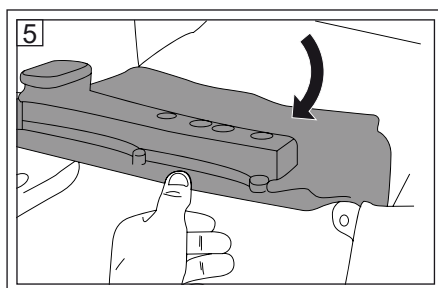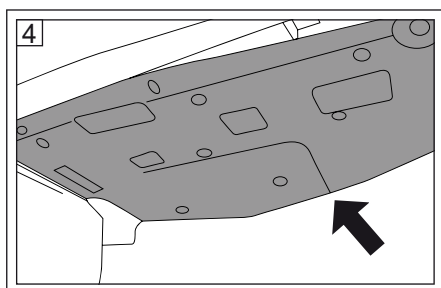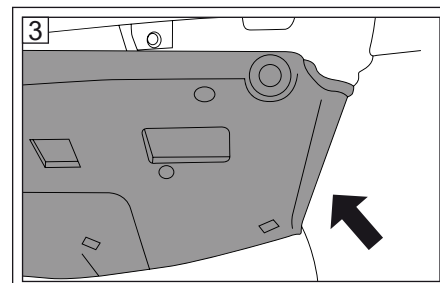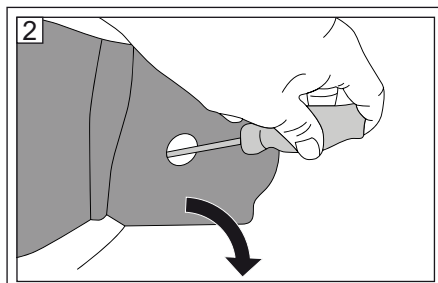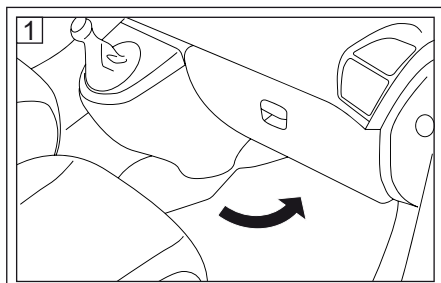

© by Freudenberg Vliesstoffe KG 2008

