







Einbauanleitung  
Fitting instructions  
Istruzioni di montaggio  
Notice de montage  
Instrucciones de montaje  
Monteringsanvisning

Nissan Quashqai 02.07→  
Nissan X-Trail 07.07→



The Perfect Change.

80000875 / 80000874  
CC1286 / CP1286  
MC 770 / MP 270

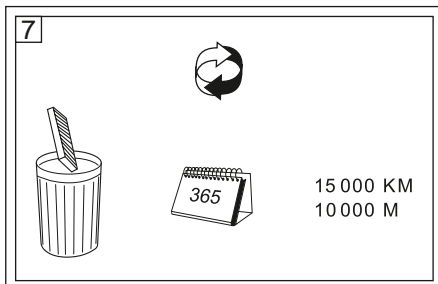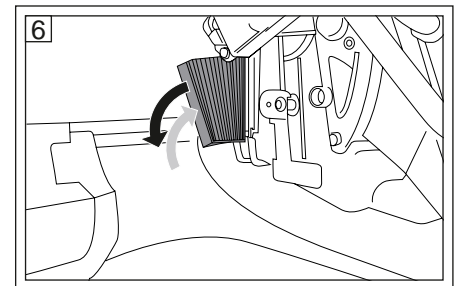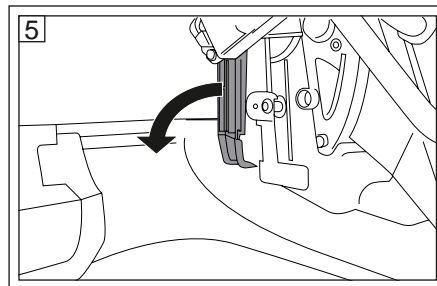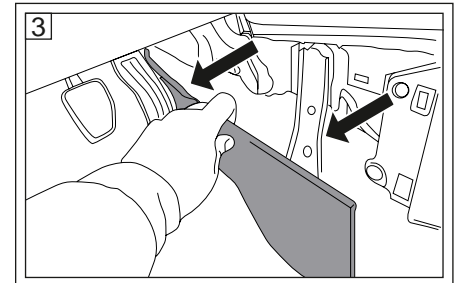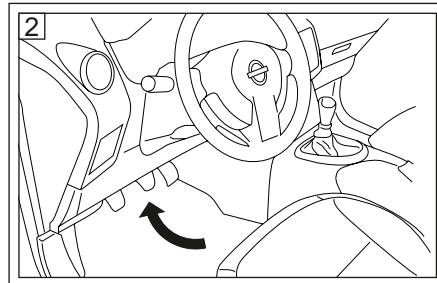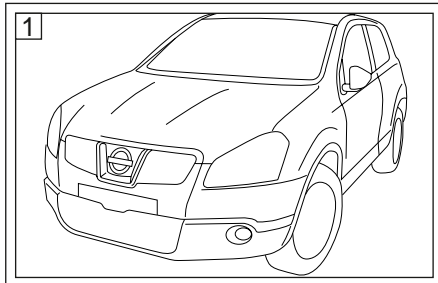

© by Freudenberg Vliesstoffe KG 2008

