







Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Ford C Max 09.10 →
Ford Focus III 03.11 →
Ford Grand C max 09.10 →



The Perfect Change.

80001773 / 80001772
CC1432 / CP1432
MC 898 / MP398

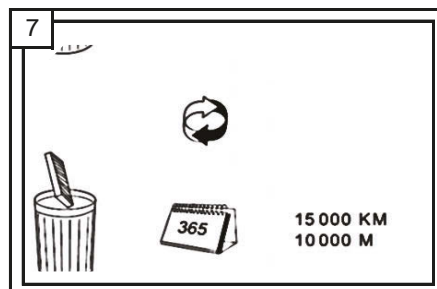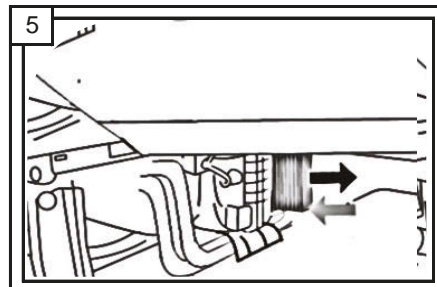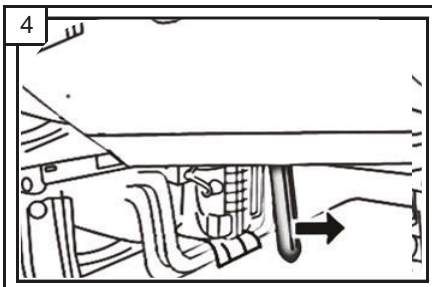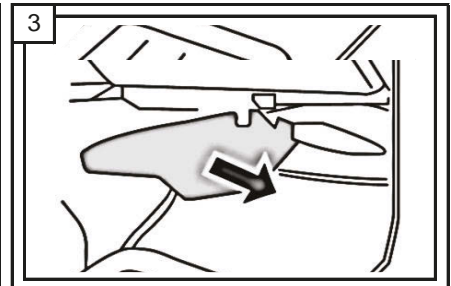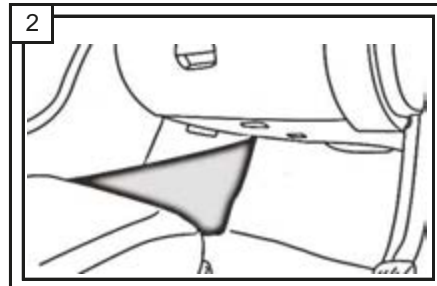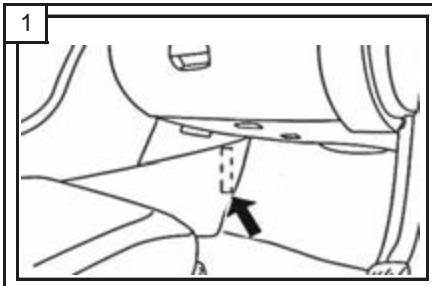

© by Freudenberg Filtration Technologies SE & Co. KG 2012

