







Einbauanleitung
Fitting instructions
Istruzioni di montaggio
Notice de montage
Instrucciones de montaje
Monteringsanvisning

Nissan Quashqai 02.07→
Nissan X-Trail 07.07→



The Perfect Change.

80000875 / 80000874
CC1286 / CP1286
MC 770 / MP 270

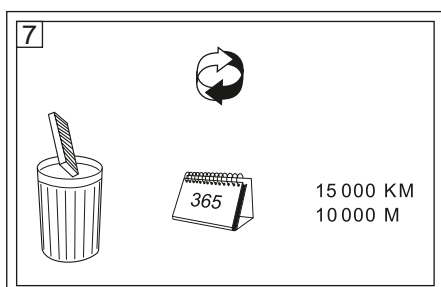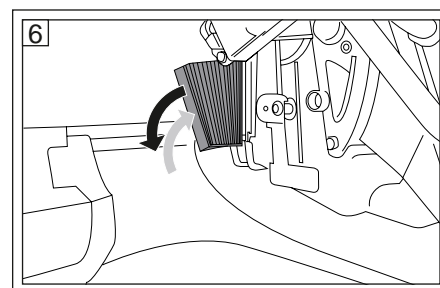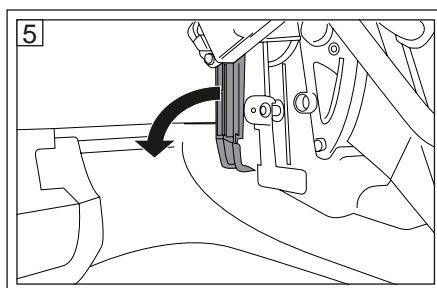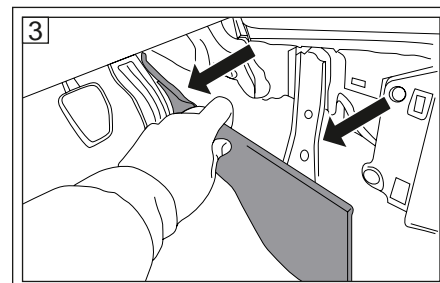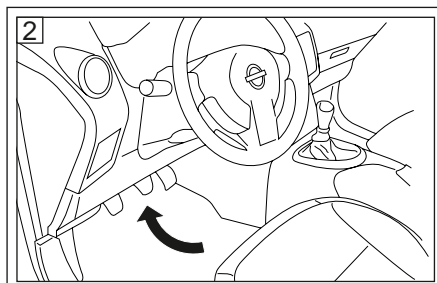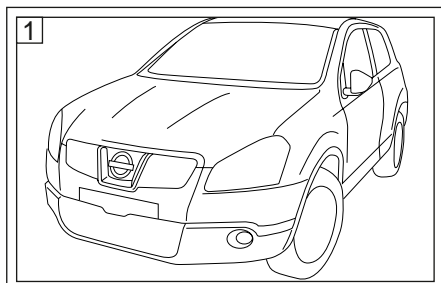

© by Freudenberg Vliesstoffe KG 2008

