






- IT** **Motosega a catena alimentata a batteria portatile**  
MANUALE DI ISTRUZIONI  
ATTENZIONE: prima di usare la macchina, leggere attentamente il presente libretto.
- BG** **Моторен верижен трион захранван с преносима акумулаторна батерия**  
УПЪТВАНЕ ЗА УПОТРЕБА  
ВНИМАНИЕ: преди да използвате машината прочетете внимателно настоящата книжка.
- BS** **Ručna lančana motorna pila na bateriju**  
UPUTSTVO ZA UPOTREBU  
PAŽNJA: prije nego što koristite ovu mašinu, pažljivo pročitajte priručnik s uputama.
- CS** **Prenosná akumulátorová řetězová motorová pila**  
NÁVOD K POUŽITÍ  
UPOZORNĚNÍ: před použitím stroje si pozorně přečtěte tento návod k použití.
- DA** **Bærbar batteridreven kædesav**  
BRUGSANVISNING  
ADVARSEL: læs instruktionsbogen omhyggeligt igennem, før du tager denne maskine i brug.
- DE** **Tragbare batteriebetriebene Kettensäge**  
GEBRAUCHSANWEISUNG  
ACHTUNG: vor Inbetriebnahme des Geräts die Gebrauchsanleitung aufmerksam lesen.
- EL** **Φορητό αλυσοπρίονο μπαταρίας**  
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ  
ΠΡΟΣΟΧΗ: πριν χρησιμοποιήσετε το μηχάνημα, διαβάστε προσεκτικά το παρόν εγχειρίδιο.
- EN** **Portable battery powered chainsaw**  
OPERATOR'S MANUAL  
WARNING: read thoroughly the instruction booklet before using the machine.
- ES** **Motosierra de cadena alimentada por batería portátil**  
MANUAL DE INSTRUCCIONES  
ATENCIÓN: antes de utilizar la máquina, leer atentamente el presente manual.
- ET** **Kaasakantav akutoitega kettsaag**  
KASUTUSJUHEND  
TÄHELEPANU: enne masina kasutamist lugeda tähepanelikult antud kasutusjuhendit.
- FI** **Käsin kannateltava akkukäyttöinen moottorisaha**  
KÄYTTÖOHJEET  
VAROITUS: lue käyttöopas huolellisesti ennen koneen käyttöä.
- FR** **Scie à chaîne alimentée par batterie portative**  
MANUEL D'UTILISATION  
ATTENTION: lire attentivement le manuel avant d'utiliser cette machine.
- HR** **Prijenosna motorna lančana pila s baterijskim napajanjem**  
PRIRUČNIK ZA UPORABU  
POZOR: prije uporabe stroja, pažljivo pročitajte ovaj priručnik.
- HU** **Hordozható akkumulátoros láncfűrész**  
HASZNÁLATI UTASÍTÁS  
FIGYELEM! a gép használatá előtt olvassa el figyelmesen a jelen kézikönyvet.
- LT** **Nešiojamas akumuliatorinis grandininis pjūklas**  
NAUDOJIMO INSTRUKCIJOS  
DĖMESIO: prieš naudojant įrenginį, atidžiai perskaityti šį naudotojo vadovą.
- LV** **Ar bateriju darbināms portatīvs ķēdes zāģis**  
LIETOŠANAS INSTRUKCIJA  
UZMANĪBU: pirms aparāta lietošanai rūpīgi izlasiet doto instrukciju.
- MK** **Моторна пила на батерии**  
УПАТСТВА ЗА УПОТРЕБА  
ВНИМАНИЕ: прочитајте го внимателно ова упатство пред да ја користите машината.
- NL** **Kettingzaag met accuvoeding**  
GEBRUIKERSHANDLEIDING  
LET OP: vooraleer de machine te gebruiken, dient men deze handleiding aandachtig te lezen.
- NO** **Bærbar batteridrevet kjedesag**  
INSTRUKSJONSBOK  
ADVARSEL: les denne bruksanvisningen nøye før du bruker maskinen.
- PL** **Przenośna pilarka łańcuchowa z zasilaniem akumulatorowym**  
INSTRUKCJE OBSŁUGI  
OSTRZEŻENIE: przed użyciem maszyny, należy uważnie przeczytać niniejszą instrukcję.


- PT** **Motosserra alimentada por bateria portátil**  
MANUAL DE INSTRUÇÕES  
ATENÇÃO: antes de usar a máquina, leia atentamente o presente manual.
- RO** **Ferăstrău cu lanț alimentat cu baterie portabilă**  
MANUAL DE INSTRUCȚIUNI  
ATENȚIE: înainte de a utiliza mașina, citiți cu atenție manualul de față.
- RU** **Портативная цепная пила с батарейным питанием**  
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ  
ВНИМАНИЕ: прежде чем пользоваться оборудованием, внимательно прочтите это руководство по эксплуатации.
- SK** **Preenosná akumulátorová reťazová motorová píla**  
NÁVOD NA POUŽITIE  
UPOZORNENIE: pred použitím stroja si pozorne prečítajte tento návod.
- SL** **Preenosna akumulatorska verižna žaga**  
PRIROČNIK ZA UPORABO  
POZOR: preden uporabite stroj, pazljivo preberite priročnik z navodili.
- SR** **Ručna lančana motorna testera na bateriju**  
PRIRUČNIK SA UPUTSTVIMA  
PAŽNJA: pre korišćenja mašine pažljivo pročitati ovaj priručnik.
- SV** **Batteridrivnen bärbar kedjesåg**  
BRUKSANVISNING  
VARNING: läs igenom hela detta häfte innan du använder maskinen.
- TR** **Batarya beslemeli taşınabilir zincirli testere**  
KULLANIM KILAVUZU  
DİKKAT: makineyi kullanmadan önce talimatlar içeren kilavuzu dikkatle okuyun.







ITALIANO - Istruzioni Originali .....	<b>IT</b>
БЪЛГАРСКИ - Инструкция за експлоатация .....	<b>BG</b>
BOSANSKI - Prijevod originalnih uputa .....	<b>BS</b>
ČESKY - Překlad původního návodu k používání .....	<b>CS</b>
DANSK - Oversættelse af den originale brugsanvisning .....	<b>DA</b>
DEUTSCH - Übersetzung der Originalbetriebsanleitung .....	<b>DE</b>
ΕΛΛΗΝΙΚΑ - Μεταφραση των πρωτοτυπων οδηγιων .....	<b>EL</b>
ENGLISH - Translation of the original instruction .....	<b>EN</b>
ESPAÑOL - Traducción del Manual Original .....	<b>ES</b>
EESTI - Algupärase kasutusjuhendi tõlge .....	<b>ET</b>
SUOMI - Alkuperäisten ohjeiden käännös .....	<b>FI</b>
FRANÇAIS - Traduction de la notice originale .....	<b>FR</b>
HRVATSKI - Prijevod originalnih uputa .....	<b>HR</b>
MAGYAR - Eredeti használati utasítás fordítása .....	<b>HU</b>
LIETUVIŠKAI - Originalių instrukcijų vertimas .....	<b>LT</b>
LATVIEŠU - Instrukciju tulkojums no oriģināl valodas .....	<b>LV</b>
МАКЕДОНСКИ - Превод на оригиналните упатства .....	<b>MK</b>
NEDERLANDS - Vertaling van de oorspronkelijke gebruiksaanwijzing .....	<b>NL</b>
NORSK - Oversettelse av den originale bruksanvisningen .....	<b>NO</b>
POLSKI - Tłumaczenie instrukcji oryginalnej .....	<b>PL</b>
PORTUGUÊS - Tradução do manual original .....	<b>PT</b>
ROMÂN - Traducerea manualului fabricantului .....	<b>RO</b>
РУССКИЙ - Перевод оригинальных инструкций .....	<b>RU</b>
SLOVENSKY - Preklad pôvodného návodu na použitie .....	<b>SK</b>
SLOVENŠČINA - Prevod izvirnih navodil .....	<b>SL</b>
SRPSKI - Prevod originalnih uputstva .....	<b>SR</b>
SVENSKA - Översättning av bruksanvisning i original .....	<b>SV</b>
TÜRKÇE - Oriiinal Talimatların Tercümesi .....	<b>TR</b>







1

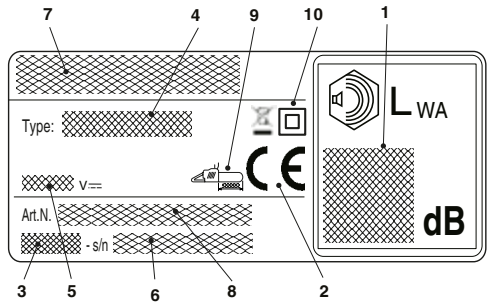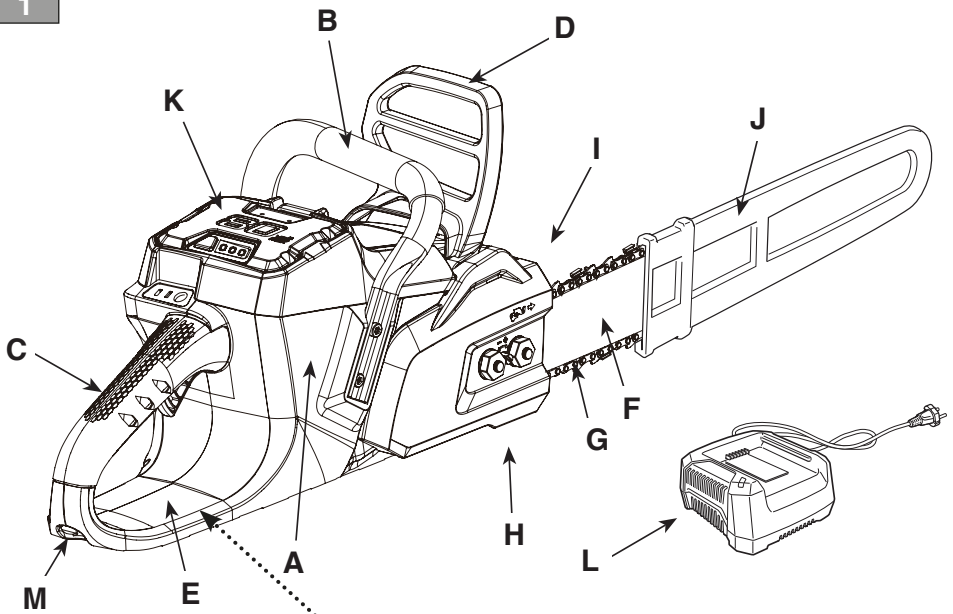


2

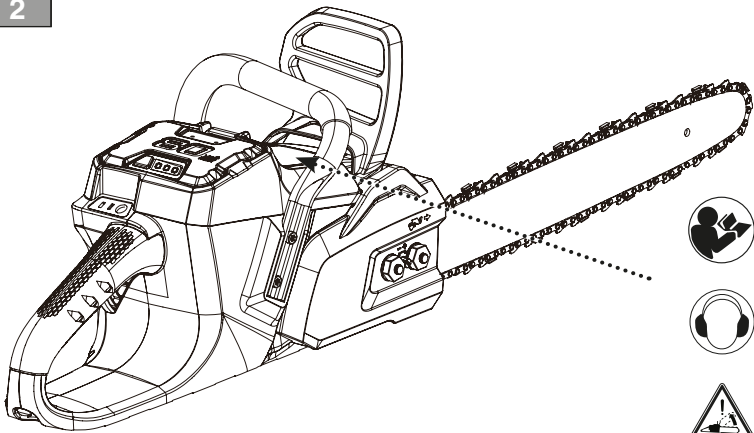

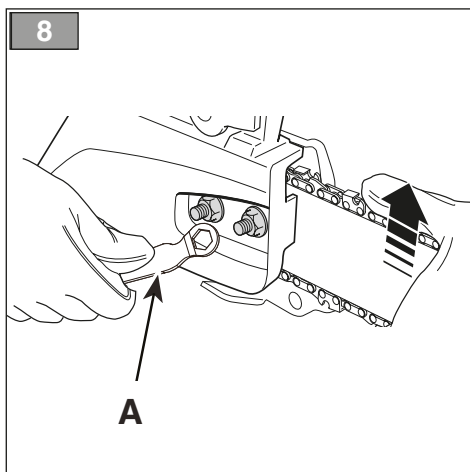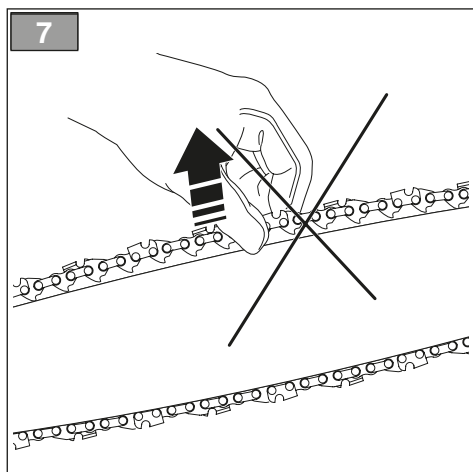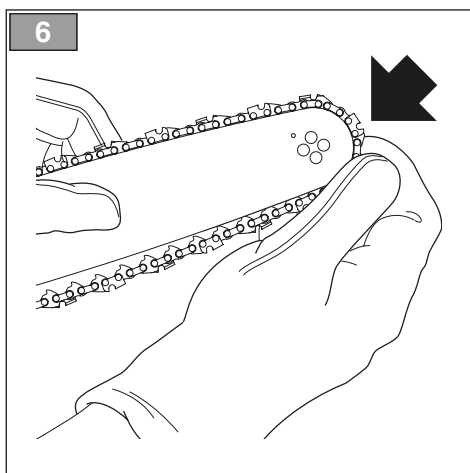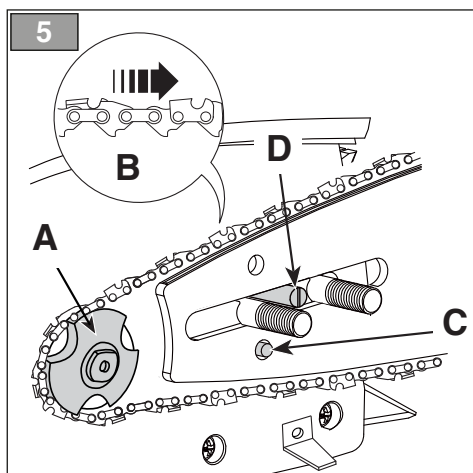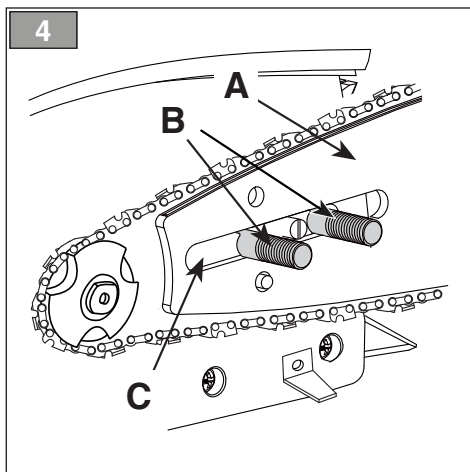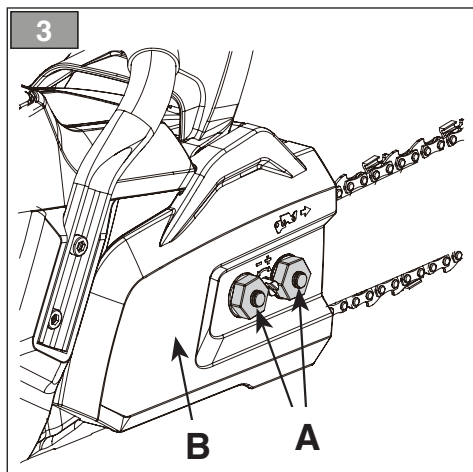


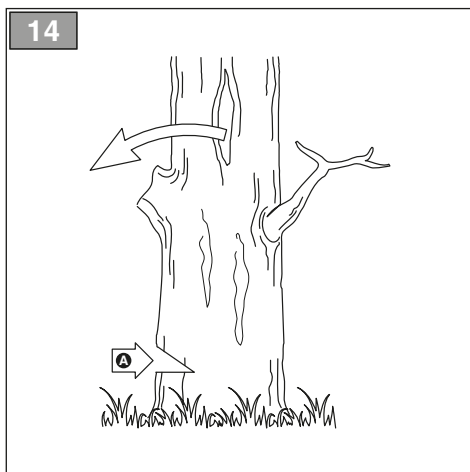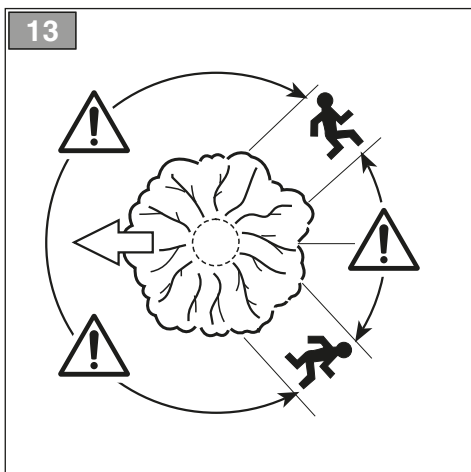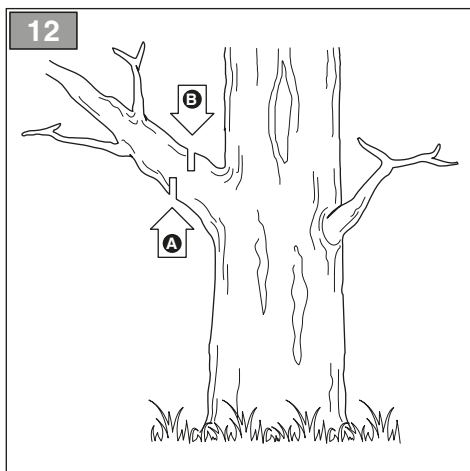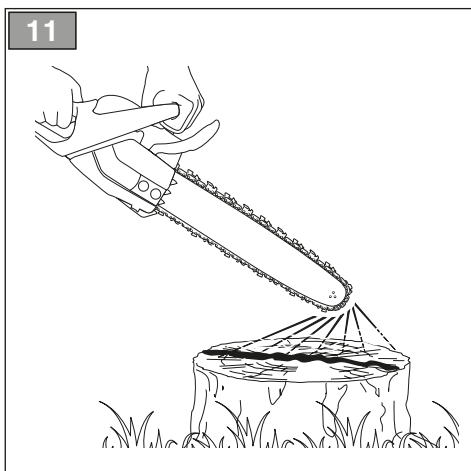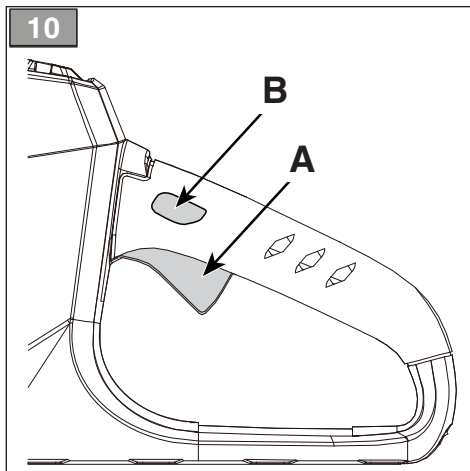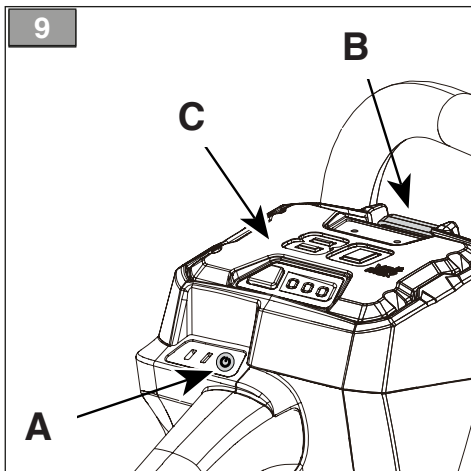


15

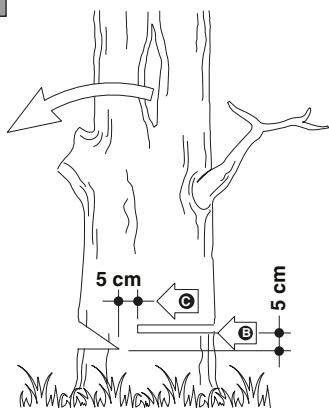


16

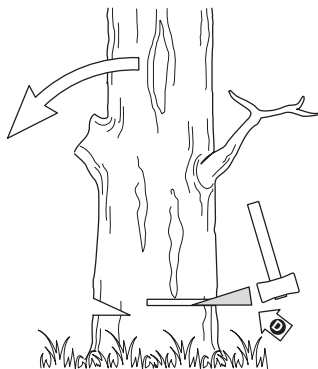


17

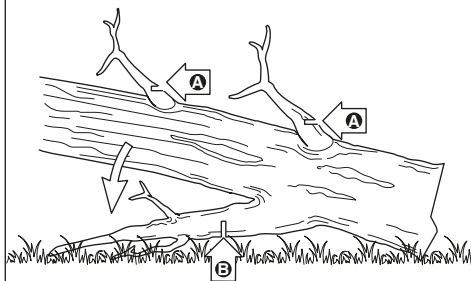


18

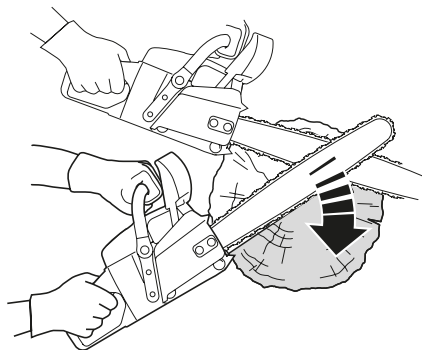


19

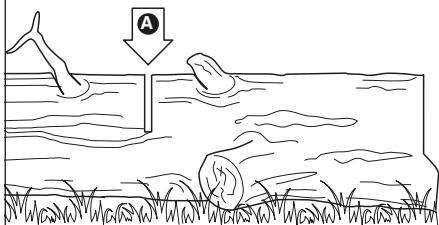


20

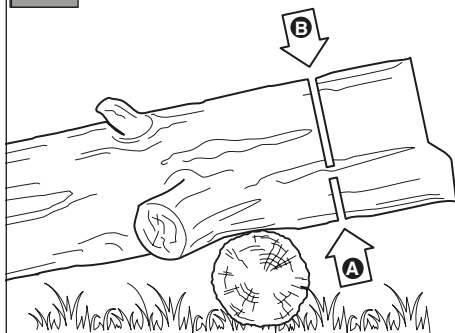


21

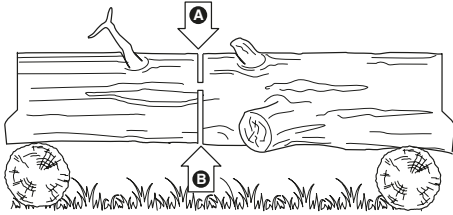


22

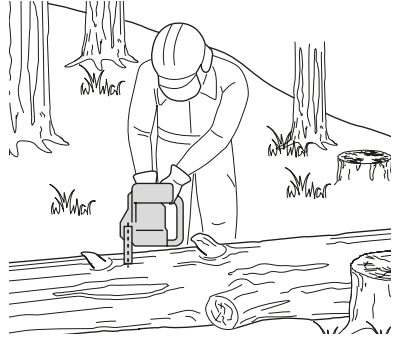


23

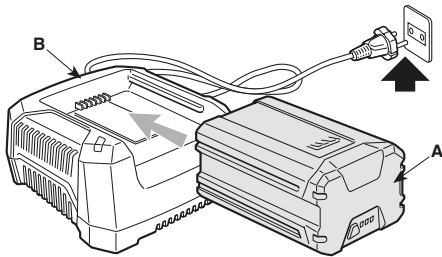


24

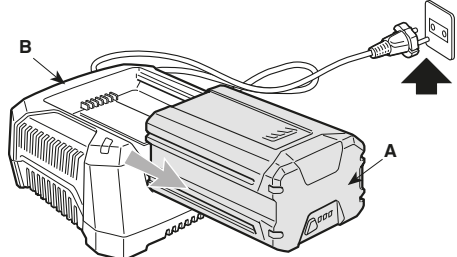

25

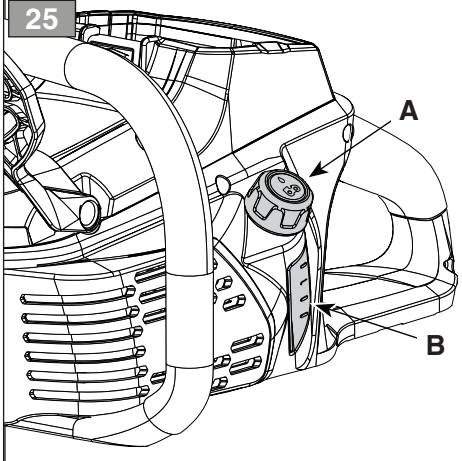


26

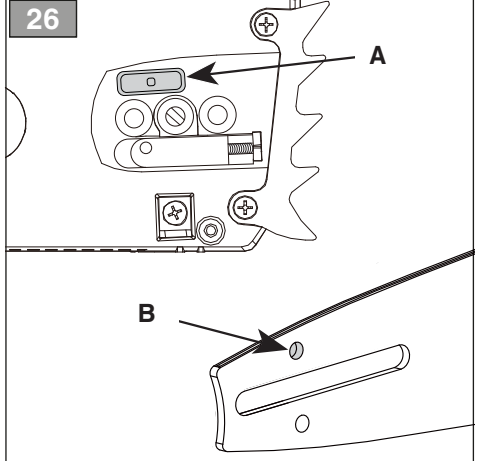





27

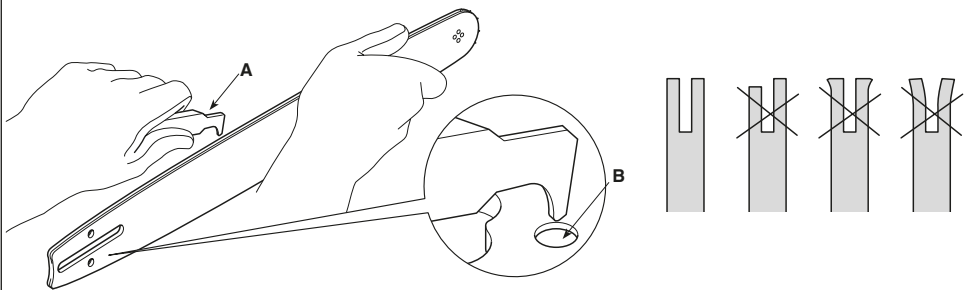


28

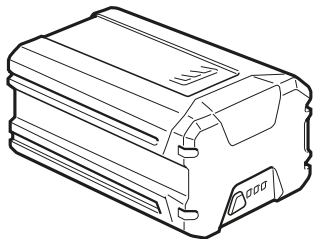

29

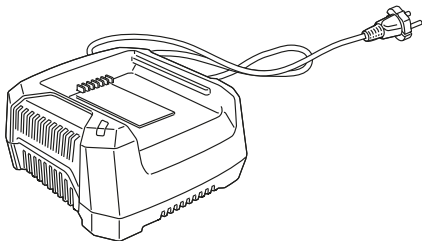

30

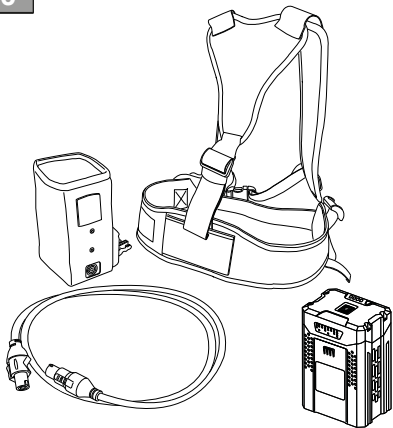

[1]	DATI TECNICI		CS 80 Li
[2]	Tensione e frequenza di alimentazione MAX	V / DC	80
[3]	Tensione e frequenza di alimentazione NOMINAL	V / DC	72
[4]	Velocità massima della catena	m/s	11,2
[5]	Lunghezza barra di guida	mm	406
[6]	Capacità del serbatoio dell'olio	ml	180
[7]	Spessore Catena	mm	0,050"/ 1,27 mm
[8]	Denti / passo del pignone catena		6 / 0,375"
[9]	Peso senza gruppo batteria	kg	4,5
[10]	Livello di pressione acustica misurato	dB(A)	89,8
[11]	Incertezza di misura	dB(A)	3
[12]	Livello di potenza acustica misurato	dB(A)	96,9
[11]	Incertezza di misura	dB(A)	3
[13]	Livello di potenza acustica garantito	dB(A)	99
[14]	Livello di vibrazioni		
[15]	- Impugnatura anteriore	m/s <sup>2</sup>	4,18
[16]	- Impugnatura posteriore	m/s <sup>2</sup>	3,37
[11]	Incertezza di misura	m/s <sup>2</sup>	1,5

[17]	ACCESSORI A RICHIESTA		
[18]	Gruppo batteria, mod.		BT 80 Li 2.5 BT 80 Li 4.0 (*) BT 80 Li 5.0 (*)
[19]	Carica batteria		CGF 80 Li
[20]	Imbracatura porta batteria		BB 80 Li

(\*) L'utilizzo di questa batteria è consentito solo con l'imbracatura porta batteria. E' vietato inserire la batteria nell'alloggiamento sulla macchina.

a) **NOTA:** il valore totale dichiarato delle vibrazioni è stato misurato attenendosi ad un metodo normalizzato di prova e può essere utilizzato per fare un paragone tra un utensile e l'altro. Il valore totale delle vibrazioni può essere utilizzato anche in una valutazione preliminare dell'esposizione.

b) **AVVERTENZA:** l'emissione di vibrazioni nell'uso effettivo dell'utensile può essere diversa dal valore totale dichiarato a seconda dei modi in cui si utilizza l'utensile. Pertanto è necessario, durante il lavoro, adottare le seguenti misure di sicurezza volte a proteggere l'operatore: indossare guanti durante l'uso, limitare i tempi d'utilizzo della macchina e accorciare i tempi in cui si tiene premuta la leva comando acceleratore.

[22] TABELLA PER LA CORRETTA COMBINAZIONE DI BARRA E CATENA (Cap. 16.4)					
[23] PASSO	[24] BARRA			[25] CATENA	[26] MODELLO
[27] Pollici	[28] Lunghezza: Pollici / cm	[29] Larghezza scanalatura: Pollici / mm	[30] Codice	[30] Codice	CS 80 LI
3/8"	16" / 40 cm	0,050" / 1,3	160SDEA041	91PX056X	✓

<p>[1] <b>BG - ТЕХНИЧЕСКИ ДАННИ</b> МАХ напрежение и честота на захранване</p> <p>[3] <b>НОМИНАЛНО</b> напрежение и честота на захранване</p> <p>[4] Максимална скорост на веригата</p> <p>[5] Дължина на направляваща шина</p> <p>[6] Вместимост на резервоара на масло</p> <p>[7] Дебелина веригата</p> <p>[8] Зъбци / стълка на пиньона на предавателна верига</p> <p>[9] Тегло без блока на акумулатора</p> <p>[10] Измерено ниво на акустична мощност.</p> <p>[11] Измервателна грешка</p> <p>[12] Ниво на измерената звукова мощност</p> <p>[13] Измервателна грешка</p> <p>[14] Гарантирано ниво на акустична мощност</p> <p>[14] Ниво на вибрации</p> <p>[15] - Предна дръжка</p> <p>[16] - Задна дръжка</p> <p>[11] Измервателна грешка</p> <p>[17] <b>ПРИНАДЛЕЖНОСТИ ПО ЗАЯВКА</b></p> <p>[18] Блок на акумулатора, мод.</p> <p>[19] Зарядно устройство за акумулатора</p> <p>[20] Приспособление за закачане на акумулатор</p> <p>[22] <b>ТАБЛИЦА ЗА ПРАВИЛНА КОМБИНАЦИЯ ОТ ШИНА И ВЕРИГА (Гл. 16)</b></p> <p>[23] Стълка</p> <p>[24] Шина</p> <p>[25] Верига</p> <p>[26] Модел</p> <p>[27] Инчове</p> <p>[28] Дължина: Инчове / см</p> <p>[29] Ширина жлеб: Инчове / мм</p> <p>[30] Код</p>	<p>(*) Използването на този акумулатор е позволено само с ремъци и въжета за носене на акумулатор. Забранено е поставянето на акумулатора в гнездото върху машината.</p> <p>a) ЗАБЕЛЕЖКА: декларираната обща стойност на вибрации е измерена при държайки се към стандартизиран метод на изпитване и може да се използва за правене на сравнение между един и друг инструмент. Общата стойност на вибрации може да се използва и за предвадителна оценка на излагането.</p> <p>b) ПРЕДУПРЕЖДЕНИЕ: издаването на вибрации при реалното използване на инструмента може да бъде различна от общата декларирана стойност, в зависимост от начините на използване на инструмента. Поради това е необходимо по време на работа да се вземат следните предпазни мерки целящи предпазването на оператора: носете ръкавици по време на използването, ограничете времената на използване на машината и намалете времената, през които се държи натиснат лоста за управление на ускорителя.</p> <p>[1] <b>BS - ТЕХНИЧКИ ПОДАЦИ</b></p> <p>[2] МАКС. напон и фреквенция напаяния</p> <p>[3] НАЗИВНИ напон и фреквенция напаяния</p> <p>[4] Максимална brzina lanca</p> <p>[5] Dužina vodilice lanca</p> <p>[6] Kapacitet spremnika za ulje</p> <p>[7] Debljina lanca</p> <p>[8] Zubi / korak zupčanika lanca</p> <p>[9] Dužina bez baterije</p> <p>[10] Izmjereni nivo zvučnog pritiska</p> <p>[11] Mjerna nesigurnost</p> <p>[12] Izmjereni nivo zvučne snage</p> <p>[11] Mjerna nesigurnost</p> <p>[13] Zajamčeni nivo zvučne snage</p>	<p>[14] Nivo vibracija</p> <p>[15] - Prednji rukohvat</p> <p>[16] - Zadnji rukohvat</p> <p>[11] Mjerna nesigurnost</p> <p>[17] DODATNA OPREMA NA ZAHITJEV</p> <p>[18] Baterija, mod.</p> <p>[19] Punjač baterije</p> <p>[20] Pojas za nošenje baterije</p> <p>[22] <b>TABLICA ZA ISPRAVNO KOMBINIRANJE VODILICA I LANCA (Pogl. 16)</b></p> <p>[23] KOŘAK</p> <p>[24] VODILICA LANCA</p> <p>[25] LANAC</p> <p>[26] MODEL</p> <p>[27] Inč</p> <p>[28] Dužina: Inč / cm</p> <p>[29] Širina žlijeba: Inč / mm</p> <p>[30] Sifra</p> <p>(*) <b>Upotreba ovog akumulatora dopuštena je samo s pojaskom za nošenje akumulatora (baterije). Zabranjeno je stavljati akumulator (bateriju) u kućište na mašini.</b></p> <p>a) <b>NAPOMENA:</b> ukupna prijavaena vrijednost vibracija izmjerena je prema normalizovanoj metodi ispitivanja i može se koristiti za vršenje poređenja između dvije alatke. Ukupna vrijednost vibracija može se koristiti i prilikom prethodne procjene izloženosti.</p> <p>b) <b>UPOZORENJE:</b> emisija vibracija prilikom stvarne upotrebe alatke može se razlikovati od ukupne prijavljene vrijednosti u zavisnosti od načina na koji se koristi alatka. Stoga je neophodno, za vrijeme rada, primijeniti slijedeće sigurnosne mjere za zaštitu radnika: koristiti rukavice za vrijeme upotrebe, ograničiti vrijeme upotrebe mašine i skratiti vrijeme za koje se drži pritisnuta poluga komande gasa.</p>
<p>[1] <b>CS - TECHNICKÉ PARAMETRY</b></p> <p>[2] MAX. napájecí napětí a frekvence</p> <p>[3] JMENOVITÉ napájecí napětí a frekvence</p> <p>[4] Maximální rychlost řetězu</p> <p>[5] Délka vodící lišty</p> <p>[6] Kapacita olejové nádrže</p> <p>[7] Ozubený řetěz</p> <p>[8] Vodící lišta</p> <p>[9] Hmotnost bez akumulátorové jednotky</p> <p>[10] Naměřená úroveň akustického tlaku</p> <p>[11] Nepřesnost měření</p> <p>[12] Naměřená úroveň akustického výkonu</p> <p>[11] Nepřesnost měření</p> <p>[13] Zaručená úroveň akustického výkonu</p> <p>[14] Úroveň vibrací</p> <p>[15] - Přední rukojeť</p> <p>[16] - Zadní rukojeť</p> <p>[11] Nepřesnost měření</p> <p>[17] <b>VOLITELNÉ PŘÍSLUŠENSTVÍ</b></p> <p>[18] Akumulátorová jednotka, mod.</p> <p>[19] Nabíječka akumulátorů</p> <p>[20] Opasek na akumulátor se závodými popruhy</p> <p>[22] <b>TABULKA PRO URČENÍ SPRÁVNÉ KOMBINACE VODICÍ LIŠTY A ŘETĚZU (kap. 16)</b></p> <p>[23] ŘOZTEČ</p> <p>[24] VODICÍ LIŠTA</p> <p>[25] ŘETĚZ</p> <p>[26] MODEL</p> <p>[27] Palce</p> <p>[28] Délka: Palce / cm</p> <p>[29] Šířka drážky: Palce / mm</p> <p>[30] Kód</p> <p>(*) <b>Použití tohoto akumulátoru je dovoleno pouze s opaskem na akumulátor se závodými popruhy. Je zakázáno vkládat akumulátor do uložení na stroji.</b></p>	<p>a) <b>POZNÁMKA:</b> prohlášená celková hodnota vibrací byla naměřena s použitím normalizované zkušební metody a lze ji použít pro srovnání jednotlivých nástrojů. Celková hodnota vibrací může být použita také při přípravě vyhodnocování vystavení vibracím.</p> <p>b) <b>VAROVÁNÍ:</b> emise vibrací při skutečném použití nástroje může být odlišná od prohlášené celkové hodnoty v závislosti na režimech, ve kterých se daný nástroj používá. Proto je třeba během práce přijmout níže uvedené bezpečnostní opatření, jejichž cílem je ochránit operátora: během běžného použití mějte nasazené rukavice, omezte dobu použití stroje a zkratěte dobu, během kteréž je zatlačena ovládací páka plynu.</p> <p>[1] <b>DA - TEKNISKE DATA</b></p> <p>[2] Maks. forsyningsspænding og -frekvens</p> <p>[3] Nominel forsyningsspænding og -frekvens</p> <p>[4] Maksimal kædehastighed</p> <p>[5] Sværdets længde</p> <p>[6] Olie tankens kapacitet</p> <p>[7] Tyk kæde</p> <p>[8] Antal tænder/deling på kædehjul</p> <p>[9] Batterihedens vægt</p> <p>[10] Målt lydtrykniveau</p> <p>[11] Usikkerhed ved målingen</p> <p>[12] Målt lydeffektniveau</p> <p>[11] Usikkerhed ved målingen</p> <p>[13] Garanteret lydeffektniveau</p> <p>[14] Vibrationsniveau</p> <p>[15] - Forreste håndtag</p> <p>[16] - Bagerste håndtag</p> <p>[11] Usikkerhed ved målingen</p>	<p>[17] <b>TILBEHØR</b></p> <p>[18] Batteriehjed, mod.</p> <p>[19] Batterioplader</p> <p>[20] Batteriholdersele</p> <p>[22] <b>TABEL TIL KORREKT KOMBINATION AF SVÆRD OG KÆDE (Kap. 16)</b></p> <p>[23] <b>MELLEMRUM</b></p> <p>[24] <b>SVÆRD</b></p> <p>[25] <b>KÆDE</b></p> <p>[26] <b>MODEL</b></p> <p>[27] Tommer</p> <p>[28] Længde: Tommer / cm</p> <p>[29] Sporbrede: Tommer / mm</p> <p>[30] Kode</p> <p>(*) <b>Brug af dette batteri er kun tilladt med batteriholderselen. Det er forbudt at indsætte batteriet i holderen på maskinen.</b></p> <p>a) <b>BEMÆRK:</b> den samlede erklærede værdi af vibrationer blev målt ifølge en standardiseret metode til afmåvning og kan bruges til at foretage en sammenligning mellem forskellige redskaber. Den samlede værdi af vibrationer kan også bruges til en indledende vurdering af eksponeringen.</p> <p>b) <b>ADVARSEL:</b> Den faktiske udsendelse af vibrationer fra værktøjet i forbindelse med brug kan afvige fra den samlede attesterede værdi afhængigt af den konkrete brug af værktøjet. Derfor er det nødvendigt, at man under arbejdet tager følgende sikkerhedsforanstaltninger for at beskytte brugeren. Bær handsker under brug, begræns den tid maskinen bruges og forkort den tid hvor gashåndtaget holdes indtrykket.</p>

<p>[1] <b>DE - TECHNISCHE DATEN</b></p> <p>[2] Netzspannung und -frequenz / Stromaufnahme MAX</p> <p>[3] Netzspannung und -frequenz / Stromaufnahme NOMINAL</p> <p>[4] Maximale Geschwindigkeit der Kette</p> <p>[5] Länge Führungsschwert</p> <p>[6] Fassungsvermögen Öltank (cm3)</p> <p>[7] Dicke der Kette</p> <p>[8] Zähne / Teilung des Kettenrads</p> <p>[9] Gewicht ohne Batterieeinheit</p> <p>[10] Gemessener Schalldruckpegel</p> <p>[11] Messungengenauigkeit</p> <p>[12] Gemessener Schalleistungspegel</p> <p>[11] Messungengenauigkeit</p> <p>[13] Garantierter Schalleistungspegel</p> <p>[14] Vibrationspegel</p> <p>[15] -Vorderer Handgriff</p> <p>[16] -Hinterer Handgriff</p> <p>[11] Messungengenauigkeit</p> <p>[17] SONDERZUBEHÖR</p> <p>[18] Batterieeinheit, Mod.</p> <p>[19] Batterieladegerät</p> <p>[20] Batterie-Tragegurt</p> <p>[22] TABELLE FÜR DIE KORREKTE KOMBINATION VON SCHWERT UND KETTE (Kap. 16)</p> <p>[23] GLIEDLÄNGE</p> <p>[24] SCHWERT</p> <p>[25] KETTE</p> <p>[26] MODELLE</p> <p>[27] Zoll</p> <p>[28] Länge: Zoll / cm</p> <p>[29] Nutbreite: Zoll / mm</p> <p>[30] Code</p> <p><b>(* Die Verwendung dieser Batterie ist nur mit dem Batterie-Tragegurt zulässig. Es ist verboten, die Batterie in das Fach auf der Maschine einzusetzen.</b></p>	<p>a) HINWEIS: Der erklärte Gesamtwert der Vibrationen wurde durch eine standardisierte Methode gemessen. Er kann verwendet werden, um einen Vergleich zwischen verschiedenen Werkzeugen anzustellen. Der Gesamtwert der Vibrationen kann auch bei einer Vorabewertung der Vibrationsbelastung eingesetzt werden.</p> <p>b) WARNUNG: Die Schwingungsemission bei der effektiven Verwendung des Werkzeugs kann sich je nach den Einsatzarten des Werkzeugs vom erklärten Gesamtwert unterscheiden. Deshalb ist es notwendig, während der Arbeit die folgenden Sicherheitsmaßnahmen zu ergreifen, um den Bediener zu schützen: Handschuhe während der Verwendung anziehen, die Einsatzzeiten der Maschine begrenzen und die Zeiten verkürzen, in denen man den Gashebel gedrückt hält.</p> <p>[1] <b>EL - ΤΕΧΝΙΚΑ ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ</b></p> <p>[2] Τάση και συχνότητα τροφοδοσίας ΜΕΓ.</p> <p>[3] Τάση και συχνότητα τροφοδοσίας ΟΝΟΜΑΣΤΙΚΗ</p> <p>[4] Μέγιστη ταχύτητα της αλυσίδας</p> <p>[5] Μήκος μπάρας οδηγός</p> <p>[6] Χωρητικότητα του δοχείου λαδιού</p> <p>[7] Οδοντωτή αλυσίδα</p> <p>[8] Μπάρα οδηγός</p> <p>[9] Βάρος χωρίς μπαταρία</p> <p>[10] Μετρημένη στάθμη ακουστικής πίεσης</p> <p>[11] Αβεβαιότητα μέτρησης</p> <p>[12] Μετρημένη στάθμη ακουστικής ισχύος</p> <p>[11] Αβεβαιότητα μέτρησης</p> <p>[13] Στάθμη εγγυώμενης ηχητικής ισχύος</p> <p>[14] Επίπεδο κραδασμών</p> <p>[15] -Εμπρός χειρολαβή</p>	<p>[16] - Πίσω χειρολαβή</p> <p>[11] Αβεβαιότητα μέτρησης</p> <p>[17] ΠΡΟΑΙΡΕΤΙΚΑ ΑΞΕΣΟΥΡΑ</p> <p>[18] Μπαταρία, μοντ.</p> <p>[19] Φορτιστής Μπαταρίας</p> <p>[20] Εξάρτηση για μπαταρία</p> <p>[22] ΠΙΝΑΚΑΣ ΓΙΑ ΤΟ ΣΩΣΤΟ ΣΥΝΔΥΑΣΜΟ ΜΠΑΡΑΣ ΚΑΙ ΑΛΥΣΙΔΑΣ (Κεφ. 16)</p> <p>[23] ΒΉΜΑ</p> <p>[24] ΛΑΜΑ</p> <p>[25] ΑΛΥΣΙΔΑ</p> <p>[26] ΜΟΝΤΕΛΟ</p> <p>[27] Ίντσες</p> <p>[28] Μήκος: Ίντσες / cm</p> <p>[29] Εγκοπτής: Ίντσες / mm</p> <p>[30] Κωδικός</p> <p><b>(* Η χρήση αυτής της μπαταρίας επιτρέπεται μόνο με την εξάρτηση για μπαταρία. Απαγορεύεται η τοποθέτηση της μπαταρίας στην υποδοχή του μηχανήματος.</b></p> <p>a) ΣΗΜΕΙΩΣΗ: η συνολική δηλωμένη τιμή των κραδασμών έχει μετρηθεί με βάση μια πρότυπη μέθοδο δοκιμής και μπορεί να χρησιμοποιηθεί για τη σύγκριση διαφόρων εργαλείων. Η συνολική τιμή των κραδασμών μπορεί επίσης να χρησιμοποιηθεί για μια προκαταρκτική εκτίμηση της έκθεσης.</p> <p>b) ΠΡΟΕΙΔΟΠΟΙΗΣΗ: η εκπομπή κραδασμών κατά την πραγματική χρήση του εργαλείου μπορεί να είναι διαφορετική από τη συνολική δηλωμένη τιμή ανάλογα με τον τρόπο χρήσης του εργαλείου. Επομένως είναι απαραίτητο, κατά την εργασία, να λάβετε τα παρακάτω μέτρα ασφαλείας για την προστασία του χειριστή: φορέστε γάντια κατά τη χρήση, περιορίστε το χρόνο χρήσης του μηχανήματος και μειώστε το χρόνο χρήσης του μοχλού γκαζιού.</p>
<p>[1] <b>EN - TECHNICAL DATA</b></p> <p>[2] Power supply frequency and voltage MAX</p> <p>[3] Power supply frequency and voltage NOMINAL</p> <p>[4] Maximum chain speed</p> <p>[5] Guide bar length</p> <p>[6] Oil tank capacity</p> <p>[7] Chain gauge</p> <p>[8] Chain pinion teeth / pitch</p> <p>[9] Weight without battery pack</p> <p>[10] Measured sound pressure level</p> <p>[11] Uncertainty of measure</p> <p>[12] Measured sound power level</p> <p>[11] Uncertainty of measure</p> <p>[13] Guaranteed sound power level</p> <p>[14] Vibration level</p> <p>[15] Front handle</p> <p>[16] Rear handle</p> <p>[11] Uncertainty of measure</p> <p>[17] ACCESSORIES AVAILABLE ON REQUEST</p> <p>[18] Battery pack, model</p> <p>[19] Battery charger</p> <p>[20] Battery holder harness</p> <p>[22] CORRECT BAR AND CHAIN COMBINATION TABLE (Chap. 16)</p> <p>[23] PITCH</p> <p>[24] BAR</p> <p>[25] CHAIN</p> <p>[26] MODEL</p> <p>[27] Inches</p> <p>[28] Length: Inches / cm</p> <p>[29] Groove width: Inches / mm</p> <p>[30] Code</p> <p><b>(* This battery can only be used with the battery harness. Inserting the battery in the machine housing is prohibited.</b></p>	<p>a) NOTE: the declared total vibration value was measured using a normalised test method and can be used to conduct comparisons between one tool and another. The total vibration value can also be used for a preliminary exposure evaluation.</p> <p>b) WARNING: the vibrations emitted during actual use of the tool can differ from the declared total value according to how the tool is used. Whilst working, therefore, it is necessary to adopt the following safety measures designed to protect the operator: wear protective gloves whilst working, use the machine for limited periods at a time and decrease the time during which the throttle control lever is pressed.</p> <p>[1] <b>ES - DATOS TÉCNICOS</b></p> <p>[2] Tensión y frecuencia de alimentación MAX</p> <p>[3] Tensión y frecuencia de alimentación NOMINAL</p> <p>[4] Velocidad máxima de la cadena</p> <p>[5] Longitud barra de conducción</p> <p>[6] Capacidad del depósito de aceite</p> <p>[7] Espesor de la cadena</p> <p>[8] Dientes / paso del piñón cadena</p> <p>[9] Peso sin el grupo de la batería</p> <p>[10] Nivel de presión acústica medido</p> <p>[11] Incertidumbre de medida</p> <p>[12] Nivel de potencia acústica medido</p> <p>[13] Nivel de potencia acústica garantizado</p> <p>[14] Nivel de vibraciones</p> <p>[15] - Empuñadura delantera</p> <p>[16] - Empuñadura trasera</p> <p>[17] ACCESORIOS POR ENCARGO</p> <p>[18] Grupo de la batería, mod.</p>	<p>[19] Cargador de la batería</p> <p>[20] Arnés de sujeción batería</p> <p>[22] TABLA PARA LA CORRECTA COMBINACIÓN DE BARRA Y CADENA (Cap. 16)</p> <p>[23] PASO</p> <p>[24] BARRA</p> <p>[25] CADENA</p> <p>[26] MODELO</p> <p>[27] Pulgadas</p> <p>[28] Longitud: Pulgadas / cm</p> <p>[29] Anchura ranura: Pulgadas / mm</p> <p>[30] Código</p> <p><b>(* El uso de esta batería está permitido únicamente con el arnés de sujeción para batería. Queda prohibido introducir la batería en la cavidad de la máquina.</b></p> <p>a) NOTA: el valor total de la vibración se ha medido según un método normalizado de prueba y puede utilizarse para comparar uno u otro aparato. El valor total de la vibración también se puede emplear para la valoración preliminar de la exposición.</p> <p>b) ADVERTENCIA: la emisión de vibración en el uso efectivo del aparato puede ser diferente al valor total dependiendo de cómo se utiliza el mismo. Por ello, durante la actividad se deben poner en práctica las siguientes medidas de seguridad para el usuario: usar guantes, limitar el tiempo de uso de la máquina, así como el tiempo que se mantiene presionada la palanca de mando del acelerador.</p>

<p>[1] <b>ET - TEHNILISED ANDMED</b></p> <p>[2] Pinge ja toitesagedus/ Maks.</p> <p>[3] Pinge ja toitesagedus/ Nominaalne.</p> <p>[4] Keti maksimaalne kiirus</p> <p>[5] Saeplaadi pikkus</p> <p>[6] Ölipaagi maht</p> <p>[7] Keti paksus</p> <p>[8] Keti hammasratta hambad / samm</p> <p>[9] Kaal ilma akuta</p> <p>[10] Mõõdetud helirõhutus</p> <p>[11] Mõõtemääramatus</p> <p>[12] Mõõdetud müravõimsuse tase</p> <p>[13] Garanteeritud müravõimsuse tase</p> <p>[14] Vibratsiooni tase</p> <p>[15]- Eesmine käepide</p> <p>[16]- Tagumine käepide</p> <p>[17] LISASEADMED TELLIMISEL</p> <p>[18] Akku, mud.</p> <p>[19] Akulaadija</p> <p>[20] Akuhoidja rakmed</p> <p>[22] SAEKETI JA -PLAADI KOMBINATSIOONIDE TABEL (16. ptk)</p> <p>[23] SAMM</p> <p>[24] SAELATT</p> <p>[25] KETT</p> <p>[26] MUDELIL</p> <p>[27] Tolli</p> <p>[28] Pikkus: Tolli / cm</p> <p>[29] Kanali Laius: Tolli / mm</p> <p>[30] Kood</p> <p><b>(*) Aku kasutamiseks peab kandma akuhoidja rakmeid. Aku kasutamine masinas olevas pesas on keelatud.</b></p>	<p>a) MÄRKUS: deklareeritud koguvibratsiooni tase mõõdeti standardiseeritud testi käigus, mille abil on võimalik võrrelda omavahel erinevate tööriistade vibratsiooni.</p> <p>Deklareeritud koguvibratsiooni võib kasutada ka eeldatava vibratsiooni käes olemise hindamiseks</p> <p>b) HOIATUS: tegelikud tööriista kasutamisel tekkivad vibratsioonid võivad erineda deklareeritud koguvibratsiooni tasemest sõltuvalt tööriista kasutamise viisist. Seepärast tuleb töö ajal kasutusel võtta ohutusmeetodid, millega töötajat kaitsta: kandke kasutamise ajal kindaid, piirake masina kasutamise aega ja lühendage perioode, mille vältel hoiakse gaasihooa all.</p> <p>[1] <b>FI - TEKNISET TIEDOT</b></p> <p>[2] Syöttöjännite ja -taajuus MAX</p> <p>[3] Syöttöjännite ja -taajuus NOMINAL</p> <p>[4] Ketjun maksiminopeus</p> <p>[5] Terälevyn pituus</p> <p>[6] Öljysäiliön tilavuus</p> <p>[7] Ketjun paksuus</p> <p>[8] Ketjun hammasrattaan hampaat / hammasluku</p> <p>[9] Paino ilman akkuyksikköä</p> <p>[10] Mitattu äänenpaineen taso</p> <p>[11] Epätarkka mittaus</p> <p>[12] Mitattu äänitehotaso</p> <p>[13] Taattu äänitehotaso</p> <p>[14] Tärinäataso</p> <p>[15] - Etukahva</p> <p>[16] - Takakahva</p> <p>[17] SAATAVANA OLEVAT LISÄVARUSTEET</p>	<p>[[18] Akkuysikkö, malli</p> <p>[19] Akkulatori</p> <p>[20] Akun kantovaljaat</p> <p>[22] TAULUKKO TERÄLEVYN JA KETJUN OIKEA YHDISTELMÄ (Luku 16)</p> <p>[23] KULKU</p> <p>[24] TERÄLEVY</p> <p>[25] KETJU</p> <p>[26] MALL</p> <p>[27] Tuumaa</p> <p>[28] Pituus: Tuumaa / cm</p> <p>[29] Uran Leveys: Tuumaa / mm</p> <p>[30] Koodi</p> <p><b>(*) Tämän akun käyttö on sallittu vain akun kannattinvaljaita käyttämällä. Akkua ei saa asettaa koneessa olevaan tilaan.</b></p> <p>a) HUOMAUTUS: tärinän kokonaisarvo on mitattu käyttämällä normalisoitua testimenetelmää ja sitä voidaan käyttää verrattaessa työkaluja keskenään. Tärinän kokonaisarvoa voidaan käyttää myös kun tehdään alistumista koskeva esiarviointi.</p> <p>b) VAROITUS: laitteen tuottama tärinä työväliseen todelliseen käyttöön aikana saattaa poiketa ilmoitetusta kokonaisarvosta käytötavasta riippuen. Tämän vuoksi on tarpeen soveltaa seuraavia käyttöä sääntäviä turvatoimenpiteitä: käyttää käsinettä käytön aikana, rajoittaa laitteen käyttöaikaa ja lyhentää aikoja jolloin kaasuvipua pidetään painettuna.</p>
<p>[1] <b>FR - CARACTÉRISTIQUES TECHNIQUES</b></p> <p>[2] Tension et fréquence d'alimentation MAX</p> <p>[3] Tension et fréquence d'alimentation NOMINAL</p> <p>[4] Vitesse maximum de la chaîne</p> <p>[5] Longueur guide-chaîne</p> <p>[6] Capacité du réservoir de l'huile</p> <p>[7] Épaisseur de la chaîne</p> <p>[8] Dents / pas du pignon de chaîne</p> <p>[9] Poids sans le groupe batterie</p> <p>[10] Niveau de pression acoustique mesuré</p> <p>[11] Incertitude de mesure</p> <p>[12] Niveau de puissance acoustique mesuré</p> <p>[13] Niveau de puissance acoustique garanti</p> <p>[14] Niveau de vibrations</p> <p>[15] - Poignée avant</p> <p>[16] - Poignée arrière</p> <p>[17] ÉQUIPEMENTS SUR DEMANDE</p> <p>[18] Groupe de batteries, mod.</p> <p>[19] Chargeur de batterie</p> <p>[20] Harnais porte-batterie</p> <p>[22] TABLEAU DES COMBINAISONS CORRECTES ENTRE GUIDE-CHAÎNE ET CHAÎNE (Chap. 16)</p> <p>[23] PAS</p> <p>[24] GUIDE-CHAÎNE</p> <p>[25] CHAÎNE</p> <p>[26] MODÈLE</p> <p>[27] Pouces</p> <p>[28] Longueur: Pouces / cm</p> <p>[29] Largeur Rainure: Pouces / mm</p> <p>[30] Code</p>	<p><b>(*) L'utilisation de cette batterie est permise seulement avec le harnais porte-batterie. Il est interdit d'insérer la batterie dans le logement situé sur la machine</b></p> <p>a) REMARQUE: la valeur totale déclarée des vibrations a été mesurée selon une méthode d'essai normalisée et peut être utilisée pour comparer un outillage avec un autre. La valeur totale des vibrations peut être utilisée aussi pour une évaluation préalable à l'exposition.</p> <p>b) AVERTISSEMENT: l'émission des vibrations à usage effectif de l'outillage peut être différent de la valeur totale déclarée selon les modes d'utilisation de l'outillage. Par conséquent, il est nécessaire, pendant le travail, d'adopter les mesures de sécurité suivantes en vue de protéger l'opérateur: porter des gants durant l'utilisation, limiter les temps d'utilisation de la machine et écourter les temps pendant lesquels le levier de commande de l'accélérateur est enfoncé.</p> <p>[1] <b>HR - TEHNIČKI PODACI</b></p> <p>[2] Napon i frekvencija napajanja MAKŠ.</p> <p>[3] Napon i frekvencija napajanja NAZIVNI</p> <p>[4] Maksimalna brzina lanca</p> <p>[5] Dužina vodilice</p> <p>[6] Zapremina spremnika ulja</p> <p>[7] Debljina lanca</p> <p>[8] Zupci / korak lančanika</p> <p>[9] Težina bez sklopa baterije</p> <p>[10] Izmjerena razina zvučnog tlaka</p> <p>[11] Mjerna nesigurnost</p> <p>[12] Izmjerena razina zvučne snage</p> <p>[13] Zajamčena razina zvučne snage</p> <p>[15] Razina vibracija</p>	<p>[15] – Prednja ručka</p> <p>[16] – Stražnja ručka</p> <p>[17] DODATNA OPREMA PO NARUDŽBI</p> <p>[18] Sklop baterije, mod.</p> <p>[19] Punjač baterija</p> <p>[20] Zaštitni pojas za nošenje baterije</p> <p><b>(*) Ne dozvoljava se uporaba ove baterije bez zaštitnog pojasa za nošenje baterije. Zabranjeno je stavljati bateriju u središte na stroju.</b></p> <p>a) NAPOMENA: izjavljena ukupna vrijednost vibracija izmjerena je pridržavajući se normirane probne metode i može se koristiti za usporedbu jednog alata s drugim. Ukupnu vrijednost vibracija može se koristiti i u preliminarnoj procjeni izloženosti.</p> <p>b) UPOZORENJE: emisija vibracija pri stvarnoj uporabi alata može se razlikovati od izjavljene ukupne vrijednosti, ovisno o načinima korištenja alata. Stoga je za vrijeme rada potrebno poduzeti sljedeće sigurnosne mjere namijenjene zaštiti rukovatelja: nositi rukavice tijekom uporabe, ograničiti vrijeme korištenja stroja te skratiti vrijeme držanja pritisnute upravljačke ručice gasa.</p>

<p>[1] <b>HU - MŰSZAKI ADATOK</b></p> <p>[2] MAX hálózati feszültség és frekvencia</p> <p>[3] NÉVLEGES hálózati feszültség és frekvencia</p> <p>[4] Lánc max. sebessége</p> <p>[5] Vezetőlemez hossza</p> <p>[6] Az olajtartály kapacitása</p> <p>[7] Vastag lánc</p> <p>[8] Lánc fogaskerék fogai / fogosztása</p> <p>[9] Súly az akkumulátor-egység nélküli</p> <p>[10] Mért hangnyomásszint</p> <p>[11] Mérési bizonytalanság</p> <p>[12] Mért zajteljesítmény-szint</p> <p>[13] Garantált zajteljesítmény szint</p> <p>[14] Vibrációs szint</p> <p>[15] - Elülső markolat</p> <p>[16] - Hátsó markolat</p> <p>[17] RENDELHETŐ KIEGÉSZÍTŐK</p> <p>[18] Akkumulátor-egység, típus</p> <p>[19] Akkumulátor-töltő</p> <p>[20] Akkumulátor-hordozó heveder</p> <p>[32] HELYES VEZETŐLEMEZ/LÁNC KOMBINÁCIÓK TÁBLÁZATA (16. fej.)</p> <p>[33] LÁNCOSZTÁS</p> <p>[34] VEZETŐLEMEZ</p> <p>[35] LÁNC</p> <p>[36] MODEL</p> <p>[37] Hűvelyk</p> <p>[38] Hossz: Hűvelyk / cm</p> <p>[39] Vájt Szélesség: Hűvelyk / mm</p> <p>[40] Kód</p> <p>(* Ennek az akkumulátornak a használata csak az akkumulátor-hordozó hevederrel megengedett. Tilos behelyezni az akkumulátort a gépbe.</p>	<p>a) MEGJEGYZÉS: a rezgés névleges összértékét szabványos teszt módszerrel mértük, ezért alkalmazható más számszámokkal való összehasonlításra. A rezgés névleges összértéke a kitettség előzetes értékelésére is alkalmas.</p> <p>b) FIGYELMEZTETÉS: A számszám valós használata során keletkező rezgés eltérhet a névleges összértéktől a szerszám használati módjának függvényében. Ezért a munka alatt alkalmazni kell a kezelő védelmét szolgáló biztonsági intézkedéseket: viseljen munkakesztyűt a használat során, korlátozza a gép használati idejét és lehetőleg rövid ideig tartsa nyomva a gázkart.</p> <p>[1] <b>LT - TECHINIAI DUOMENYS</b></p> <p>[2] MAKSIMALI maitinimo įtampa ir dažnis</p> <p>[3] NOMINALI maitinimo įtampa ir dažnis</p> <p>[4] Grandinės maksimalus greitis</p> <p>[5] Kreiptinčiosios juostos ilgis</p> <p>[6] Alyvos bako talpa</p> <p>[7] Storis grandinės</p> <p>[8] Dantys / grandinės dantratuko žingsnis</p> <p>[9] Svoris be akumuliatoriaus bloko</p> <p>[10] Išmatuotas garso slėgio lygis</p> <p>[11] Matavimo paklaida</p> <p>[12] Išmatuotas garso slėgio lygis</p> <p>[13] Garantuotas garso galios lygis</p> <p>[14] Vibracijų lygis</p> <p>[15] - Prieikinė rankena</p> <p>[16] - Galinė rankena</p> <p>[17] UŽSAKOMI PRIEDAI</p> <p>[18] Akumuliatoriaus blokas, mod.</p>	<p>[19] Akumuliatoriaus įkroviklis</p> <p>[20] Nešiojimo diržai akumuliatoriui</p> <p>[32] TAISYKLINGO JUOSTOS IR GRANDINĖS SUDERINIMO LENTELE (16 skyr.)</p> <p>[33] ŽINGSNIS</p> <p>[34] STRYPAS</p> <p>[35] GRANDINĖ</p> <p>[36] MODELIS</p> <p>[37] Colis</p> <p>[38] Ilgvis: Colis / cm</p> <p>[39] Griovelio Plotis: Colis / mm</p> <p>[40] Kodas</p> <p>(* Šio akumuliatoriaus naudojimas galimas tik naudojant diržus akumuliatoriaus nešiojimiui. Draudžiama įvesti akumuliatorių į įrenginio ertmę.</p> <p>a) PASTABA: bendras deklaruojamas vibracijų lygis buvo išmatuotas laikintis standartizuoto bandymo metodo ir gali būti naudojamas lyginant vieną įrankį su kitu. Bendras vibracijų lygis gali būti naudojamas preliminariam vibracijų įvertinimui.</p> <p>b) ĮSPĖJIMAS: vibracijų skleidimo lygis eksploatuojant įrenginį gali skirtis nuo bendro deklaruojamo vibracijų lygio, priklausomai nuo būdų, kaip bus naudojamas įrankis. Dėl šios priežasties darbu metu yra būtina imtis saugos priemonių, susijusių su operatoriaus apsauga: naudojimo metu mūvėti pirštines, riboti įrenginio darbu trukmę ir trumpinti laiką, kurio metu būna paspausta akceleratoriaus valdymo svirtis.</p>
<p>[1] <b>LV - TEHNISKE DATI</b></p> <p>[2] MAKS. barošanas spriegums un frekvence</p> <p>[3] NOMINALAIS barošanas spriegums un frekvence</p> <p>[4] Maksimālais ķēdes ātrums</p> <p>[5] Slieides garums</p> <p>[6] Elļas tvērtnes tilpums</p> <p>[7] Ķēdes biežums</p> <p>[8] Ķēdes zobrata zobi / solis</p> <p>[9] Svārs bez akumulatora mezgļa</p> <p>[10] Izmērtais skaņas spiediena līmenis</p> <p>[11] Mērījuma kļūda</p> <p>[12] Izmērtais skaņas izmantošātes līmenis</p> <p>[13] Garantētais akustiskās jaudas līmenis</p> <p>[14] Vibrāciju līmenis</p> <p>[15] - Priekšējais rokturis</p> <p>[16] - Aizmugurējais rokturis</p> <p>[17] PIEDERUMI PĒC PASŪTĪJUMA</p> <p>[18] Akumulatora mezgls, mod.</p> <p>[19] Akumulatora lādētājs</p> <p>[20] Josta ar akumulatora turētāju</p> <p>[32] SLIEŽU UN KĒŽU PAREIZU KOMBINĀCIJU TABULA (16. nod.)</p> <p>[33] SOLIS</p> <p>[34] SLIEDE</p> <p>[35] KĒDE</p> <p>[36] MODELIM</p> <p>[37] Collas</p> <p>[38] Garums: Collas / cm</p> <p>[39] Rievas Platums: Collas / mm</p> <p>[40] Kods</p> <p>(* Šo akumulatoru drīkst izmantot tikai kopā ar jostu ar akumulatora turētāju. Ir aizliegts ievietot akumulatoru mašīnas nodalījumā.</p>	<p>a) PIEZĪME: kopējā norādītā vibrāciju intensitātes vērtība tika izmērīta, izmantojot standarta pārbaudes metodi, un to var izmantot ierīču savstarpējai salīdzināšanai. Kopējo vibrāciju intensitātes vērtību var izmantot arī sākotnējai ekspozīcijas novērtēšanai.</p> <p>b) BRĪDINĀJUMS: vibrāciju līmenis ierīces faktiskās izmantošanas laikā var atšķirties no kopējās norādītās vērtības, atkarībā no ierīces izmantošanas veida. Tāpēc darba laikā ir svarīgi izmantot šādus operatora aizsardzības līdzekļus: izmantošanas laikā valkājiet cimdus, ierobežojiet mašīnas izmantošanas laiku un saīsiniet laiku, kuru akceleratora vadības svira atrodas nospieštā stāvoklī.</p> <p>[1] <b>МК - ТЕХНИЧНИ ПОДАТОЦИ</b></p> <p>[2] Волтажа и вид напојување МАКС</p> <p>[3] Волтажа и вид напојување НОМИНАЛНО</p> <p>[4] Максимална моќност на синџирот</p> <p>[5] Должина на лостот за наведување</p> <p>[6] Капацитет на резервоарот за масло</p> <p>[7] Синџир со запци</p> <p>[8] Лост за наведување</p> <p>[9] Тежина без батеријата</p> <p>[10] Ниво на измерена акустичен притисок</p> <p>[11] Отстапување при мерење</p> <p>[12] Ниво на измерена акустична моќност</p> <p>[13] Ниво на гарантирана акустична моќност</p> <p>[14] Ниво на вибрации</p> <p>[15] - Предна рачка</p> <p>[16] - Задна рачка</p> <p>[17] ДОПОЛНИТЕЛНА ОПРЕМА ПО ИЗБОР</p> <p>[18] Комплет со батерија, модел</p> <p>[19] Полнач за батерија</p> <p>[20] Ременни за држење на батеријата</p>	<p>[32] ТАБЕЛА ЗА ПРАВИЛНА КОМБИНАЦИЈА НА ЛОСТОВИ И СИНѢИРИ (поглавје 16)</p> <p>[33] СТЕПЕН</p> <p>[34] ЛОСТ</p> <p>[35] ЛАНЕЦ</p> <p>[36] МОДЕЛ</p> <p>[37] иччи</p> <p>[38] Должина: иччи / см</p> <p>[39] Јлбе: иччи / мм</p> <p>[40] Код</p> <p>(* Употребата на оваа батерија е одобрена само со ременни за носење на батеријата. Треба да ја вметнете батеријата во нејзиното место на машината.</p> <p>a) ЗАБЕЛЕШКА: вкупната посочена вредност за вибрациите е измерена со пробен метод за нормализирање и може да се користи за споредбена вредност на еден уред со друг. Вкупната вредност на вибрациите може да се користи и за прелиминарна проценка на изложеноста.</p> <p>b) ВНИМАНИЕ: емисијата на вибрациите при ефективна употреба треба да се разликува од вкупната посочена вредност според начинот на употреба на уредот. Затоа е неопходно во текот на работата да се направат повеќе безбедносни мерења за да се заштити операторот: носете челно во текот на употребата, ограничете го времето на употреба на машината и скратете го времето кога треба да се притисне рачката за управување со забрзувачот.</p>



<p>[1] <b>NL - TECHNISCHE GEGEVENS</b></p> <p>[2] Spanning en frequentie voeding MAX</p> <p>[3] Spanning en frequentie voeding NOMINAAL</p> <p>[4] Maximale snelheid van de ketting</p> <p>[5] Lengte blad.</p> <p>[6] Vermogen van het oliereservoir</p> <p>[7] Dikte van de ketting</p> <p>[8] Tandens / steek van het kettingwiel</p> <p>[9] Gewicht zonder accugroep</p> <p>[10] Gemeten niveau geluidsdruk</p> <p>[11] Meetonzekerheid</p> <p>[12] Gemeten geluidsniveau</p> <p>[13] Gegarandeerd geluidsniveau</p> <p>[14] Trillingsniveau</p> <p>[15] - Voorste handgreep</p> <p>[16] - Achterste handgreep</p> <p>[17] <b>OP AANVRAAG LEVER BARE ACCESSOIRES</b></p> <p>[18] Accugroep, mod.</p> <p>[19] Batterijlader</p> <p>[20] Draagtuig voor accu</p> <p>[22] <b>TABEL VOOR DE CORRECTE COMBINATIE VAN BLAD EN KETTING (Hfdstk. 16)</b></p> <p>[23] STAP</p> <p>[24] BLAD</p> <p>[25] KETTING</p> <p>[26] MODEL</p> <p>[27] Duimen</p> <p>[28] Lengte: Duimen / cm</p> <p>[29] Breedte Groef: Duimen / mm</p> <p>[30] Code</p> <p><b>(* Het gebruik van deze accu is enkel toegestaan met het draagtuig van de accu. Het is verboden de accu in de huizing van de machine te plaatsen.</b></p>	<p>a) OPMERING: de totale verklaarde waarde van de trillingen werd gemeten met een genormaliseerde testmethode en kan gebruikt worden voor een vergelijking tussen twee werktuigen. De totale waarde van de trillingen kan ook gebruikt worden in een voorafgaande evaluatie van de blootstelling.</p> <p>b) WAARSCHUWING: de emissie van trillingen bij het effectief gebruik van het werktuig kan verschillen van de totale verklaarde waarden, al naar gelang de manieren waarop het werktuig gebruikt wordt. Daarom is het noodzakelijk, tijdens het werk, de volgende veiligheidsmaatregelen toe te passen om de bediener te beschermen: handschoenen te gebruiken tijdens het gebruik, het gebruik van de machine te beperken en de de bedieningshendel van de versnelling zo kort mogelijk ingedrukt te houden.</p> <p>[1] <b>NO - TEKNISCHE DATA</b></p> <p>[2] Maks matespenning og -frekvens</p> <p>[3] NOMINELL matespenning og -frekvens</p> <p>[4] Maks kjedehastighet</p> <p>[5] Sverdlengde</p> <p>[6] Oljetankens kapasitet</p> <p>[7] Sagkjede</p> <p>[8] Sverd</p> <p>[9] Vekt uten batteri</p> <p>[10] Målt lydtrykknivå</p> <p>[11] Måleusikkerhet</p> <p>[12] Målt lydeffektnivå</p> <p>[13] Garantert lydeffektnivå</p> <p>[14] Vibrasjonsnivå</p> <p>[15] - Fremre håndtak</p> <p>[16] - Bakre håndtak</p> <p>[17] <b>TILBEHØR PÅ FORESPØRSEL</b></p> <p>[18] Batteri, modell</p> <p>[19] Batterilader</p> <p>[20] Batterisele</p>	<p>[22] <b>TABELL FOR RIKTIG KOMBINASJON AV SVERD OG KJEDE (Kap. 16)</b></p> <p>[23] MELLOMROM</p> <p>[24] SVERD</p> <p>[25] KJEDE</p> <p>[26] MODEL</p> <p>[27] Tommer</p> <p>[28] Lengde: Tommer / cm</p> <p>[29] Sporbredde: Tommer / mm</p> <p>[30] Kode</p> <p><b>(* Bruk av dette batteriet er kun tillatt med bruk av bæreselen for batteriet. Det er forbudt å sette batteriet på plass i maskinen.</b></p> <p>a) MERK: Oppgitt totalverdi for vibrasjonene har blitt målt ved å bruke en normal prøvemeted og kan brukes for å sammenligne et redskap med et annet. Den totale vibrasjonsverdien kan også brukes i en foreløpig eksponeringsvurdering.</p> <p>b) ADVARSEL: Avhengig av hvordan redskapet brukes, kan vibrasjonene ved en effektiv bruk av redskapet avvike fra oppgitt totalverdi. Under arbeidet må derfor brukeren ta følgende sikkerhetstiltak: Bruke hansker, begrense bruken av maskinen og korte ned på tiden for bruk av gasspaken.</p>
<p>[1] <b>PL - DANE TECHNICZNE</b></p> <p>[2] Napięcie i częstotliwość zasilania MAX</p> <p>[3] Napięcie i częstotliwość zasilania NOMINAL</p> <p>[4] Maksymalna prędkość łańcucha</p> <p>[5] Długość prowadnicy</p> <p>[6] Pojemność zbiornika oleju</p> <p>[7] Łańcuch zębaty</p> <p>[8] Zęby / podziałka koła zębatego łańcucha</p> <p>[9] Waga bez zespołu akumulatora</p> <p>[10] Zmierzony poziom mocy ciśnienia akustycznego</p> <p>[11] Błąd pomiaru</p> <p>[12] Zmierzony poziom mocy akustycznej</p> <p>[13] Gwarantowany poziom mocy akustycznej</p> <p>[14] Poziom wibracji</p> <p>[15] - Uchwyt przodni</p> <p>[16] - Uchwyt tylny</p> <p>[17] <b>AKCESORIA NA ZAMÓWIENIE</b></p> <p>[18] Zespół akumulatora, mod.</p> <p>[19] Ładowarka akumulatora</p> <p>[20] Uprząż do transportu akumulatora</p> <p>[22] <b>TABELA PRAWIDŁOWEJ KOMBINACJI PROWADNICY I ŁAŃCUCHA (rozdz. 16)</b></p> <p>[23] ROZSTAW</p> <p>[24] PROWADNICA</p> <p>[25] ŁAŃCUCH</p> <p>[26] MODELU</p> <p>[27] Cale</p> <p>[28] Długość: Cale / cm</p> <p>[29] Szerokość Bruzdy: Cale / mm</p> <p>[30] Kod</p> <p><b>(* Zastosowanie niniejszego akumulatora jest dozwolone wyłącznie wraz uprzężą do transportu akumulatora. Zakazane jest wkładanie akumulatora do gniazda w maszynie.</b></p>	<p>a) UWAGA: Całkowita wskazana wartość drgań została zmierzona zgodnie ze znormalizowaną metodą badania i może być wykorzystana w celu dokonania porównania między dwoma urządzeniami. Całkowita wartość drgań może być również stosowana do wstępnej oceny zagrożenia.</p> <p>b) OSTRZEŻENIE: emisja drgań w praktycznym zastosowaniu niniejszego narzędzia może się różnić od deklarowanej wartości łącznej, w zależności od sposobu użytkowania urządzenia. Dlatego, w celu zapewnienia bezpieczeństwa użytkownika, konieczne jest podczas pracy z urządzeniem podjęcie następujących środków bezpieczeństwa: noszenie rękawic podczas korzystania z urządzenia, ograniczenie czasu użytkowania urządzenia i skrócenie czasu trzymania wciśniętej dźwigni przepustnicy.</p> <p>[1] <b>PT - DADOS TÉCNICOS</b></p> <p>[2] Tensão e frequência de alimentação MAX</p> <p>[3] Tensão e frequência de alimentação NOMINAL</p> <p>[4] Velocidade máxima da corrente</p> <p>[5] Comprimento barra de guia</p> <p>[6] Capacidade do tanque do óleo</p> <p>[7] Spessore catena</p> <p>[8] Dentes / distância entre eixos do pinhão da corrente</p> <p>[9] Peso sem grupo bateria</p> <p>[10] Nível de pressão acústica mensurada</p> <p>[11] Incerteza de medição</p> <p>[12] Nível de potência acústica mensurada</p> <p>[13] Nível de potência acústica garantido.</p> <p>[14] Nível de vibrações</p> <p>[15] - Pega dianteira</p> <p>[16] - Pega traseira</p> <p>[17] <b>ACESSÓRIOS A PEDIDO</b></p> <p>[18] Grupo bateria, mod.</p> <p>[19] Carregador de bateria</p> <p>[20] Arnês porta-bateria</p>	<p>[22] <b>TABELA PARA A COMBINAÇÃO CORRETA DE BARRA E CORRENTE (Cap. 16)</b></p> <p>[23] PASSO</p> <p>[24] LÂMINA-GUIA</p> <p>[25] CORRENTE</p> <p>[26] MODELO</p> <p>[27] Polegadas</p> <p>[28] Comprimento: Polegadas / cm</p> <p>[29] Largura do canal: Polegadas / mm</p> <p>[30] Código</p> <p><b>(* O uso desta bateria somente é permitido com o Arnês porta-bateria. É proibido inserir a bateria no alojamento da máquina.</b></p> <p>a) NOTA: o valor total declarado das vibrações foi mensurado de acordo com um método normalizado de ensaio e pode ser utilizado para comparar uma ferramenta com a outra. O valor total das vibrações também pode ser utilizado para uma avaliação preliminar da exposição.</p> <p>b) ADVERTÊNCIA: a emissão de vibrações no uso efetivo da ferramenta pode ser diversa do valor total declarado de acordo com os modos com os quais a ferramenta é utilizada. Portanto, durante o trabalho, é necessário adotar as seguintes medidas de segurança para proteger o operador: usar luvas durante o uso, limitar o tempo de utilização da máquina e encurtar o tempo durante o qual a alavanca de comando é mantida pressionada.</p>

<p>[1] <b>RO - DATE TEHNICE</b></p> <p>[2] Tensiune și frecvență de alimentare MAX</p> <p>[3] Tensiune și frecvență de alimentare NOMINAL</p> <p>[4] Viteza maximă a lanțului</p> <p>[5] Lungime bară de ghidaj</p> <p>[6] Capacitate rezervor ulei</p> <p>[7] Grosimea lanțului</p> <p>[8] Dinți / pas pinion lant</p> <p>[9] Greutate fără ansamblul baterie</p> <p>[10] Nivel măsurat de presiune acustică</p> <p>[11] Nesiguranță în măsurare</p> <p>[12] Nivel de putere acustică măsurat</p> <p>[13] Nivel de putere acustică garantat</p> <p>[14] Nivel de vibrații</p> <p>[15] - Mâner față</p> <p>[16] - Mâner spate</p> <p>[17] ACCESORII LA CERERE</p> <p>[18] Ansamblu baterie, mod.</p> <p>[19] Bara de ghidaj</p> <p>[20] Harnașament port-baterie</p> <p>[22] TABEL PENTRU O ASOCIERE CORECTĂ BARĂ-LANȚ (Cap. 16)</p> <p>[23] PAS</p> <p>[24] BARĂ</p> <p>[25] LANȚ</p> <p>[26] MODELUL</p> <p>[27] Toli</p> <p>[28] Lungime: Toli / cm</p> <p>[29] Lățime Canelură: Toli / mm</p> <p>[30] Cod</p> <p><b>(*) Această baterie poate fi utilizată doar cu harnașamentul de susținere a bateriei. Se interzice introducerea bateriei în locașul de pe mașină.</b></p>	<p>a) OBSERVAȚIE: valoarea totală declarată a vibrațiilor a fost măsurată ținându-se cont de o metodă de probă normalizată și poate fi utilizată pentru a compara instrumentele între ele. Valoarea totală a vibrațiilor poate fi utilizată și pentru o evaluare preliminară a expunerii.</p> <p>b) AVERTISMENT: emisia de vibrații în utilizarea efectivă a instrumentului poate fi diferită față de valoarea totală declarată, în funcție de modulele în care se utilizează instrumentul. Din acest motiv este nevoie ca, în timpul sesiunii de lucru, să se adopte următoarele măsuri de siguranță menite să protejeze operatorul: purtarea mănușilor în timpul utilizării, limitarea duratei de utilizare a mașinii și scurtarea duratei în care se ține apăsată maneta de comandă a acceleratorului.</p> <p>[1] <b>RU - ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ</b></p> <p>[2] Напряжение и частота питания МАКС.</p> <p>[3] Напряжение и частота питания НОМИНАЛЬНЫЕ</p> <p>[4] Максимальная скорость цепи</p> <p>[5] Длина направляющей шины</p> <p>[6] Емкость масляного бака</p> <p>[7] Толщина цепи</p> <p>[8] Зубцы / шаг звездочки цепи[9] Вес без батарейного блока</p> <p>[10] Измеренный уровень звукового давления</p> <p>[11] Погрешность измерения</p> <p>[12] Измеренный уровень звуковой мощности</p> <p>[13] Гарантируемый уровень звуковой мощности</p> <p>[14] Уровень вибрации</p> <p>[15] - Передняя рукоятка</p> <p>[16] - Задняя рукоятка</p>	<p>[17] ДОПОЛНИТЕЛЬНОЕ ОБОРУДОВАНИЕ ПО ТРЕБОВАНИЮ</p> <p>[18] Батарейный блок, мод.</p> <p>[19] Зарядное устройство</p> <p>[20] Система подвески с держателем батареи</p> <p>[22] ТАБЛИЦА ПРАВИЛЬНЫХ КОМБИНАЦИЙ ШИНА-ЦЕПЬ (гл. 16)</p> <p>[23] ШАГ</p> <p>[24] ШИНА</p> <p>[25] ЦЕПЬ</p> <p>[26] МОДЕЛЬ</p> <p>[27] Дюймы</p> <p>[28] Длина: Дюймы / см</p> <p>[29] Ширина Канавки: Дюймы / мм</p> <p>[30] Код</p> <p><b>(*) Использование данной батареи разрешено только с системой подвески с держателем батареи. Запрещено устанавливать батарею в отсек на машине.</b></p> <p>a) ПРИМЕЧАНИЕ: общий заявленный уровень вибрации был измерен с использованием нормализованного метода испытаний, и его можно использовать для сравнения различных инструментов между собой. Общий уровень вибрации можно также использовать для предварительной оценки подверженности воздействию вибрации.</p> <p>b) ПРЕДУПРЕЖДЕНИЕ: уровень вибрации во время фактической эксплуатации инструмента может отличаться от общего заявленного значения и зависит от режимов эксплуатации инструмента. Поэтому во время работы необходимо принимать следующие меры предосторожности для защиты оператора: работать в перчатках, ограничивать время использования машины и сократить время, в течение которого рычаг управления дросселем остается нажатым.</p>
<p>[1] <b>SK - TECHNICKÉ PARAMETRE</b></p> <p>[2] MAX. napájacie napätie a frekvencia</p> <p>[3] MENOVIĎE napájacie napätie a frekvencia</p> <p>[4] Maximálna rýchlosť reťaze</p> <p>[5] Dĺžka vodiacej lišty</p> <p>[6] Kapacita olejovej nádrže</p> <p>[7] Hrúbka reťaze</p> <p>[8] Zuby / rozstup reťazovky</p> <p>[9] Hmotnosť jednotky akumulátora</p> <p>[10] Nameraná úroveň akustického tlaku</p> <p>[11] Nepresnosť merania</p> <p>[12] Nameraná úroveň akustického výkonu</p> <p>[13] Zaručená úroveň akustického výkonu</p> <p>[14] Úroveň vibrácií</p> <p>[15] - Predná rukoväť</p> <p>[16] - Zadná rukoväť</p> <p>[17] VOLITELNÉ PRÍSLUŠENSTVO</p> <p>[18] Akumulátorová jednotka, mod.</p> <p>[19] Nabíjačka akumulátora</p> <p>[20] Opasok na akumulátor s chrbtovými popruhmi</p> <p>[22] TABUĽKA PRE URČENIE SPRÁVNEJ KOMBINÁCIE VODIACEJ LIŠTY A REŤAZE (kap. 16)</p> <p>[23] ROZSTUP</p> <p>[24] VODIACA LIŠTA</p> <p>[25] REŤAZ</p> <p>[26] MODEL</p> <p>[27] Palce</p> <p>[28] Dĺžka: Palce / cm</p> <p>[29] Šírka drážky: Palce / mm</p> <p>[30] Kód</p> <p><b>(*) Použitie tohto akumulátora je dovolené len s opaskom na akumulátor s chrbtovými popruhmi. Je zakázané vkladať akumulátor do uloženia na stroji.</b></p>	<p>a) POZNÁMKA: vyhlásená celková hodnota vibrácií bola nameraná s použitím normalizovanej skúšobnej metódy a je možné ju použiť na porovnanie jednotlivých nástrojov. Celková hodnota vibrácií môže byť použitá aj pri prípravnom vyhodnocovaní vibrácií.</p> <p>b) VAROVANIE: emisia vibrácií pri skutočnom použití nástroja môžu byť iné ako sú stanovené celkové hodnoty, a to v závislosti na režimoch, pri ktorých sa daný nástroj používa. Preto je potrebné počas práce prijať nižšie uvedené bezpečnostné opatrenia, ktoré majú za cieľ ochrániť operátora: počas bežného použitia majte nasadené rukavice, obmedzte dobu použitia stroja a skráťte dobu, počas ktorých je zatlačená ovládacia páka plynu.</p> <p>[1] <b>SL - TEHNIČNI PODATKI</b></p> <p>[2] Napetost in frekvenca električnega napajanja - MAX</p> <p>[3] Napetost in frekvenca električnega napajanja - NAZIVNA</p> <p>[4] Maksimalna hitrost verige</p> <p>[5] Dolžina meča</p> <p>[6] Kapaciteta rezervoarja za olje</p> <p>[7] Debelina verige</p> <p>[8] Zobniki / hod verižnega pastorka</p> <p>[9] Teža brez sklopa baterije</p> <p>[10] Izmerjena raven zvočnega tlaka</p> <p>[11] Nezaniesljivost meritve</p> <p>[12] Izmerjena raven zvočne moči</p> <p>[13] Zagotovljena raven zvočnega tlaka</p> <p>[14] Nivo vibracij</p> <p>[15] - Prednji ročaj</p> <p>[16] - Zadnji ročaj</p> <p>[17] DODATNA OPREMA PO NAROČILU</p> <p>[18] Sklop baterije, mod.</p> <p>[19] Polnilnik baterije</p>	<p>[20] Pas za nošenje baterije</p> <p>[22] TABELA ZA PRAVILNO KOMBINACIJO MEČA IN VERIGE (Pogl. 16)</p> <p>[23] KORAK</p> <p>[24] DROG</p> <p>[25] VERIGA</p> <p>[26] MODEL</p> <p>[27] Palci</p> <p>[28] Dolžina: Palci / cm</p> <p>[29] Širina Utora: Palci / mm</p> <p>[30] Sifra</p> <p><b>(*) To baterijo je dovoljeno uporabljati le s pasom za nošenje baterije. Baterijo je prepovedano vstavljati v ležišče v stroju.</b></p> <p>a) OPOMBA: Deklarirana skupna vrednost vibracij je bila izmerjena v skladu z normirano metodo preizkušanja; mogoče jo je uporabiti za primerjavo med različnimi orodji. Skupna vrednost vibracij se lahko uporabi tudi za predhodno oceno izpostavitve.</p> <p>b) OPOZORILO: Med dejansko uporabo orodja se oddajane vibracije lahko razlikujejo od deklarirane skupne vrednosti, kar je odvisno od načina uporabe orodja. Zato je treba med delom udeležajati naslednje varnostne ukrepe za zaščito upravljavca: med delom nosite rokavice, omejite čas uporabe stroja in skrajšajte intervale, med katerimi pritisnete na komandni vzvod pospeševalnika.</p>



<p>[1] <b>SR - TEHNIČKI PODACI</b></p> <p>[2] MAKS. napon i frekvencija napajanja</p> <p>[3] NAZIVNI napon i frekvencija napajanja</p> <p>[4] Maksimalna brzina lanca</p> <p>[5] Dužina mača</p> <p>[6] Kapacitet rezervaoara za ulje</p> <p>[7] Debljina lanca</p> <p>[8] Zubi / korak zupčanika lanca</p> <p>[9] Težina bez baterije</p> <p>[10] Izmereni nivo zvučnog pritiska</p> <p>[11] Merna nesigurnost</p> <p>[12] Izmereni nivo zvučne snage</p> <p>[13] Garantovani nivo zvučne snage</p> <p>[14] Nivo vibracija</p> <p>[15] - prednja drška</p> <p>[16] - zadnja drška</p> <p>[17] DODATNI PRIBOR PO NARUDŽBINI</p> <p>[18] Baterija, mod.</p> <p>[19] Punjač baterije</p> <p>[20] Pojas za nošenje baterije</p> <p>[22] TABELA ZA PRAVILNO KOMBINOVANJE MAČA I LANCA (Pogl. 16)</p> <p>[23] KOŘAK</p> <p>[24] MAC</p> <p>[25] LANAC</p> <p>[26] MODEL</p> <p>[27] Inč</p> <p>[28] Dužina: Inč / cm</p> <p>[29] Širina žleba: Inč / mm</p> <p>[30] Sifra</p> <p><b>(*) Upotreba ovog akumulatora (baterije) dozvoljena je samo s pojaskom za nošenje akumulatora (baterije). Zabranjeno je stavljati akumulator (bateriju) u kućište na mašini.</b></p>	<p>a) NAPOMENA: ukupna prijavljena vrednost vibracija izmerena je prema normalizovanoj metodi ispitivanja i može se koristiti za poredenje dve alatke. Ukupna vrednost vibracija može se koristiti i prilikom uvodne procene izloženosti.</p> <p>b) UPOZORENJE: emisija vibracija prilikom efektivne upotrebe alatke može se razlikovati od ukupne prijavljene vrednosti u zavisnosti od načina na koji se alatka koristi. Stoga je potrebno, za vreme rada, primeniti sledeće sigurnosne mere u cilju zaštite radnika: nositi rukavice za vreme upotrebe, smanjiti vreme korišćenja mašine i skratiti vreme pritiskanja poluge za komandu gasa.</p> <p>[1] <b>SV - TEKNISKA SPECIFIKACIONER</b></p> <p>[2] MAX utspänning och strömförsörjningsfrekvens</p> <p>[3] NOMINELL utspänning och strömförsörjningsfrekvens</p> <p>[4] Kedjans maximala hastighet</p> <p>[5] Svärdets längd</p> <p>[6] Oljetankens kapacitet</p> <p>[7] Kedjans tjocklek</p> <p>[8] Tänder / kuggstångens tandavstånd på kedjan</p> <p>[9] Vikt utan batterienhet</p> <p>[10] Uppmätt ljudtrycksnivå</p> <p>[11] Tivvel med mått</p> <p>[12] Mått ljudeffektnivå</p> <p>[13] Garanterad ljudeffektsnivå</p> <p>[14] Vibrationsnivå</p> <p>[15] - Främre handtag</p> <p>[16] - Bakre handtag</p> <p>[17] TILLBEHÖR PÅ BESTÄLLNING</p> <p>[18] Batterienhet, mod.</p>	<p>[19] Svärd</p> <p>[20] Batterisele</p> <p>[32] TABELL FÖR RÄTT KOMBINATION AV SVÄRD OCH KEDJA (Kap. 16)</p> <p>[33] STEG</p> <p>[34] STÅNG</p> <p>[35] KEDJA</p> <p>[36] MODELL</p> <p>[37] Tum</p> <p>[38] Längd: Tum / cm</p> <p>[39] Rännans Bredd: Tum / mm</p> <p>[40] Kod</p> <p><b>(*) Detta batteri får endast användas med batteribarselen. Det är förbjudet att sätta i batteriet i facket på maskinen.</b></p> <p>a) ANMÄRKNING: det totala angivna vibrationsvärdet har mätts i enlighet med en standardiserad testmetod och kan användas för en jämförelse mellan olika verktyg. Det totala vibrationsvärdet kan användas även vid en preliminär exponeringsbedömning.</p> <p>b) VARNING: vibrationsemissioner under användningen av verktyget kan skilja sig från det totala värdet som anges beroende på hur verktyget används. Därför är det nödvändigt, under arbetet, att tillämpa de följande säkerhetsåtgärderna som avses för att skydda föraren: bär handskar under användningen, begränsa användningstiden och tiderna som gasreglaget spak hålls nedtryckt.</p>
<p>[1] <b>TR - TEKNİK VERİLER</b></p> <p>[2] MAKS besleme gerilimi ve frekansı</p> <p>[3] NOMİNAL besleme gerilimi ve frekansı</p> <p>[4] Maksimum zincir hızı</p> <p>[5] Kılavuz palası uzunluğu</p> <p>[6] Yağ deposu kapasitesi</p> <p>[7] Kalınlık zincir</p> <p>[8] Zincir pinyonunun dişleri / adımı</p> <p>[9] Batarya grubu olmadan ağırlık</p> <p>[10] Ölçülen ses basıncı seviyesi</p> <p>[11] Ölçü belirsizliği</p> <p>[12] Ölçülen sesgücü seviyesi</p> <p>[9] Ölçüm belirsizliği</p> <p>[13] Garanti edilen ses gücü seviyesi</p> <p>[14] Titreşim seviyesi</p> <p>[15] - Ön kabza</p> <p>[16] - Arka kabza</p> <p>[17] TALEP ÜZERİNE TEDARİK EDİLEN AKSESUARLAR</p> <p>[18] Batarya grubu, mod.</p> <p>[19] Batarya şarj cihazı</p> <p>[20] Batarya taşıma kemeri</p> <p>[22] DOĞRU PALA VE ZİNCİR BİRLEŞİMİ TABLOSU (Böl. 16)</p> <p>[23] ADIM</p> <p>[24] PALA</p> <p>[25] ZİNCİR</p> <p>[26] MODELİ</p> <p>[27] İnç</p> <p>[28] Uzunluk: İnç / cm</p> <p>[29] Yiv Genişliği: İnç / mm</p> <p>[30] Kod</p> <p><b>(*) Bu bataryanın yalnızca batarya taşıma kemeriyle birlikte kullanılmasına izin verilir. Bataryanın makine üzerindeki yuvaya yerleştirilmesi yasaktır.</b></p>	<p>a) NOT: beyan edilen toplam titreşim değeri, normalize edilmiş test yöntemine uygun şekilde ölçülmüştür ve bir takım ile diğeri arasında karşılaştırma yapmak amacıyla kullanılabilir. Toplam titreşim değeri aynı zamanda maruz kalma durumuna dair ön değerlendirme yaparken de kullanılabilir.</p> <p>b) UYARI: takımın etkili kullanımı sırasında yayılan titreşim, takımın kullanıma şekline bağlı olarak beyan edilen toplam değerden farklı olabilir. Bu nedenle, çalışma yapılırken operatörü korumaya yönelik aşağıdaki güvenlik tedbirleri alınmalıdır: kullanım sırasında eldiven takın, makinenin kullanıldığı süreleri sınırlandırın ve gaz kumanda levyesinin basılı tutulduğu süreleri kısaltın</p>	


**INDEX**

1. GENERAL INFORMATION .....	1
2. SAFETY REGULATIONS .....	2
3. GETTING TO KNOW THE MACHINE .....	5
3.1 Description of the machine and planned use .....	5
3.2 Safety signs .....	5
3.3 Identification label .....	6
3.4 Main components .....	6
4. ASSEMBLY .....	6
4.1 Assembly components .....	7
4.2 Assembly of the guide bar and toothed chain .....	7
5. CONTROLS .....	7
5.2 throttle control lever .....	7
5.3 Throttle brake button .....	7
5.4 Chain brake .....	8
6. USING THE MACHINE .....	8
6.1 Preparation .....	8
6.2 Safety checks .....	8
6.3 Startup .....	9
6.4 Operation .....	9
6.5 Stop .....	11
6.6 After operation .....	11
7. ROUTINE MAINTENANCE .....	11
7.1 General information .....	11
7.2 Battery .....	12
7.3 Topping up the chain oil tank .....	12
7.4 Cleaning .....	12
7.5 Chain catcher .....	13
7.6 Nuts and bolts .....	13
8. EXTRAORDINARY MAINTENANCE .....	13
8.1 Machine and bar lubrication holes .....	13
8.2 Chain drive sprocket .....	13
8.3 Maintenance of the toothed chain .....	13
8.4 Guide bar maintenance .....	13
9. STORING THE MACHINE .....	14
9.1 Storing the machine .....	14
9.2 Storing the battery .....	14
10. HANDLING AND TRANSPORTATION .....	14
11. ASSISTANCE AND REPAIRS .....	14
12. WARRANTY COVERAGE .....	14
13. MAINTENANCE TABLE .....	15
14. CHAIN MAINTENANCE TABLE .....	15
15. PROBLEM IDENTIFICATION .....	15
16. ATTACHMENTS ON REQUEST .....	17
16.1 Batteries .....	17
16.2 Battery charger .....	17
16.3 Battery holder harness .....	17
16.4 BARS AND CHAINS .....	17

**1. GENERAL INFORMATION****1.1 HOW TO READ THE MANUAL**

Some paragraphs in the manual contain important information regarding safety and operation and are emphasized in this manner:

**NOTE** or **IMPORTANT** *these give details or further information on what has already been said, and aim to prevent damage to the machine.*

The  symbol highlights danger. Non-compliance with the warning could lead to personal and/or third party injury and or damage.

The paragraphs highlighted in a square with grey spots indicate the optional characteristics not on all models documented in this manual. Check if the characteristic is on this model.

Whenever reference is made to a position on the machine "front", "back", "left" or "right" hand side, this refers to the operator's working position.

**1.2 REFERENCES****1.2.1 Figures**

The figures in these instructions for use are numbered 1, 2, 3, etc. Components shown in the figures are marked A, B, C, etc.

A reference to component C in figure 2 is written: "See fig. 2.C" or simply "(Fig. 2.C)". The figures are given as a guide only. The actual parts may vary from those shown.

**1.2.2 Titles**

The manual is divided into chapters and paragraphs. The title of paragraph "2.1 Training" is a sub-title of "2. Safety regulations". References to titles or paragraphs are marked with the abbreviation chap. or par. and the relevant number. Example: "chap. 2" or "par. 2.1".

## 2. SAFETY REGULATIONS

### 2.1 GENERAL SAFETY WARNINGS

**⚠ Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.**

**Save all warnings and instructions for future reference.**

The term “power tool” in the warnings refers to your battery-operated (cordless) power tool.

#### 1) Work area safety

- a) Keep the work area clean at all times. Cluttered and dirty areas make accidents more likely to happen.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders at a safe distance while operating a power tool. Distractions can cause you to lose control.

#### 2) Electrical safety

- a) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, cookers and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- b) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

#### 3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the tool is switched OFF before insert the battery, picking up or carrying the power tool. Carrying power tools with your finger on the switch or fitting the battery with the tool switched ON invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on.

A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) Do not lose your balance. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If any devices are to be connected to dust extractor and collection units, check they are connected and used appropriately. The use of these devices may reduce dust related risks.

#### 4) Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Remove the accumulator from its housing before making any adjustments, changing attachments or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools with care. Check for misalignment or obstruction of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting devices sharp and clean. Properly maintained cutting devices with sharp cutting edges are less likely to become jammed and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. The use of a power tool for operations it was not designed for can cause hazardous situations.

## 5) Use and precautions to take during use of battery-operated power tools

- a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another type of battery pack.
- b) Use power tools only with specifically designated battery packs. Use of other battery packs may create a risk of injury or fire.
- c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- d) Under abusive conditions, liquid may leak from the battery: avoid all contact. If contact accidentally occurs, flush with water immediately. If the liquid comes into contact with the eyes, seek medical assistance immediately. Liquids leaking from the battery terminals may cause irritation or burns.

## 6) Service

- a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

## 2.2 SPECIFIC SAFETY RULES FOR CHAIN-SAWS AND ELECTRIC CHAIN-SAWS.

- Keep all body parts at a distance from the toothed chain when the chain-saw is running. Before starting the chain-saw, check that the toothed chain is not in contact with anything. Lack of concentration when using the chain-saw can cause clothes or body parts to get caught up in the toothed chain.
- Always wear safety goggles and ear protection. Other protective equipment for the head, hands and feet is also recommended. The wearing of protective clothing will reduce accidents caused by hurled workpieces and accidental contact with the toothed chain.
- Do not use chain-saws when positioned on a tree. Starting a chain-saw when positioned on a tree can cause body injuries.
- Keep proper footing and balance at all times, and only use the chain-saw on fixed, secure and flat surfaces. Slippery or unstable surfaces such as ladders, can cause loss of balance or control of the chain-saw.

- When cutting a branch that is under tension, be alert for spring back. When the tension of the wood fibres is released, the branch can spring back and injure the operator and/or kick the chain-saw out of control.
- Use extreme caution when cutting small size brush and saplings. The slender material may catch in the chain-saw and be whipped towards you and/or pull you off balance.
- When storing or transporting a chain-saw always use the guide bar cover. Correct handling of the chain-saw will reduce the probability of unintended contact with the moving chain.
- Follow the instructions concerning lubrication, chain tension and replacement parts. Chains with incorrect tension and lubrication can break and increase the risk of kickback.
- Keep handles dry, clean and free from oil and grease. Greasy and oily handles are slippery and can cause loss of control.
- Use the chain-saw to cut wood only. Do not use the chain-saw for purposes for which it is not intended. For example: do not use a chain-saw for cutting plastic, masonry or other non-wood materials. Using the chain-saw for operations other than those intended could result in a hazardous situation.

## 2.3 CAUSES OF KICKBACK AND OPERATOR PROTECTION

Kickback can occur when the nose or tip of the guide bar touches an object, or when the wood closes in and pinches the chain in the cut.

Contact of the tip can, in certain cases, cause a sudden fast reverse action, pushing the guide bar upwards and backwards towards the operator.

Pinching of the chain along the top of the guide bar can rapidly push the chain back towards the operator.

Both the above reactions may cause loss of control of the saw, which could result in serious injury for operators. Do not rely exclusively on the chain-saw built-in safety devices

Chain-saw users should take additional precautions to eliminate accident or injury risks during cutting operations. Kickback is the result of poor use of the tool and/or incorrect operating procedures or conditions and can be avoided by taking the specific precautions provided below:

- Hold the saw firmly with both hands, with the thumbs and fingers around the chain-saw

- grips, and position your body and arms so that you can resist the force of a kickback. Kickback can be controlled by the operator if all appropriate precautions have been taken. Do not allow the chain-saw to start.
- Do not fully extend the arms and do not saw above shoulder height. This helps avoid undesired contact with the ends and allows for more control over the chain-saw in unexpected situations.
- Only use the guide bar and chains recommended by the manufacturer. Unsuitable guides and chains can cause the chain to break and/or kickbacks.
- Follow the manufacturer's instructions regarding sharpening and maintenance of the chain-saw. A decrease in the level of depth can cause an increase in kickbacks.

#### • **Techniques for using the electric chain-saw (battery-operated)**

Always observe the safety regulations and use the most suitable cutting techniques according to the work to be performed, following the instructions and examples in the user instructions.

#### • **Safe carrying of the electric chain-saw (battery-operated)**

Whenever the machine is to be handled or transported you must:

- turn off the motor, wait for the chain to stop and unplug the machine from the mains;
- apply the protection bar cover;
- only hold the machine using the handles and position the bar in the opposite direction to that used during operation;

When using a vehicle to transport the machine, position it so that it can cause no danger to persons and fasten it firmly in place.

#### • **Recommendations for first-time users**

Before felling or delimiting for the first time, make sure:

- you have been specifically trained to use this type of equipment;
- you have carefully read the safety regulations and user instructions contained in this manual;
- you practise first on logs on the ground or attached to trestles, in order to get familiar with the machine and the most suitable cutting techniques.

#### • **Handling and correct use of battery-operated power tools**

- a) Make sure that the machine is switched off before inserting the battery. Inserting

a battery in a electric device which is switched on can cause accidents.

- b) Charge battery packs only with the chargers recommended by the manufacturer. Battery chargers are generally specific for each battery type; use with other types can cause fire risks.
- c) Use only batteries specifically designed for your power tool. The use of other batteries may cause injuries and fire risks.
- d) Keep all unused batteries at a distance from paper clips, coins, keys, nails, screws or other small metal objects as contact with the same can cause short circuits. Short circuits between battery contacts can lead to explosion or fires.
- e) Batteries in poor condition can cause liquids to leak. Avoid contact with the liquid. In the case of accidental contact flush with water. If the liquid comes into contact with the eyes, also seek medical advice. Liquid leaking from the battery may cause skin irritation or burns.
- f) Check that the accumulator is in good condition and there are no signs of damage. Do not use the device with a damaged or worn accumulator.

## 2.4 ENVIRONMENTAL PROTECTION

Safeguarding the environment must be a relevant and priority aspect of machine use, of benefit to the community and the environment we live in.

- Avoid being a disturbance to the neighbourhood. Use this machine at reasonable times of the day only (not early morning or late evening when the noise could cause disturbance).
- A certain amount of chain lubricating oil is released into the environment when the machine is running, so only use biodegradable oils made specifically for this use. Use of a mineral oil or motor oil causes serious damage to the environment.
- Scrupulously comply with local regulations for the disposal of packaging, deteriorated parts or any elements with a strong environmental impact; this waste must not be disposed of as normal waste, it must be separated and taken to specified waste disposal centres where the material will be recycled.
- Scrupulously comply with local regulations for the disposal of waste materials
- When the machine is withdrawn from service, do not dump it in the environment, but take it to a waste disposal facility in accordance with the local regulations in force.



Do not throw electrical equipment away with domestic waste. According to the European Directive 2012/19/EU on electrical and electronic equipment waste and its implementation in compliance with national standards, old electrical equipment must be collected separately, for eco-compatible recycling. If electrical equipment is disposed of in a landfill or in the ground, the harmful substances can reach the water table and enter the food chain, damaging your health and well-being. For further information on disposing of this product, contact the competent authority for the disposal of domestic waste or your dealer.



At the end of their working life, dispose of batteries paying due attention to the environment. Batteries contain material classified as hazardous for you and the environment. They must be removed and disposed of separately at a facility that accepts lithium-ion batteries.



separate waste collection of the products and packaging used allows the materials to be recycled and reused. Reuse of recycled materials help to prevent environmental pollution and reduces the demand for raw materials.

## 3. GETTING TO KNOW THE MACHINE

### 3.1 DESCRIPTION OF THE MACHINE AND PLANNED USE

**This machine is a forestry tool and precisely a battery powered chain saw.**

The machine is essentially composed of a battery powered motor and a guide bar that takes the power from the battery to the motor which drives the cutting chain.

The operator is able to operate the machine with two hands, using the front and rear handgrips, and can use the main controls, always remaining at a safe distance from the cutting means.

#### 3.1.1 Intended use

This machine was designed and manufactured for:

- felling, bucking and delimiting trees with dimensions suitable for the length

- of the guide bar or wooden objects with the same characteristics;
- use by one operator.

#### 3.1.2 Improper use

Any other usage not in keeping with the above-mentioned ones may be hazardous and harm persons and/or cause damage. Examples of improper use may include, but are not limited to:

- trimming hedges;
- carving operations;
- sectioning pallets, crates and various packing materials;
- sectioning furniture or other materials with nails, screws or other metal components;
- butchering meat;
- using the machine to cut materials other than wood (plastic materials, building materials);
- using the machine to lift, move or split objects;
- using the machine while fastened to fixed supports;
- using cutting means other than those found in the "Technical Data" table. Serious injury and wound hazard.
- use of the machine by more than one person.

**IMPORTANT** *Improper use of the machine will invalidate the warranty, relieve the Manufacturer from all liability, and the user will consequently be liable for all and any damage or injury to himself or others.*

#### 3.1.3 User types

This machine is intended for use by consumers, i.e. non-professional operators. The machine is intended for "DIY" use only.

### 3.2 SAFETY SIGNS

The machine has various symbols on it (fig. 2). They are used to remind the operator of the behaviour to follow to use it with the necessary attention and caution.

Meaning of symbols:



**Warning!** Read the instructions before operating the machine.



**Warning!** Failure to use this machine correctly can be hazardous for oneself and others



**Danger!** Make sure the chain does not come into contact with foreign bodies/obstacles. Kickback may occur if the chain comes into contact with an obstacle



**Danger!** Always use hearing protectors.



**Danger!** Wear eye protections.



**Danger!** Do not leave the machine in the rain (or in damp conditions)



**Beware of kickback!** Kickback is the rapid and uncontrollable backward motion of the chain saw in the direction of the operator. Always work in complete safety. Use chains with safety links that limit kickback.



**Warning!** Never hold the machine with one hand! Hold the machine firmly with both hands to control the machine and reduce the risk of kickback.

**IMPORTANT** Any damaged or illegible decals must be replaced. Order replacement decals from an authorised service centre.

### 3.3 IDENTIFICATION LABEL

The identification label holds the following data (fig. 1):

1. Sound power level
2. CE conformity marking
3. Month / Year of manufacture
4. Type of machine
5. Power supply frequency and voltage
6. Serial number
7. Name and address of Manufacturer
8. Article code
9. Guide bar length
10. CLASS II - Double insulation

Write the identification data of the machine in the specific space on the label on the back of the cover page.

**IMPORTANT** Quote the information on the product identification label whenever you contact an authorized service workshop.

**IMPORTANT** The example of the Declaration of Conformity is provided on the last pages of the manual.

### 3.4 MAIN COMPONENTS

The machine is composed of a series of main components that have the following functions (fig.1):

- A. **Motor:** supplies the drive power to the cutting means.
- B. **Front handgrip:** support handgrip located on the front of the chain saw. This should be grasped using the left hand.
- C. **Rear handgrip:** support handgrip located on the rear of the chain saw. This should be grasped using the right hand. This handgrip is fitted with the main switch controls.
- D. **Front hand guard:** protection device seated between the front handgrip and the toothed chain, to protect the hand against injuries should it slip off the handgrip. This guard is used as a device to trigger the chain brake.
- E. **Rear hand guard:** protection device seated in the lower right section of the rear handgrip, to protect the hand from the saw chain should it break or disconnect from the guide bar.
- F. **Guide bar:** supports and guides the toothed chain.
- G. **Toothed chain:** cutting element, consisting of drive links fitted with small blades called "teeth" and side connections held in place by rivets.
- H. **Chain restraint pin:** safety device that prevents uncontrolled movements of the toothed chain should it break or slacken.
- I. **Spiked bumper:** device installed opposite the guide bar assembly point acting as a pivot when it comes into contact with a tree or trunk.
- J. **Bar cover guard:** chain saw cover on the guide bar to be fitted during handling, transportation or storage of the machine.
- K. **Battery:** device that supplies electric current to the tool; its specifications and regulations for use are described in a specific manual.
- L. **Battery charger** (attachment on request, par. 16.2): device used to recharge the battery.
- M. **Torque wrench:** tool used to rotate screws, nuts and bolts, to tighten or loosen them.

### 4. ASSEMBLY

**⚠ The safety regulations to follow are described in chap. 2. Strictly comply with these instructions to avoid serious risks or hazards.**



For storage and transport purposes, some components of the machine may not be installed in the factory and have to be assembled after unpacking. Follow the instructions below.

**⚠ Unpacking and completing the assembly should be done on a flat and stable surface, with enough space for machine handling and its packaging, always making use of suitable equipment. Do not use the machine until all the indications provided in the "ASSEMBLY" section have been carried out.**

## 4.1 ASSEMBLY COMPONENTS

The packaging includes assembly components.

### 4.1.1 Unpacking

1. Cautiously open the packaging, paying attention not to lose components.
2. Consult the documentation in the box, including these instructions.
3. Remove all the unassembled parts from the box.
4. Remove the machine from the box.
5. Dispose of the box and packaging in compliance with local regulations.

### 4.2 ASSEMBLY OF THE GUIDE BAR AND TOOTHED CHAIN

**⚠ Always wear heavy-duty gloves when handling the bar and chain. Mount the bar and chain very carefully so as not to impair the safety and efficiency of the machine. If in doubt, contact your dealer.**

**⚠ Perform all operations after removing the battery.**

1. Using the supplied wrench, unscrew the nuts (Fig. 3.A) and remove the chain guard (Fig. 3.B), to access the drive pinion and bar seat.
2. Mount the bar (Fig. 4.A) by inserting the stud bolts (Fig. 4.B) in the groove (Fig. 4.C) and push it towards the back of the machine body.
3. Mount the chain around the drive pinion (Fig. 5.A) and along the bar guide, being careful to follow the sliding direction (Fig. 5.B).



Direction in which the chain runs

4. If the tip of the bar is equipped with a nose sprocket, make sure the drive links are correctly inserted in the sprocket rims (Fig. 6.A).

5. Check that chain tension adjuster pin (Fig. 5.C) is fitted properly in the hole on the bar; if it isn't, turn the chain tension adjuster screw (Fig. 5.D) using a screwdriver until the pin is completely inserted.
6. Replace the guard without fully tightening the nuts.
7. Turn the chain tension adjuster screw (Fig. 5.D) to achieve the desired tension (Fig. 7).
8. Raise the bar and tighten the guard nuts securely using the wrench (Fig. 8.A).

### 4.2.1 Checking the chain tension

Check the chain tension.

The tension is correct when the drive links do not slip out of the chain guides if you hold the chain in the middle of the bar (Fig. 7).

## 5. CONTROLS

### 5.1 SAFETY BUTTON (ACTIVATION / DEACTIVATION DEVICE)

Press this button to activate and deactivate the machine electric circuit (Fig. 9.A).



Light OFF: the electric circuit is completely deactivated.

Green light: the machine electric circuit is activated. The machine is ready for use.

Blinking red light: operating fault. See chapter 15. troubleshooting.

**IMPORTANT** Do not keep your finger on the button when moving the machine to avoid accidentally enabling the machine.

### 5.2 THROTTLE CONTROL LEVER

Used to start and regulate the chain speed (Fig. 10.A).

The throttle control lever (Fig. 10.A) can only be used if the throttle break lever is pressed simultaneously (Fig. 10.B).

The correct running speed will be achieved by pressing the throttle control lever (Fig. 10.A) as far as possible.

### 5.3 THROTTLE BRAKE BUTTON

The throttle brake button (Fig. 10.B) allows the throttle control lever to be used (Fig. 10.A).



## 5.4 CHAIN BRAKE

This is a safety braking system that blocks chain movement when kickback occurs during cutting. Kickbacks occur following an irregular contact of the tip of the bar, with a rapid upward movement of the bar that causes the hand to strike the front guard. It must be manually released to disengage the chain brake.



Chain brake engaged. This is achieved when the front hand guard is pushed all the way forward.



Chain brake disengaged. This is achieved when the front hand guard is pulled all the way back, towards the machine body, until it clicks into position.

**⚠ Do not use the machine if the chain brake does not function correctly and have it inspected by your dealer.**

## 6. USING THE MACHINE

**⚠ The safety regulations to follow are described in chap. 2. Strictly comply with these instructions to avoid serious risks or hazards.**

**IMPORTANT** For instructions regarding the motor and the battery (if supplied), read the relevant manuals.

### 6.1 PREPARATION

Before starting to work, it is necessary to carry out several checks and operations to ensure you can work efficiently and in maximum safety.

#### 6.1.1 Checking the battery

The machine is supplied without the battery. Purchase the battery with the capacity that most suits your operational requirements and fully charge it according to the instructions in the battery booklet. The list of approved batteries for this machine is found in the "Technical Data" table.

- Before each use:
  - check the battery charge status according to the instructions in the battery booklet.

## 6.1.2 Filling with chain lubrication oil

Fill with chain lubrication oil before using the machine. For oil filling methods and precautions (see paragraph 7.3).

### 6.1.3 Checking the chain tension

**⚠ Perform all operations with the motor off.**

Check the chain tension. The tension is correct when the drive links do not slip out of the chain guides if you hold the chain in the middle of the bar (Fig. 7).

To adjust the chain tension:

1. loosen the cover nuts, using the supplied wrench;
2. turn the chain tension adjuster screw (Fig. 5.D) to achieve the desired tension;



3. raise the bar and tighten the guard nuts securely using the wrench (Fig. 8.A).

**⚠ Never work with the chain loose, as it can be hazardous if the chain slips out of the bar guides.**

**IMPORTANT** During the first period of use (or after replacing the chain) it must be checked more frequently due to settling of the chain.

## 6.2 SAFETY CHECKS

Run the following safety checks and check that the results correspond to those outlined on the tables.

**⚠ Always carry out the safety checks before use.**

### 6.2.1 General safety check

Object	Result
Grip and guards	Clean, dry and fixed firmly to the machine
Screws on the machine and blade	Correctly tightened (not loose)
Cooling air ducts	Not clogged
Guide bar	Properly installed
Chain	Sharp, not damaged or worn, mounted and tensioned correctly.

Guards	Intact, undamaged.
Battery	No damage to the casing, no liquid leakage
Machine	No signs of damage or wear
Throttle control lever, safety button	The levers must move freely and not be forced.
Test driving	No abnormal vibrations. No abnormal sound

## 6.2.2 Machine operating test

Action	Result
Fit the battery inside its housing (par. 7.2.3). Press the safety button.	The green light must come on (electric circuit activated) and the chain must not move
Activate the throttle control lever. (without pressing the throttle lock button)	The throttle control lever remains blocked.
Press the throttle lock button and throttle control lever.	The levers must move freely and not be forced. The chain moves.
Release the throttle control lever or press the safety button.	The lever automatically and rapidly returns to the idle position. The chain should stop.
<b>CHECKING THE CHAIN BRAKE</b> 1. Start the machine (par. 6.3) 2. Grasp the handgrips firmly with both hands. 3. Use the throttle lever to keep the chain moving, push the front hand guard forwards using the back of your left hand (par. 5.4).	3. The chain must stop moving immediately.  When the chain has stopped, immediately release the throttle control lever and disengage the chain brake (par. 5.4).

 **If any of the results fails to match the indications provided in**

***the tables, do not use the machine!  
Contact a service centre to have it checked and repaired if necessary.***

## 6.3 STARTUP

1. Remove the protective bar cover (fig. 1.J).
2. Make sure the bar and the chain are not touching the ground or any other object.
3. Fit the battery inside its housing correctly (par. 7.2.3).
4. Press the safety button (green light) (fig. 9.A)
5. Press the throttle lock button (fig. 10.B) and throttle control lever. (fig. 10.B).

## 6.4 OPERATION

Before felling or delimiting for the first time, make sure:

- you have been specifically trained to use this type of equipment;
- you have carefully read the safety regulations and user instructions contained in this manual;
- you practise first on logs on the ground or attached to trestles, in order to get familiar with the machine and the most suitable cutting techniques.

To operate with the machine proceed as described below:

- Always disengage the chain brake, pulling the lever towards you before using the throttle.
- The machine must always be firmly held in both hands, with the left hand on the front handgrip and the right hand on the rear handgrip, even if the operator is left-handed.

 **Stop the machine immediately if the chain stops during sawing.**

**NOTE** *During use, the battery is protected against total drainage with a protective device that switches off the machine and stops it from working.*

### 6.4.1 Checks to be conducted whilst working

#### 6.4.1.a Checking the chain tension

The chain tends to stretch gradually as you work, so you need to check its tension frequently (par. 6.1.3).

#### 6.4.1.b Checking the oil delivery

**IMPORTANT** *Never use the machine without lubrication!*

**⚠ Make sure the bar and the chain are in place when you check the oil delivery.**

Start the motor (par. 6.3), keep it running at medium power and check if the chain oil is delivered as shown in (fig. 11).

## 6.4.2 Work techniques

### 6.4.2.a Delimiting a tree

**⚠ Make sure there is nothing or nobody in the area where the branches will fall.**

1. Stand opposite the branch you want to cut.
2. Start cutting lower branches followed by the higher ones.
3. Cut downwards to prevent the bar from getting jammed (fig. 12).

### 6.4.2.b Felling a tree

**IMPORTANT** *Where two or more persons are working together on felling and bucking operations, such operations must be performed in separate areas at a distance from each other of at least 2.5 times the height of the tree being felled. Do not fell trees if this involves risks of injuring people, coming into contact with a power line or causing any form of damage. If the tree should come into contact with a main power line, report the incident immediately to the network provider.*

Before commencing the felling operations:

- it is necessary to evaluate the natural inclination of the tree, the part where the branches are larger and the wind direction, to assess how the tree will actually fall;
- remove any dirt, stones, pieces of bark, nails, metal staples and wire;
- clear the area around the tree and find a stable place to stand;
- plan obstacle-free escape routes at a 45° angle back and away from the direction of the fall (Fig. 13) which allow the operator to escape to a safe zone, about 2.5 times the height of the tree being felled;
- Stand uphill of the land onto which the tree will probably roll or fall over after felling.

#### • Performing a face notch

1. Point towards a target on the ground in the direction in which you intend to fell the tree.
2. Stand to the right of the tree, behind the chain saw.

3. Saw a horizontal face notch to 1/3 of the diameter of the tree, perpendicular to the direction in which it will fall (Fig. 14.A).

#### • Felling back cut

1. Perform the felling back cut at least 5 cm higher than the horizontal face notch (Fig. 15.B).
2. Perform the felling back cut leaving sufficient wood to act as a "hinge" (Fig. 15.C). The hinge wood will prevent the tree from twisting and falling in the wrong direction. Do not cut through the hinge.
3. Reduce the thickness of this hinge without pulling out the bar, until the tree falls.
4. If there is any risk of the tree not falling in the desired direction, or that it might lose its balance moving backwards and bending the toothed chain, stop cutting before completing the felling back cut and use some wooden, plastic or aluminium wedges (Fig. 16.D) to open the cut. Force the tree to fall along the desired line by hitting the wedges with a sledge hammer.
5. When the tree starts to fall, it is necessary to withdraw the machine from the cut, switch it off (par. 6.5), lie it on the ground and take the foreseen exit route. Beware of falling branches and pay attention where you put your feet.

### 6.4.2.c Limbing tree branches

Limbing means removing the branches from a felled tree.

**⚠ Be careful of where the branches are lying on the ground, the risk of them being under tension, the direction the branch may go during cutting and the risk of the tree being unstable after the branch has been cut.**

When limbing, it is necessary to leave the lower, larger branches to support the trunk on the ground. Remove the small branches with a single cut (Fig. 17.A).

It is recommended to cut the tensioned branches working from the bottom upwards to prevent the chain saw from bending (Fig. 17.B).

### 6.4.2.d Bucking the trunk

Bucking means sawing a tree trunk into logs.

It is essential to make sure your feet are positioned firmly on the ground, and your weight is distributed equally on both feet. If possible,

it is recommended to raise and support the trunk using branches, logs or blocks of wood.

It is easier to saw a log using the spiked bumper (Fig. 1.):

1. Plant the spiked bumper into the log and use it as a pivot. Cut with an arched motion to make the bar penetrate the wood (Fig. 18);
2. Repeat several times if necessary, changing the point where you plant the spiked bumper.

#### • **Trunk lying on the ground**

When the entire trunk is lying on the ground, it is bucked from the top down (overbucking) (Fig. 19.A).

- Cut up to half the diameter, roll the log over and finishing sawing on the other side.

#### • **Trunk resting on one end only**

When the trunk is resting on one end only:

- saw through 1/3 of the diameter from the bottom up (underbucking) (Fig. 20.A);
- then perform the final cut, overbucking to reach the first cut (Fig. 20.B).

#### • **Trunk resting on both ends**

When the trunk is resting on both ends:

- saw through 1/3 of the diameter from the top down (overbucking) (Fig. 21.A);
- then perform the final cut, underbucking the lower 2/3 to reach the first cut (Fig. 21.B).

#### • **Sloping trunk**

Always stand uphill when bucking a sloping trunk (Fig. 22).

During the operation, to maintain control when the cut is almost complete, reduce the bucking pressure without removing your hands from the machine handgrips. Take all necessary precautions to prevent the machine from coming into contact with the ground.

## 6.5 STOP

To stop the machine:

- Release the throttle control lever (Fig. 10.A).
- Press the safety button and turn off the electrical circuit (light off) (Fig. 9.A).

**⚠ After releasing the throttle control it takes a few seconds for the toothed chain to stop.**

Always stop the machine:

- when moving between work areas.

**⚠ Do not keep your finger on the safety button when moving the machine to avoid accidentally enabling the machine.**

## 6.6 AFTER OPERATION

1. Remove the battery from its housing and recharge it (par. 7.2.2).
2. Mount the bar cover.
3. Allow the motor to cool before storing in an enclosed space.
4. Loosen the bar fastening nuts to reduce chain tension.
5. Carefully remove any dust and debris and remove all traces of sawdust or oil deposits from the chain. (par. 7.4).
6. Check there are no loose or damaged components. If necessary, replace the damaged components and tighten any screws and loose bolts.

**IMPORTANT** *Always remove the battery (par. 7.2.2) and fit the blade guard whenever the machine is unused or left unattended.*

## 7. ROUTINE MAINTENANCE

### 7.1 GENERAL INFORMATION

**⚠ The safety regulations to follow are described in chap. 2. Strictly comply with these instructions to avoid serious risks or hazards.**

**⚠ Before conducting any inspections, cleaning or maintenance/adjustment interventions on the machine:**

- **Stop the machine;**
- **Wait until the chain is stationary;**
- **Remove the battery from its housing;**
- **Apply the bar cover, except when working directly on the chain or bar itself.**
- **Wait until the motor is sufficiently cold;**
- **Read the relevant instructions;**
- **Use suitable clothing, protective gloves and goggles;**

- The frequency and types of maintenance are summarised in the "Maintenance Table". The table will help you maintain your machine's safety and performance. It summarises the main interventions to be made and the frequency applicable to each of them. Carry out the relevant intervention according to the first deadline.
- The use of non-genuine and/or incorrectly assembled spare parts and attachments could adversely affect machine operation and safety. The manufacturer shall decline all liability in the event of injuries or damages caused by such parts.

- Genuine spare parts are supplied by authorized assistance workshops and dealers.

**IMPORTANT** Any maintenance and adjustment operations not described in this manual must be carried out by your dealer or Authorised Service Centre.

## 7.2 BATTERY

### 7.2.1 Battery power reserve

Battery autonomy is mainly influenced by:

- environmental factors, that cause higher energy requirements:
  - cutting trees and branches that are too thick;
- operator behaviour that should be avoided:
  - switching the machine on and off frequently whilst working;
  - adopting a cutting technique that is unsuitable for the work to be performed (par. 6.4.2);

To optimise battery power reserve it is always recommended to:

- cut wood when dry;
- use the most appropriate technique for the work to be performed

If the need arises to use the machine for sessions which exceed the capability of a standard battery, it is possible to:

- purchase a second standard battery to immediately replace the discharged battery, without compromising the continuity of operations;

### 7.2.2 Battery removal and recharging

1. Press the retainer tab in the battery compartment (Fig. 9.B) and remove the battery (Fig. 9.C);
2. Fit the battery (Fig. 23.A) in the battery charger housing (Fig. 23.B);
3. Connect the battery charger (Fig. 23.B) to a power socket with the voltage indicated on the rating plate.
4. Fully charge the battery according to the instructions in the battery/ battery charger booklet.

**NOTE** The battery is equipped with a guard that inhibits recharging if the environmental temperature is not between 0 and +45 °C.

**NOTE** The battery can be recharged at any time, even partially, with no risk of damaging it.

### 7.2.3 Refitting the battery on the machine

When recharging is completed:

1. Remove the battery (Fig. 24.A) from the housing in the battery charger (do not keep recharging when recharging is completed);
2. Disconnect the battery charger (Fig. 24.B) from the mains;
3. Fit the battery (Fig. 9.C) in its housing pressing down until you hear it click firmly into position and check the electrical contact;

## 7.3 TOPPING UP THE CHAIN OIL TANK

**NOTE** The following symbol is found on the chain oil tank cap (fig. 25.A) :



Chain oil tank

**IMPORTANT** Only use chain saw oil or adhesive oil for chain saws. Do not use oil containing impurities so as not to block the oil filter and to prevent irreparable damage to the oil pump.

It is essential that you use good quality oil to lubricate the cutting parts effectively. Used or poor quality oil does not guarantee good lubrication and reduces the working life of the chain and bar.

**IMPORTANT** Never run the chain without sufficient oil, this could damage the saw and compromise safety.

Check the amount of oil in the chain saw by checking the oil level indicator (Fig. 25.B).

If the oil level is low, top up as follows:

1. Unscrew and remove the cap (Fig. 25.A) from the oil tank.
2. Pour oil in the tank and monitor the level on the indicator (Fig. 25.B).
3. Make sure no impurities penetrate the oil tank when filling.
4. Screw on the oil cap and tighten it.

## 7.4 CLEANING

### 7.4.1 Cleaning the machine and the motor

After every work session, clean the machine thoroughly to remove all dust and debris.

- To reduce fire hazards, keep the machine and, in particular, the motor free of leaves, branches or excessive grease.

- Always clean the machine after use with a damp cloth dipped in neutral detergent.
- Remove all traces of humidity using a soft damp cloth. Humidity can generate risks of electric shocks.
- Do not use aggressive detergents or solvents to clean the plastic parts or handgrips.
- Do not spray water onto the motor and electrical components and prevent them from getting wet.
- To avoid overheating and damage to the motor or the battery, always keep the cooling air vents clean and free of debris.

#### 7.4.2 Cleaning the chain

Remove any traces of sawdust or oil deposits from the chain every time it is used.

If there is excessive dirt or resin build-up, disassemble the chain and place it in a container with a specific cleanser for a few hours. Then rinse it with clean water and treat it with a suitable anticorrosive spray, before reassembling on the machine.

#### 7.5 CHAIN CATCHER

Check chain stop pin conditions before each use (Fig. 1.H) and repair in the event of damages.

#### 7.6 NUTS AND BOLTS

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Check regularly that the handles are fixed firmly.

### 8. EXTRAORDINARY MAINTENANCE

#### 8.1 MACHINE AND BAR LUBRICATION HOLES

Periodically remove the chain guard (par. 4.2), remove the bar and check that machine lubrication holes (Fig. 26.A) and guide bar (Fig. 26.B) are not clogged.

#### 8.2 CHAIN DRIVE SPROCKET

Regularly check the condition of the sprocket with your local dealer and replace it when wear exceeds the accepted limits.

**⚠ Do not mount a new chain with a worn sprocket or vice-versa.**

#### 8.3 MAINTENANCE OF THE TOOTHED CHAIN

**⚠ To ensure that the chain saw works safely and efficiently, it is essential that the chain is well-sharpened.**

Chain sharpening is necessary when:

- The sawdust looks like dust.
- Cutting becomes more difficult.
- The cut is not straight.
- Vibrations increase.

**⚠ Kickback may occur if the chain is not sufficiently sharpened**

**IMPORTANT** *It is recommended to have a specialised centre sharpen the chain using the right tools to ensure minimum removal of material and even sharpness on all the cutting edges.*

#### 8.3.1 Replacing the toothed chain

Replace the chain whenever:

- the length of the cutting edges reduces to 5 mm or less;
- there is too much play between the links and the rivets.
- the cutting speed is too slow and the repeated sharpening does not improve the cutting speed. The chain is worn.

**IMPORTANT** *After replacing the chain, its tension level must be checked more frequently due to settling of the chain.*

#### 8.4 GUIDE BAR MAINTENANCE

**NOTE** *Any work on the guide bar requires specific experience and special tools in order to achieve top workmanship standards; for safety purposes, we recommend you contact your dealer to ensure work is done correctly.*

To avoid asymmetrical wear on the bar, make sure it is turned over periodically.

To keep the bar in perfect working order, proceed as follows:

1. grease the bearings on the nose sprocket (if present) with the syringe (not included).
2. clean the bar groove with the scraper (not included) (Fig. 27.A);
3. clean the lubrication holes (Fig. 27.B);
4. with a flat file, remove burr from the edges and level off the guides.

### 8.4.1 Replacing the bar

Replace the bar whenever:

- the groove is not as deep as the height of the drive links (which must never touch the bottom);
- the inside of the guide is worn enough to make the chain lean to one side.

## 9. STORING THE MACHINE

**IMPORTANT** *The safety regulations to follow for putting into storage are described in paragraph 2.4. Strictly comply with these instructions to avoid serious risks or hazards.*

### 9.1 STORING THE MACHINE

When the machine is to be stored away:

1. Remove the battery from its housing and recharge it;
2. Mount the bar cover.
3. Wait until the motor is sufficiently cold;
4. Clean (par. 7.4).
5. Check there are no loose or damaged components. If necessary, replace the damaged components and tighten any screws and loose bolts or contact the authorised service centre.
6. Store the machine:
  - in a dry place
  - protected from inclement weather
  - in a place where children cannot get to it
  - making sure that keys or tools used for maintenance are removed.

### 9.2 STORING THE BATTERY

The battery must be kept in a cool, shaded place without humidity.

**NOTE** *If unused for any length of time, recharge the battery every two months to prolong its working life.*

## 10. HANDLING AND TRANSPORTATION

Whenever the machine is to be handled, raised, transported or tilted you must:

- Stop the machine;
- Wait until the chain is stationary;
- Remove the battery from its housing and recharge it;
- Mount the bar cover;
- Wait until the motor is sufficiently cold;
- Wear heavy work gloves;

- Only hold the machine using the handgrips and position the bar in the opposite direction to that used during operation;

When transporting the machine on a vehicle, always:

- fasten the machine securely with cables or chains;
- position it so that it can not cause a hazard for anybody.

## 11. ASSISTANCE AND REPAIRS

This manual provides all the necessary information to run the machine and for correct basic maintenance operations which can be performed by the user. Any regulations and maintenance operations not described herein must be carried out by your Dealer or Authorized Service Centre, which have the necessary knowledge and equipment to ensure that the work is carried out correctly, maintaining the correct degree of safety and the original operating conditions of the machine. Any operations performed in unauthorized centres or by unqualified persons will totally invalidate the Warranty and all obligations and responsibilities of the Manufacturer.

- Only authorized service workshops can carry out guaranteed repairs and maintenance.
- The authorized service workshops only use genuine spare parts. Genuine spare parts and accessories have been designed specifically for machines.
- Non-genuine spare parts and accessories are not approved. Use of non-genuine spare parts and accessories cause the warranty to expire.
- It is advisable to send your machine once a year to an authorized service workshop for servicing, assistance and safety device inspection.

## 12. WARRANTY COVERAGE

The warranty covers all material and manufacturing defects. The user must follow all the instructions provided in the accompanying documentation.

The warranty does not cover damages caused by:

- Failure to become familiar with the documentation accompanying the machine.
- Carelessness.
- Incorrect or prohibited use or assembly.
- Use of non-genuine spare parts.
- Use of accessories not supplied or approved by the manufacturer.

The warranty does not cover:



- Normal wear and tear of consumables, such as cutting means, safety bolts.
- Normal wear and tear.



The purchaser is protected by his or her own national legislation. The purchaser's rights under the national laws or his or her own country are not in any way restricted by this warranty.

### 13. MAINTENANCE TABLE

Task	Frequency		Paragraph
	First time	An then after	
<b>MACHINE</b>			
Check all fasteners	-	Before each use	7.6
Safety checks/check controls	-	Before each use	6.2
Check the chain catcher	-	Before each use	7.5
General cleaning and inspection	-	After each use	7.4
Cleaning the chain	-	After each use	7.4.2
Check the machine and bar lubrication holes	-	Before each use	8.1
Check the chain drive sprocket	-	Once a month	8.2 *
Chain maintenance	-	-	8.3, 14
Bar maintenance	-	-	8.4
Topping up the chain oil level	-	Before each use	7.3

\* Interventions which must be carried out by your dealer or an authorised assistance centre

### 14. CHAIN MAINTENANCE TABLE

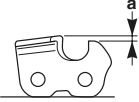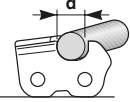Chain pitch		Limiter tooth level (a)		File diameter (d)	
					
inches	mm	inches	mm	inches	mm
<b>3/8 Mini</b>	9.32	0.018	0.45	5/32	4.0
<b>0.325</b>	8.25	0.026	0.65	3/16	4.8
<b>3/8</b>	9.32	0.026	0.65	13/64	5.2
<b>0.404</b>	10.26	0.031	0.80	7/32	5.6

**⚠ The table gives the sharpening data for different types of chains, but this does not mean you can use chains other than those approved and listed in the "Correct bar and chain combination table".**

### 15. PROBLEM IDENTIFICATION

PROBLEM	PROBABLE CAUSE	REMEDY
1. When the safety button is pressed, the green light does not come on	Battery is not inserted or is inserted incorrectly	Make sure that the battery is inserted correctly (par. 7.2.3)



2. When the safety button is pressed, the green light does not come on and the block release button flashes	Low battery	Check the battery status and recharge if necessary (par. 7.2.2).
3. The motor shuts down whilst working	Battery is not inserted correctly	Make sure that the battery is inserted correctly (par. 7.2.3).
4. The motor stops while working and the safety button flashes	Low battery	Check the battery status and recharge if necessary (par. 7.2.2).
5. With the throttle lock button and throttle control lever on, the chain does not turn	Excessive chain tensioning	Re-tension the chain (par. 6.1.3).
	Bar and chain problems	Check that the chain runs freely and the bar guides are not deformed (par. 8.3, 8,4).
	Machine damaged.	Do not use the machine. Immediately turn off the machine remove the battery and Contact a Licensed Service Centre.
6. The chain heats and emits smoke on the end part of the bar.	Excessive chain tensioning	Re-tension the chain (par. 6.1.3).
	Lubricant oil tank empty.	Fill the lubricant oil tank (par. 7.3).
7. The motor runs irregularly and lacks power when revved	Bar and chain problems	Check that the chain runs freely and the bar guides are not deformed.
8. Excessive noise and/or vibration is experienced whilst working	Loose or damaged parts	Turn off the machine remove the battery and: <ul style="list-style-type: none"> <li>- inspect for damage;</li> <li>- check for and tighten any loose parts;</li> <li>- have any damaged parts replaced or repaired with parts having equivalent specifications.</li> </ul>
9. Battery power reserve is low	Severe working conditions requiring greater current absorption	Optimise operations (par. 7.2.1)
	Battery is insufficient for operating requirements	Use a second battery or an extended battery (par. 7.2.1)
	Decrease in battery capacity	Purchase a new battery

10. The battery charger is not recharging the battery	Battery is not correctly inserted in the battery charger	Check it is correctly inserted (par. 7.2.2)
	Unsuitable environmental conditions	Recharge the battery in places with suitable temperatures (see battery/battery charger instruction manual)
	Dirty contacts	Clean the contacts
	The battery charger is not energised	Check it is plugged in and the power socket is energised
	Faulty battery charger	Replace with an original spare part
		If the problem persists, refer to the battery/ battery charger manual

If problems persist after having performed the above operations, contact your dealer.

## 16. ATTACHMENTS ON REQUEST

### 16.1 BATTERIES

Different capacity batteries are available to suit specific operating requirements (Fig. 28). The list of approved batteries for this machine is found in the "Technical Data" table.

### 16.2 BATTERY CHARGER

Device used to recharge the battery (Fig. 29).

### 16.3 BATTERY HOLDER HARNESS

This accessory is designed and built to house the battery in a way that eases the use of the product, reducing the overall weight of the hand-held machine (Fig. 30).

### 16.4 BARS AND CHAINS

The "Correct bar and chain combination table" contains a list of all possible combinations between bar and chain, indicating those which may be used on each machine, marked with the symbol "✓".

The same table also provides the specification data for all chains and bars approved for use on each machine.

**⚠ Only use the replacement bars and chains listed in the table. The use of unapproved combinations may be hazardous and cause serious injuries to operators and damage the machine.**

**⚠ In consideration that the selection, application and use of the bar and chain are actions made solely by the user, at his own discretion, the latter assumes responsibility for damages of any kind arising from such actions. When in doubt or if lacking knowledge of the specificity of each bar or chain, contact your dealer or specialised gardening centre.**

# DICHIARAZIONE CE DI CONFORMITÀ (Istruzioni Originali)

(Direttiva Macchine 2006/42/CE, Allegato II, parte A)

1. **La Società:** STIGA SpA – Via del Lavoro, 6 – 31033 Castelfranco Veneto (TV) – Italy
2. Dichiaro sotto la propria responsabilità, che la macchina: Motosega a catena alimentata a batteria portatile, abbattimento / sezionamento / sramatura di alberi

a) Tipo / Modello Base

CS 80 Li

b) Mese/Anno di costruzione

c) Matricola

d) Motore

a batteria

3. É conforme alle specifiche delle direttive:

- MD: 2006/42/EC
- e) Ente Certificatore

N° 0905 – Intertek Deutschland GmbH  
Stangenstr. 1, 70771 Leinfelden-Echterdingen – Germany

f) Esame CE del tipo:

No. 17SHW0215-01

- OND: 2000/14/EC, ANNEX V  
D. Lsg. 262/2002, ANNEX IV (Italy)
- EMCD: 2014/30/EU
- RoHS II: 2011/65/EU

4. Riferimento alle Norme armonizzate:

EN 60745-1:2009/A11:2010  
EN 60745-2-13:2009/A1:2010

EN 55014-1:2006/A1:2009/A2:2011  
EN 55014-2:1997/A1:2001/A2:2008  
EN 50581:2012

- g) Livello di potenza sonora misurato
- h) Livello di potenza sonora garantito
- k) Potenza installata

96,9

99

/

dB(A)

dB(A)


kW

m) Persona autorizzata a costituire il Fascicolo Tecnico:

STIGA SpA  
Via del Lavoro, 6  
31033 Castelfranco Veneto (TV) - Italia

n) Castelfranco V.to, 19.06.2017

Vice Presidente Quality & Customer Service  
Ing. Raimondo Hippoliti

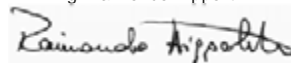




© by STIGA SpA

• Soggetto a modifiche senza preavviso • Подлежи на промени без предупреждение • Moguće su promjene bez najave • Možnost změn bez předehlého upozornění • Ret til ændringer forbeholdes • Kann ohne Vorankündigung geändert werden • Υπόκειται σε αλλαγές χωρίς προειδοποίηση • Subject to modifications without notice • Sujeto a modificaciones sin previo aviso • Võimalikud muudatused ilma ette teatamata • Voidaan tehdä muutoksia ilman ennakkoilmoitusta • Sujet à des modifications sans aucun préavis • Podložno promjenama bez prethodne obavijesti • Előzetes értesítés nélkül módosítható • Objekto pakeitimai be perspėjimo • Var tikt mainīts bez iepriekšēja brīdinājuma • Подлежи на промени без претходно известување • Kan zonder kennisgeving wijzigingen ondergaan • Kan endres uten forvarsel • Poddawany modyfikacjom bez awizowania • Sujeito a alterações sem aviso prévio • Poate fi modificat, fără preaviz • Может быть изменено без преомления • Možnosť zmien bez predošlého upozornenia • Lahko pride do sprememb brez predhodnega obvestila • Podložno izmenama bez upozorenja • Kan utsättas för modifieringar utan att detta meddelas • Önceden haber verilmeksizin değıştirilebilir



.....	 LWA ..... dB CE
Type: .....	
..... -s/n ..... -Art.N .....	
.....	

**STIGA SpA**

Via del Lavoro, 6

31033 Castelfranco Veneto (TV) ITALY