

# **E-VOL120 Volume Control**



### **Introduction**

The APart E-VOL120 is a 100 Volt volume control that can handle up to 120 watt of power. It is very durable due to the step by step attenuation in 11 steps + zero position.

The volume control is equipped with a 24V priority relais. This way a microphone call will always come through at

maximum volume, no matter what position the volume control is in.

The E-VOL120 is build on a universal chassis that can easily be integrated with Gira, Jung and Euro. Different cover plates are available for the UK market.


## Please avoid

- Please avoid any power overload, measure your speakerlines before connecting.
- In reality, a lot of speakers have much higher load than the value listed in their specification. Our APART speakers are especially engineered within their specification, so no risk for overload when using them !
- Please never apply clipped or overloaded levels from your amplifier to this volume control. It may cause overheating and damage ! Our APART amplifiers are automatically limited to avoid such distorted signals !

# Tech. Specifications

- Type : Euro
- Handling power : 120 watt
- Voltage : 100 Volt
  24V priority : Yes (20mA)
- Attenuation steps : 11 + "0" Build-on box : E-MODON
- Dimensions (H x W x D) : 80 x 80 x 70 mm
- Weight : 0.3 Kg
- Colour : white

# **2-WIRE CONNECTION**

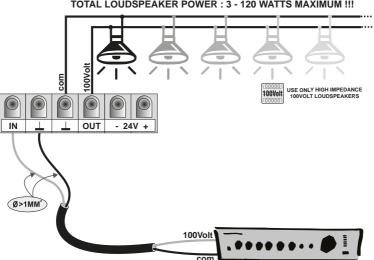



https://tm.by Интернет-магазин TM.by

#### TOTAL LOUDSPEAKER POWER : 3 - 120 WATTS MAXIMUM !!!




# E-VOL120 Volume Control



#### **4-WIRE CONNECTION WITH PRIORITY**

TOTAL LOUDSPEAKER POWER : 3 - 120 WATTS MAXIMUM !!!

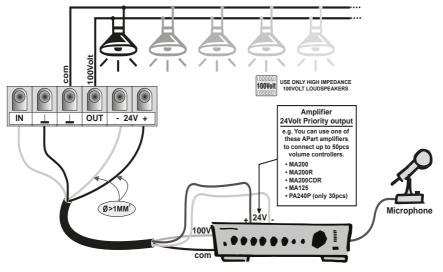

What does a priority system do ?

When the volume controller is turned to 0 there is no background-music. (e.g. meeting room, office)

At this moment if there is a microphone call the information is lost.

With the priority system connected, the volume controller is set to maximum volume during the microphone call. In this way there is no information lost.

To be able to use a priority system you need the following components :

- Volume controller with priority relay
- Amplifier with 24Volts priority output contact (24Volts / 1A : you can connect up to 50pcs of volume controllers)
- 4-wire cable connection
- Microphone (MICPAT-D)

## **Mounting**

- Keep the inside of the wallbox clear of all wires, this to prevent short circuits between the wires in the wallbox and the printed circuit of the volume controller.
- Don't use solid copper conductor wires, the screw connectors on the printed circuit board of the volume controller are designed for flexible wires.
- · Don't connect more then one wire in each onboard screw connectors of the volume controller.
- Don't use force when mounting the volume controller in a wallbox.

